

Godox VC26

Godox VC26 USB Battery Charger Instruction Manual

For Godox V1 Series Round Head Flash Batteries

1. INTRODUCTION

The Godox VC26 USB Battery Charger is specifically designed for charging Godox V1 series round head flash batteries (V1S, V1C, V1N, V1F, V1O, V1P). This compact and lightweight charger provides a convenient and efficient way to power your flash batteries. Please read this manual thoroughly before use to ensure proper operation and safety.

2. SAFETY INFORMATION

To prevent damage to the product or injury to yourself or others, please observe the following safety precautions:

- The charger may become **hot during charging**. This is normal. Ensure adequate ventilation.
- Do not **short circuit** the battery terminals or the charger.
- Do not **disassemble** the charger. Unauthorized modifications can lead to malfunction or electric shock.
- Do not expose the charger to **water or fire**. Keep it dry and away from flammable materials.
- Only charge batteries specified for this charger. Using incompatible batteries may cause damage or hazards.
- Keep out of reach of children.



Image: Bottom of the Godox VC26 charger, displaying input (DC 5V 2.0A) and output (DC 8.4V 0.9A) specifications, along with important safety warnings regarding heat, short-circuiting, disassembly, and exposure to water or fire.

3. PRODUCT OVERVIEW

The Godox VC26 charger features a simple and functional design for ease of use.

- **Indicator Light:** Displays the charging status.
- **Type-C Interface:** For connecting a USB charging cable (not included) to a power source.
- **Battery Slot:** Designed to securely hold Godox V1 series flash batteries for charging.



Image: A close-up view of the Godox VC26 USB Battery Charger, highlighting its key components: the indicator light on the front and the Type-C USB interface on the side.

4. SETUP

Follow these steps to set up your Godox VC26 charger:

1. Connect a USB Type-C charging cable (not included) to the Type-C interface on the charger.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., a USB wall adapter, power bank, or computer USB port) with a DC 5V 2.0A output.
3. Carefully insert your Godox V1 series flash battery into the battery slot of the charger, ensuring proper alignment of the contacts.



Image: A Godox V1 series flash battery being inserted into the VC26 charger, demonstrating the correct orientation for charging.

5. OPERATING INSTRUCTIONS

Once the charger is set up and a battery is inserted, the charging process will begin automatically.

- The indicator light will illuminate to show the charging status. Typically, a **red light** indicates that the battery is currently charging.
- When the battery is fully charged, the indicator light will turn **green**.
- Once charging is complete, disconnect the charger from the power source and remove the battery.



*Battery charger for charging Godox
V1S, V1C, V1N, V1F, V1O, V1P round head flash battery.*



Image: The Godox VC26 charger connected to a USB-C cable with a Godox V1 series battery inserted, illustrating its primary function of charging V1S, V1C, V1N, V1F, V1O, V1P round head flash batteries.



Image: The Godox VC26 charger with a Godox V1 series battery fully inserted and the indicator light showing green, signifying that the battery is fully charged.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your charger:

- Keep the charger clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid dropping the charger or subjecting it to strong impacts.
- Store the charger in a cool, dry place when not in use.
- Do not use harsh chemicals or abrasive cleaners on the charger.

7. TROUBLESHOOTING

If you encounter issues with your Godox VC26 charger, refer to the following common solutions:

- **Charger not working / Indicator light off:**
 - Ensure the USB cable is securely connected to both the charger and the power source.
 - Verify that the power source is active and providing sufficient power (DC 5V 2.0A).
 - Check if the battery is correctly inserted into the charger with contacts aligned.
 - Try using a different USB cable or power adapter.
- **Battery not charging / Indicator light remains red:**
 - Confirm that the battery is a compatible Godox V1 series flash battery.
 - Ensure the battery contacts are clean and free from obstruction.
 - The battery might be deeply discharged; allow more time for charging.
 - If the issue persists, the battery or charger may be faulty.
- **Charger getting excessively hot:**
 - While some warmth is normal, excessive heat may indicate a problem. Disconnect immediately.
 - Ensure the charger is in a well-ventilated area.
 - Verify that the battery is compatible and not damaged.

8. SPECIFICATIONS

Feature	Specification
Model	VC26
Input	DC 5V 2.0A
Output	DC 8.4V 0.9A
Interface	Type-C USB
Compatible Batteries	Godox V1S, V1C, V1N, V1F, V1O, V1P Round Head Flash Batteries
Special Features	Lightweight design, Charging status indicator
Color	Black
Item Weight	18 grams
Compliant Specifications	CE

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Godox website. Specific warranty terms may vary by region and retailer.

