

[Manuals.plus](#) /

› [U-MAX](#) /

› U-MAX 7-Piece Outdoor Patio Furniture Set Instruction Manual

U-MAX 7-Piece Outdoor Patio Furniture Set (Model: Four-line Rattan)

U-MAX 7-Piece Outdoor Patio Furniture Set

INSTRUCTION MANUAL

1. Product Overview

The U-MAX 7-Piece Outdoor Patio Furniture Set is designed to enhance your outdoor living space with both style and comfort. This modular sectional sofa set, featuring durable PE rattan wicker and comfortable cushions, provides flexible seating arrangements for various outdoor environments such as patios, gardens, backyards, poolsides, and balconies.



Figure 1: Complete U-MAX 7-Piece Outdoor Patio Furniture Set in a typical outdoor setting.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- **Assembly Required:** This furniture set requires assembly. Ensure all parts are correctly aligned and tightened as per instructions to prevent injury or damage.
- **Stable Placement:** Always place the furniture on a flat, stable surface. Adjustable foot pads are provided to ensure stability on uneven ground.
- **Cushion Care:** While cushion covers are waterproof (not rain-proof), prolonged exposure to heavy rain is not recommended. Store cushions indoors or cover the set during inclement weather to prevent water damage and mold growth.
- **Weight Limit:** Do not exceed the recommended weight capacity for each seating unit.
- **Sharp Objects:** Avoid using sharp objects near the rattan or cushions to prevent punctures or tears.

3. Package Contents

Your U-MAX 7-Piece Outdoor Patio Furniture Set includes the following components, typically arriving in two separate boxes:

- 4 x Single Armless Chairs
- 2 x Corner Armchairs
- 1 x Coffee Table with Tempered Glass Top
- 6 x Seat & Back Cushions
- All necessary hardware and detailed instructions

4. Setup and Assembly

Assembly of the U-MAX patio furniture set is designed to be straightforward, typically requiring 40-60 minutes for one person. However, some users have reported that assembly can take longer due to unlabeled parts. It is recommended to have a second person for assistance and to ensure all parts are correctly identified before beginning.

1. **Unpack Components:** Carefully unpack all items from the boxes. Verify that all listed components and hardware are present.
2. **Identify Parts:** Lay out all pieces and identify them using the provided instruction manual. Pay close attention to the orientation of each piece.
3. **Assemble Frames:** Begin assembling the steel frames for each chair and the coffee table. Ensure all screws and screw holes align perfectly. Do not fully tighten screws until all pieces for a unit are loosely assembled.
4. **Attach Rattan Panels:** Secure the PE rattan wicker panels to the assembled frames.
5. **Final Tightening:** Once all units are assembled, go back and fully tighten all screws.
6. **Install Adjustable Foot Pads:** Attach the adjustable foot pads to the bottom of each furniture piece. Adjust them as needed to ensure stability on your chosen surface.
7. **Place Cushions:** The cushions come vacuum-sealed. Carefully open the vacuum-sealed bags and allow the cushions to inflate fully before placing them into their covers. This will make insertion easier.
8. **Secure Cushions:** Utilize the straps on the back of the cushions to secure them to the furniture frames, preventing them from shifting or blowing away in the wind.
9. **Position Sofa Fastener Clips:** Use the included sofa fastener clips to connect individual furniture pieces, creating your desired configuration and preventing them from separating.

Multiple Free Combinations as Your Will



Armless Sofa X 4



Corner Sofa X 2



Coffee Table X 1



Figure 2: Multiple free combinations of the U-MAX 7-Piece Outdoor Patio Furniture Set.



Figure 3: Key features including PE wicker, sofa fastener clips, and adjustable feet.

Your browser does not support the video tag.

Video 1: Overview of the U-MAX 7-Piece Outdoor Patio Furniture Set, showcasing its features and various configurations.

5. Operating and Usage

The modular design of this furniture set allows for endless configuration possibilities to suit your space and needs. You can arrange the pieces to form a large sectional, separate seating areas, or combine them in any way that fits your outdoor layout.

- **Flexible Arrangement:** Easily reconfigure the armless chairs and corner armchairs to create different seating layouts for entertaining or relaxation.
- **Comfort:** The 3.5-inch thick padded cushions provide optimal comfort for extended periods of relaxation.
- **Coffee Table:** The coffee table with its tempered glass top is ideal for holding drinks, snacks, or decorative items.

6. Maintenance and Care

Proper care will extend the life and appearance of your U-MAX patio furniture set.

- **Frame Cleaning:** Wipe the PE rattan wicker and powder-coated steel frame with a dry cloth to remove dust and debris. For tougher dirt, use a mild soap and water solution, then rinse thoroughly and dry completely.
- **Cushion Cleaning:** The UV-protected cushion covers are zippered and machine washable. Remove the foam inserts before washing the covers. Air dry the covers to prevent shrinking or damage.
- **Weather Protection:** Although cushions are waterproof (not rain-proof), prolonged exposure to direct sunlight and heavy rain can cause fading and wear. It is highly recommended to use a furniture cover or store cushions indoors when not in use or during adverse weather conditions.
- **Glass Top Care:** Clean the tempered glass top with a glass cleaner and a soft cloth.



Easy to Clean

Removable Cushion Cover with Zipper Design



Extra Comfort

High-Density Foam Upholstery:



Water Repellent

Polyester Cover

Figure 4: Cushion features: easy to clean with zipper design, high-density foam for extra comfort, and water repellent polyester cover.

Your browser does not support the video tag.

Video 2: Demonstrates the quality and comfort of the outdoor patio sectional set, including cushion details.

7. Troubleshooting

If you encounter any issues with your U-MAX patio furniture set, please refer to the following common solutions:

- **Missing or Defective Parts:** If any parts are missing or defective upon arrival, please contact U-MAX customer service immediately for support.
- **Assembly Difficulty:** Ensure you are following the instructions precisely. Double-check that all pieces are correctly oriented before tightening screws. If parts are not fitting, re-examine the diagrams.
- **Unstable Furniture:** Adjust the foot pads on each piece to level the furniture on uneven surfaces. Ensure all connection clips are securely fastened.
- **Cushion Fading:** Fading can occur over time with prolonged sun exposure. While cushions are UV-protected, consider using furniture covers or storing cushions when not in use to minimize fading.

8. Specifications

Attribute	Detail
-----------	--------

Brand	U-MAX
Model	Four-line Rattan (7 pcs)
Material	PE Rattan Wicker, Powder Coated Steel, Tempered Glass
Color	Brown Rattan & Beige Cushions
Seating Capacity	4-6 friends comfortably
Seating Height	17.3 inches
Cushion Thickness	3.5 inches
Product Care	Wipe with Dry Cloth (Frame), Machine Washable (Cushion Covers)
Assembly Time (Estimated)	40-60 minutes (by one person)

9. Warranty and Support

U-MAX is committed to providing high-quality products and customer satisfaction.

- **Quality Support:** We provide 6-month quality support for any shipping damage, defective, or missing parts.
- **Frame, Rattan, and Fabric Warranty:** A 1-year quality support is provided on the frame, rattan, and fabric components.
- **Customer Service:** For any inquiries, support, or warranty claims, please contact U-MAX customer service through the retailer's platform or visit the official U-MAX store online.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question