

[Manuals.plus](#) /

> [iball](#) /

> iBall Musi Play A1 Wireless Ultra-Portable Bluetooth Speaker User Manual

## iball Play A1

# iBall Musi Play A1 Wireless Ultra-Portable Bluetooth Speaker User Manual

Model: Play A1

## 1. INTRODUCTION

---

Thank you for purchasing the iBall Musi Play A1 Wireless Ultra-Portable Bluetooth Speaker. This compact and versatile speaker is designed to provide high-quality audio on the go. It features Bluetooth connectivity, FM radio, a Micro SD card slot for music playback, and a built-in microphone for hands-free calling. Please read this manual carefully to understand the product's features and ensure proper operation.



Image: iBall Musi Play A1 Wireless Ultra-Portable Bluetooth Speaker (Burnt Orange)

## 2. WHAT'S IN THE BOX

---

Upon unpacking, please ensure all the following items are present:

- Speaker – 1 N
- Charging Cable – 1 N
- User Manual – 1 N

## 3. PRODUCT OVERVIEW

---

### 3.1. Controls and Ports

Familiarize yourself with the speaker's controls and ports for easy operation.



Image: Control buttons on the iBall Musi Play A1 speaker.

- **Volume Down / Previous Track:** Press and hold for volume down, short press for previous track.
- **Play / Pause:** Press to play or pause music. Also used for answering/ending calls.
- **Volume Up / Next Track:** Press and hold for volume up, short press for next track.
- **Power On / Off / Mode:** Press and hold to power on/off. Short press to switch between Bluetooth, FM, and Micro SD modes.

### 3.2. Portability and Design

The iBall Musi Play A1 features an ultra-portable cube design, making it easy to carry and suitable for various environments.

## POCKET FRIENDLY SIZE

Hold it in your hand or pocket and play the tunes.

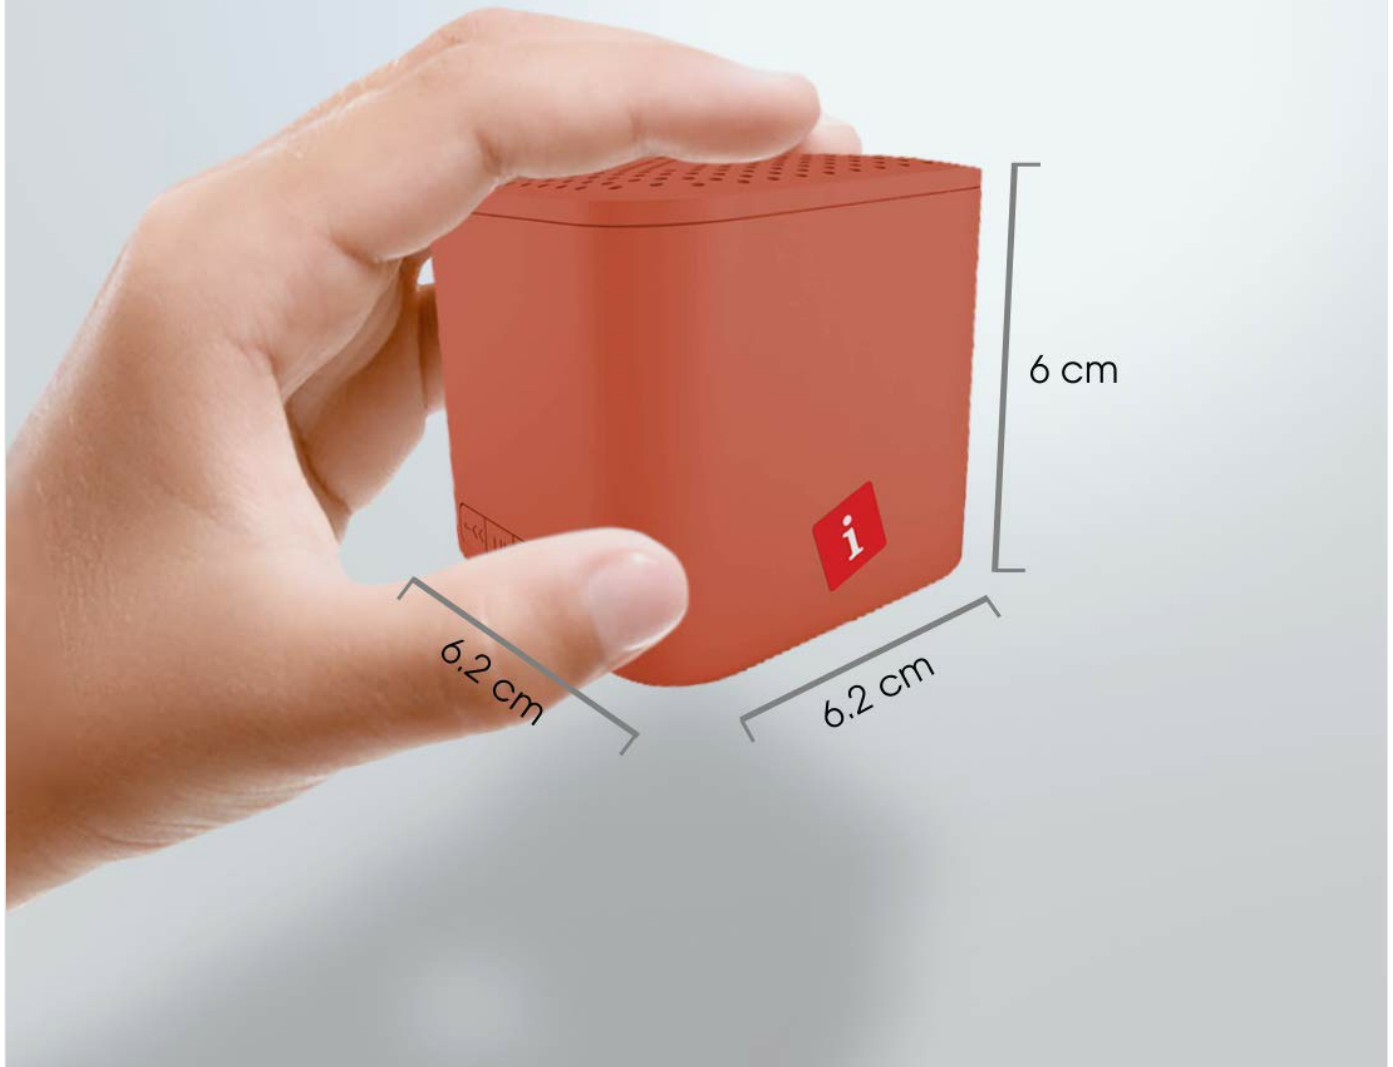


Image: The compact size of the iBall Musi Play A1 speaker, measuring approximately 6.2 cm on each side.

## 4. SETUP

---

### 4.1. Initial Charging

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and a USB power source (e.g., computer USB port, USB wall adapter). The charging time is approximately 1.5 hours.

### 4.2. Powering On/Off

To power on the speaker, press and hold the **Power On/Off/Mode** button until you hear an audible prompt. To power off, press and hold the same button again.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the **Power On/Off/Mode** button to cycle through modes until you hear the Bluetooth prompt.
2. On your smartphone or tablet, enable Bluetooth and search for available devices.
3. Select "iBall Musi Play A1" from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and you can start playing audio from your device.

## 5.2. FM Radio

1. Power on the speaker and short press the **Power On/Off/Mode** button to switch to FM Radio mode.
2. To auto-scan and save available FM stations, press and hold the **Play/Pause** button. The speaker will scan and store stations automatically.
3. Once scanning is complete, use the **Previous Track** and **Next Track** buttons to navigate between saved stations.

## 5.3. Micro SD Card Playback

1. Insert a Micro SD card (with MP3 audio files) into the Micro SD card slot on the speaker.
2. The speaker will automatically switch to Micro SD mode and begin playing music. If not, short press the **Power On/Off/Mode** button to select Micro SD mode.
3. Use the **Previous Track** and **Next Track** buttons to skip tracks, and the **Play/Pause** button to control playback.

## 5.4. Hands-free Calling

When connected to your smartphone via Bluetooth, the speaker's built-in microphone allows for hands-free calls.



## HANDS FREE CALLING

Answer the calls and talk effortlessly with the in-built mic.



## BUILT-IN FM RADIO

Play and switch your radio stations anytime anywhere.

Image: Hands-free calling feature with the iBall Musi Play A1 speaker.

- **Answer Call:** When an incoming call rings, short press the **Play/Pause** button to answer.
- **End Call:** During a call, short press the **Play/Pause** button to end the call.
- **Reject Call:** When an incoming call rings, press and hold the **Play/Pause** button to reject the call.

## 6. CHARGING

The speaker is equipped with a built-in rechargeable battery. To charge, connect the provided USB cable to the speaker's charging port and a standard USB power source. A full charge takes approximately 1.5 hours and provides up to 6 hours of playtime at mid-level volume.

## 7. MAINTENANCE

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Avoid dropping or subjecting the speaker to strong impacts.
- When not in use for extended periods, charge the speaker at least once every three months to maintain battery health.

## 8. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
Cannot pair via Bluetooth.	<p>Make sure the speaker is in Bluetooth pairing mode.</p> <p>Ensure Bluetooth is enabled on your device.</p> <p>Move the speaker closer to your device.</p> <p>Forget the device from your phone's Bluetooth settings and try pairing again.</p>
No sound.	<p>Check the volume level on both the speaker and your connected device.</p> <p>Ensure the speaker is correctly paired via Bluetooth or the Micro SD card is properly inserted.</p>
FM radio reception is poor.	<p>Move the speaker to a location with better signal reception.</p> <p>Perform an auto-scan again to find stronger stations.</p>

## 9. SPECIFICATIONS

Feature	Detail
Brand	iball
Model Name	Play A1
Speaker Maximum Output Power	3 Watts
Connectivity Technology	Bluetooth, Wireless
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Speaker Type	Outdoor
Product Features	Built-in Microphone
Colour (Current Model)	Burnt Orange
Is Waterproof	false (Not Water Resistant)
Control Method	Button
Battery Average Life	6 Hours
Battery Charge Time	1.5 Hours
Compatible Devices	Smartphone, Tablet
Power Source	Battery Powered
Number of Batteries	1 Lithium Polymer (included)

Feature	Detail
Item Weight	169 Grams
Country of Origin	China

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact iBall customer service. You can reach them via the toll-free number: 18002666409.

Manufacturer Address: 87, Mistry Industrial Complex, MIDC Cross Road "A" Andheri (E), Mumbai 400 093. Maharashtra India.