

CHiQ U43H7L

CHiQ U43H7L UHD 4K Smart TV User Manual

Brand: CHiQ | Model: U43H7L

INTRODUCTION

Welcome to the user manual for your new CHiQ U43H7L UHD 4K Smart TV. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your television. Please read this manual thoroughly before using the product to ensure proper and safe operation.

IMPORTANT SAFETY INFORMATION

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure proper power supply (220V).
- Do not place heavy objects on the power cord.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Before setting up your new television, please check that all items are present and accounted for:

- CHiQ U43H7L UHD 4K Smart TV
- Remote Control (requires 2 AAA batteries, included)
- Table Mount Stands
- Power Cord
- User Manual (this document)

SETUP GUIDE

1. Attaching the Stand

Carefully place the TV screen-down on a soft, flat surface to prevent damage. Attach the two table mount stands to the designated slots at the bottom of the TV using the provided screws. Ensure they are securely fastened.



Image: The CHiQ U43H7L Smart TV shown with its two table mount stands attached, ready for placement on a flat surface.

2. Connecting Devices

Connect your external devices such as set-top boxes, gaming consoles, or Blu-ray players to the TV's input ports. The TV features 3 HDMI ports and 2 USB ports.

Quad Core A55 64bit CPU



Image: A close-up view of the rear panel of the CHiQ U43H7L TV, highlighting the various input and output ports including HDMI, USB, and Ethernet.

For optimal picture quality, use HDMI connections for compatible devices. For USB devices, ensure they are compatible with the TV's USB ports.

3. Power Connection

Connect the power cord to the TV's power input and then plug it into a suitable wall outlet (220V).

4. Initial Power On and Network Setup

Press the power button on the remote control or the TV itself. Follow the on-screen instructions to complete the initial setup, including language selection, time zone, and network connection (Wi-Fi or Ethernet). A stable internet connection is required for Smart TV features.

OPERATING YOUR CHiQ SMART TV

Basic Controls

Use the remote control to navigate the TV's interface. Common buttons include:

- **Power:** Turns the TV on or off.
- **Volume +/-:** Adjusts the sound level.
- **Channel +/-:** Changes TV channels.
- **Input/Source:** Selects the input source (HDMI 1, HDMI 2, USB, etc.).
- **Navigation (Arrow keys, OK):** Moves through menus and confirms selections.
- **Back/Exit:** Returns to the previous screen or exits a menu.

Smart TV Features

Your CHiQ U43H7L Smart TV runs on Android and supports popular streaming services such as Netflix, Amazon Instant Video, and YouTube. Access these applications from the home screen or app menu.



Image: The CHiQ Smart TV's user interface displaying various application icons, including a prominent Netflix icon, indicating access to streaming services.

The TV is powered by a Quad Core A55 64-bit CPU, ensuring smooth performance for applications and content playback.



Image: A conceptual diagram illustrating the Quad Core A55 64-bit CPU, representing the processing power of the television.

Picture and Sound Settings

Navigate to the TV's settings menu to adjust picture modes (Standard, Dynamic, Movie, etc.), brightness, contrast, color, and sound settings (sound mode, equalizer). The TV supports HDR10 for enhanced contrast and color.

HDR10



Image: A split-screen comparison demonstrating the visual improvement with HDR10 technology, showing enhanced detail and color in a landscape scene.

4K UHD



Image: A magnified view of a floral image on a screen, illustrating the fine detail and clarity provided by 4K UHD resolution.

MAINTENANCE AND CARE

Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaning solution specifically designed for electronics, applied to the cloth, not directly to the screen.

General Care

Keep the TV free from dust by regularly wiping the cabinet. Ensure ventilation openings are not obstructed to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Check if the power cord is securely plugged into both the TV and the wall outlet. Ensure the outlet has power.
No Picture/Sound	Verify the correct input source is selected. Check cable connections to external devices.
Remote Control Not Working	Replace the batteries (2 AAA). Ensure there are no obstructions between the remote and the TV's IR sensor.

Problem	Possible Solution
Smart Features Not Working	Check your internet connection. Restart the TV and your router. Ensure apps are updated.

If the problem persists, please contact customer support.

TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the CHiQ U43H7L UHD 4K Smart TV:

Feature	Specification
Brand	CHiQ
Model Number	U43H7L
Screen Size	43 Inches (108 cm)
Display Technology	LED
Resolution	3840 x 2160 pixels (4K UHD)
HDR Support	HDR10/HLG
Operating System	Android
Processor	Quad Core A55 64-bit CPU
Connectivity	Wi-Fi, Bluetooth, 3x HDMI, 2x USB, Ethernet
Supported Internet Services	Netflix, Amazon Instant Video, YouTube
Power Consumption (SDR)	61.0 W
Power Consumption (HDR)	61.0 W
Weight	6.4 Kilograms
Dimensions (with stand)	Approx. 963mm (W) x 617mm (H) x 179mm (D)



Image: A technical diagram showing the front and side dimensions of the CHI Q U43H7L TV, including width, height, and depth with the stand.

For detailed energy information, please refer to the official EPREL database: [EPREL Product Information Sheet](#)

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2013 DER KOMMISSION

ANGABEN	Wert	Einheit
1. Name oder Warenzeichen des Lieferanten	CHI Q	
2. Modellkennung	U43H7L	
3. Energieeffizienzklasse bei Standard-Dynamikumfang (SDR)	G	
4. Leistungsaufnahme im Ein-Zustand bei Standard-Dynamikumfang (SDR)	61,0	W
5. Energieeffizienzklasse bei hohem Dynamikumfang (HDR)	G	
6. Leistungsaufnahme im Ein-Zustand bei hohem Dynamikumfang (HDR)	61,0	W
7. Leistungsaufnahme im Aus-Zustand	n.a.	W
8. Leistungsaufnahme im Bereitschaftszustand	0,5	W
9. Leistungsaufnahme im vernetzten Bereitschaftsbetrieb	0,5	W
10. Art des elektronischen Displays	Fernsehgerät	
11. Seitenverhältnis	16 : 9	
12. Bildschirmauflösung (Pixel)	3 840 x 2 160	Pixel

13. Bildschirmdiagonale		107,9	cm
14. Bildschirmdiagonale		43	Zoll
15. Sichtbare Bildschirmfläche		4 982,9	cm ²
16. Verwendete Panel-Technologie		LED LCD	
17. Automatische Helligkeitsregelung (ABC) vorhanden		Nein	
18. Spracherkennungssensor vorhanden		Nein	
19. Anwesenheitssensor vorhanden		Nein	
20. Bildwiederholfrequenz		60	Hz
21. Mindestens garantierte Software- und Firmware-Aktualisierungen (bis):		31 12 2023	
22. Mindestens garantierte Verfügbarkeit von Ersatzteilen (bis)		31 12 2023	
23. Mindestens garantierte Produktunterstützung (bis)		31 12 2023	
24. Art der Stromversorgung (Netzteil):		Intern	
i Genormtes externes Netzteil (in der Verkaufsverpackung enthalten)	Name der Norm	-	
	Eingangsspannung	-	V
	Ausgangsspannung	-	V
ii Geeignetes genormtes externes Netzteil (nicht in der Verkaufsverpackung enthalten)	Name der Norm	-	
	Benötigte Ausgangsspannung	-	V
	Benötigte Stromstärke	-	A
	Benötigte Stromfrequenz	-	Hz

Image: The EU Energy Label for the CHiQ U43H7L TV, indicating its energy efficiency class (G) and power consumption.

WARRANTY AND SUPPORT

Your CHiQ U43H7L Smart TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage.

For technical support, service requests, or further inquiries, please visit the official CHiQ website or contact their customer service department. Keep your purchase receipt and product serial number handy for faster assistance.

© 2024 CHiQ. All rights reserved.

This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZFZ9B43>

More documents and user manuals: <https://manuals.plus/>