

## Mixpresso 4897038502646

# Mixpresso Capsule Coffee Machine Instruction Manual

Model: 4897038502646

[Introduction](#)   [Safety Precautions](#)   [Parts & Functions](#)   [Setup](#)   [Operation](#)   [Maintenance](#)  
[Troubleshooting](#)   [Specifications](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Mixpresso Capsule Coffee Machine. Please read this manual carefully before operating the appliance and keep it for future reference.

## 2. IMPORTANT SAFETY PRECAUTIONS

- Avoid risk of fatal electric shock and fire.
- In case of an emergency, immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate.
- Do not pull the cord over sharp edges, clamp it, or allow it to hang down.
- Keep the cord away from heat and damp.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.31 mm<sup>2</sup> or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable, and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaled, or similar.
- Disconnect the appliance from the mains when not in use, for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Do not use the appliance for other than its intended use.
- This appliance has been designed only for indoor and non-extreme temperature conditions.
- Keep the appliance away from direct sunlight effect, prolonged water splash, and humidity.

- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep it out of reach of children.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket.
- A damaged appliance can cause electrical shocks, burns, and fire.
- Always completely close the slider and never open it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked into the capsule compartment, turn the machine off and unplug it before any operation.
- Always fill the water tank with fresh, drinking, cold water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.

### 3. PARTS AND FUNCTIONS



**Figure 1:** Front and side view of the Mixpresso Capsule Coffee Machine. Dimensions are approximately 5 inches deep, 11.6 inches wide, and 9.2 inches high.



**Figure 2:** Key features including the automatic capsule ejection system, easy-view water window for the 700ML water tank, and the removable drip tray for easy cleaning.

1. **Handle for loading & ejecting capsule:** Used to open and close the capsule compartment.
2. **Capsule loading compartment:** Area where coffee capsules are inserted.
3. **Espresso button (short cup size):** Brews a short espresso.
4. **Lungo button (tall cup size):** Brews a longer coffee.
5. **Dispenser:** Where the coffee is dispensed into your cup.
6. **Used capsule container & drip tray:** Collects used capsules and excess liquid.
7. **Adjustable cup support & drip tray:** Can be adjusted or removed to accommodate different cup sizes.
8. **On/Off switch:** Powers the machine on or off.
9. **Water tank:** Holds up to 700ML of water.
10. **Water tank lid:** Covers the water tank.

## 4. SETUP

1. **Unpacking:** Remove the machine from its packaging. Remove any plastic film from the drip grid and dispose of packaging materials responsibly.

2. **Placement:** Place the machine on a stable, horizontal, and heat-resistant surface. Ensure it is near a suitable earthed power outlet.
3. **Water Tank:** Remove the water tank from the back of the machine. Fill it with fresh, cold drinking water up to the MAX level (700ML). Reattach the water tank securely.
4. **Power Connection:** Plug the power cable into the machine and then into an earthed wall socket.
5. **Initial Rinse:** Before first use or after long periods of inactivity, perform a rinse cycle. Fill the water tank, place a container under the coffee outlet, and run the coffee preparation program (without a capsule) 3 to 6 times until clear water comes out. This primes the pump and cleans the internal system.

Your browser does not support the video tag.

**Video:** This official Mixpresso video demonstrates the setup and operation of the Espresso Machine, including filling the water tank, inserting a capsule, and brewing coffee. It highlights the removable drip tray and different brew sizes.

## 5. OPERATING INSTRUCTIONS

1. **Fill Water Tank:** Ensure the water tank is filled with fresh, cold drinking water.
2. **Place Cup:** Place a cup under the coffee outlet. Adjust the cup support tray if needed for taller cups.
3. **Insert Capsule:** Lift the handle to open the capsule loading compartment. Insert a Nespresso-compatible coffee capsule. Close the handle completely to secure the capsule.
4. **Power On:** Press the On/Off switch to turn on the machine. The boiler inside will start preheating, and the light on the switch will flash for about 30 seconds. Once preheating is finished, the light will stop flashing and remain steady.
5. **Brew Coffee:** Press either the Espresso button (short cup) or the Lungo button (tall cup) depending on your desired coffee volume. The coffee will begin to dispense.
6. **Capsule Ejection:** After brewing, lift the handle to open the capsule loading cover. The used capsule will automatically drop into the used capsule container.
7. **Selecting Coffee Volume (Programmable):**
  - Press and hold the desired Espresso or Lungo button for around 3 seconds. Release it when the button light flashes quickly (around 2 times per second).
  - The machine will make coffee continuously.
  - Press the programmable button again when the desired volume is reached. The machine will save your setting.
  - *Note:* Espresso/Short Cup volume can be programmed between 10 and 35 seconds. Lungo/Tall Cup volume can be programmed between 35 and 60 seconds.



**Figure 3:** Visual guide for operating the machine, illustrating capsule loading, single-touch brewing, drip tray removal, and water tank refill.

## 6. MAINTENANCE AND CLEANING

---

### Cleaning:

- Do not use any strong or abrasive cleaning agent or solvent cleaner.
- Do not put in a dishwasher.
- Never immerse the appliance or part of it in water.
- Clean the coffee outlet regularly with a damp cloth.
- Empty the drip tray and used capsule container regularly.
- The capsule container, drip tray, and water tank are removable for quick and easy cleaning.

### Descaling:

Regular descaling is recommended to maintain optimal performance and extend the lifespan of your machine. Refer to the full instruction manual for detailed descaling procedures using a suitable descaling agent.



Figure 4: The removable drip tray and capsule container simplify cleaning, making maintenance hassle-free.

## 7. TROUBLESHOOTING

---

### No coffee, no water:

- Check the water tank; if empty, fill with potable water. Descale if necessary.
- The capsule does not close completely or the machine doesn't start brewing.
- Empty the capsule container. Check that no capsule is blocked inside the machine.
- Leakage or unusual coffee flow.
- Make sure the water tank is correctly positioned.

### Can't Brewing Coffee:

Before using for the first time or after long pauses (e.g., holidays), the machine may be difficult to pump water and brew coffee. To solve this problem, you can do this short procedure: enable the water pump to self-priming by pressing the Tall Cup Size button, but not necessarily to insert the coffee capsule. Operate 2 times later, then insert the coffee capsule, then the machine will be able to pump water and brew coffee out normally.

## 8. SPECIFICATIONS

|                       |                                               |
|-----------------------|-----------------------------------------------|
| Brand                 | Mixpresso                                     |
| Model Number          | 4897038502646                                 |
| Color                 | White                                         |
| Product Dimensions    | 5"D x 12"W x 9"H                              |
| Special Feature       | Auto Shut-Off, Permanent Filter, Programmable |
| Coffee Maker Type     | Espresso Machine                              |
| Operation Mode        | Fully Automatic                               |
| Human Interface Input | Buttons                                       |
| Coffee Input Type     | Capsule                                       |
| Item Weight           | 5 pounds                                      |
| Capacity              | 700 Milliliters                               |
| Power                 | 120V-60Hz, 1400W                              |

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Mixpresso website or contact their customer service directly. The product is from a small business brand, and they typically offer support for their products. You can visit the [Mixpresso Store on Amazon](#) for more information and contact options.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question