

## NIMO BIG-S0423643

# NIMO BIG-S0423643 Universal Programmable Remote Control Instruction Manual

Model: BIG-S0423643

## INTRODUCTION

---

Thank you for choosing the NIMO BIG-S0423643 Universal Programmable Remote Control. This remote is designed to consolidate control of your TV, Satellite receiver, Digital Terrestrial Television (DTT), DVD player, and HIFI audio systems into a single device. Please read this manual carefully to ensure proper setup and operation.

## PRODUCT OVERVIEW

---



The image above shows the NIMO Universal Programmable Remote Control in its retail packaging. The remote features a standard layout with numerical keys, navigation buttons, and dedicated function keys for various devices. The packaging highlights its 4-in-1 universal compatibility (TV-SAT-DTT-DVD-HIFI) and its programmability via PC, smartphone, or tablet.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).

3. Close the battery compartment cover securely.

## 2. Initial Power On

After installing batteries, the remote is ready for programming.

## PROGRAMMING YOUR REMOTE CONTROL

---

The NIMO BIG-S0423643 remote control is programmable, allowing it to learn functions from your original remote controls or be configured via a PC, smartphone, or tablet. Refer to the specific programming instructions provided with the remote or visit the NIMO support website for detailed guides and software.

### Programming Methods:

- **Code Entry:** Enter a specific code corresponding to your device's brand.
- **Automatic Search:** The remote searches for the correct code automatically.
- **Learning Function:** The remote can learn functions directly from your original remote control.
- **PC/Smartphone/Tablet Programming:** Connect the remote to a computer or mobile device (via a compatible cable, if included) and use dedicated software or an app for advanced programming. This method often allows for more precise control and customization.

*Note: A programming cable may be required for PC/smartphone/tablet programming and is typically included with the product.*

## OPERATING YOUR REMOTE CONTROL

---

Once programmed, the remote control functions similarly to your original device remotes. The buttons are generally laid out for intuitive use.

### Key Functions:

- **Power Button:** Turns devices on/off.
- **Number Keys (0-9):** For direct channel selection or inputting codes.
- **Channel Up/Down:** Changes television channels.
- **Volume Up/Down:** Adjusts audio volume.
- **Mute:** Silences audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Menu/Settings:** Accesses device menus.
- **Input/Source:** Switches between different input sources (e.g., HDMI 1, AV).
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For DVD/media player control.

## MAINTENANCE

---

### Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.

### Battery Replacement:

Replace batteries when the remote control's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries.

### Storage:

Store the remote control in a dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check battery polarity and ensure batteries are fresh.
  - Ensure there are no obstructions between the remote and the device's infrared receiver.
  - Reprogram the remote control for the specific device.
- **Some functions not working:**
  - The remote may not have learned all functions correctly. Try reprogramming or using the learning function for specific keys.
  - Ensure the correct device mode is selected on the remote (if applicable).
- **Device codes not working:**
  - Try alternative codes for your device brand.
  - Use the automatic search or learning function.

## SPECIFICATIONS

---

Feature	Detail
Brand	NIMO
Model Number	BIG-S0423643
Connectivity Technology	Infrared
Compatible Devices	Television, Satellite, DTT, DVD, HIFI
Special Feature	Universal, Programmable
Battery Type	AAA (2 required, not included)
Product Dimensions	33 x 14 x 3 cm
Product Weight	1 kg

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official NIMO website. Keep your proof of purchase for warranty claims.