

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Fifty Shades of Grey](#) /
- › Fifty Shades of Grey Greedy Girl Rabbit Vibrator - N11196 Instruction Manual

### Fifty Shades of Grey N11196

# Fifty Shades of Grey Greedy Girl Rabbit Vibrator - N11196 Instruction Manual

Brand: Fifty Shades of Grey | Model: N11196



## 1. PRODUCT OVERVIEW

The Fifty Shades of Grey Greedy Girl Rabbit Vibrator is designed for personal use, featuring a slimline, flexible silicone body. This device offers a combination of internal and external stimulation with multiple vibration settings. It is rechargeable and fully waterproof for versatile use and easy cleaning.





Figure 1: The Greedy Girl Rabbit Vibrator, showcasing its black silicone body and control buttons.

Key features include:

- **Slender Shaft:** Constructed from soft silicone, designed for comfortable insertion.
- **Dual Stimulation:** Features a main shaft for internal use and rabbit ears for external stimulation.
- **Multiple Settings:** Offers 3 speeds and 9 vibration patterns for varied experiences.
- **Waterproof Design:** Fully submersible for use in water and easy cleaning.
- **USB Rechargeable:** Convenient charging via USB.
- **Quiet Operation:** Engineered for discreet use.

## 2. SETUP AND FIRST USE

---

### 2.1. Initial Charging

Before first use, fully charge the device. Locate the charging port, typically at the base of the device. Connect the provided USB charging cable to the port and plug the other end into a compatible USB power source (e.g., computer, USB wall adapter).



Figure 2: Connecting the USB charging cable to the device. The device features a whisper-quiet motor and is USB rechargeable.

The indicator light will typically illuminate during charging and change or turn off when fully charged. Refer to the packaging or product details for specific charging times. Do not overcharge the device.

## 2.2. Cleaning Before Use

Clean the device thoroughly before its first use. Use warm water and a mild, toy-safe soap or a specialized toy cleaner. Rinse thoroughly and allow to air dry completely.

## 3. OPERATING INSTRUCTIONS

### 3.1. Power On/Off

To turn the device on, press and hold the power button (usually marked with a power symbol or a single button) for a few seconds until the vibrations begin. To turn it off, press and hold the power button again until the vibrations cease.

### 3.2. Adjusting Settings

Once powered on, short presses of the power button or dedicated mode/speed buttons will cycle through the available 3 speeds and 9 vibration patterns. Experiment to find your preferred setting.



Figure 3: A hand demonstrating the grip on the vibrator, showing the location of the control buttons for adjusting speeds and patterns.

### 3.3. Usage Recommendations

For optimal comfort and experience, apply a generous amount of water-based lubricant to the device before use. The slender shaft is designed for internal stimulation, while the rabbit ears provide external stimulation.



Figure 4: The slender shaft of the vibrator, designed for comfortable use, especially for beginners.



Figure 5: The vibrator illustrating its 5-inch insertable length, suitable for various preferences.

### 3.4. Product Demonstration Video

Your browser does not support the video tag.

Video 1: A brief demonstration of the Greedy Girl Rabbit Vibrator, showing its design and how it is handled. This video is a 9-second preview from Lovehoney LLC.

## 4. CARE AND MAINTENANCE

---

### 4.1. Cleaning

After each use, clean the device thoroughly. As it is waterproof, you can wash it with warm water and a mild, toy-safe soap. Rinse all soap residue completely and allow it to air dry. Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.

### 4.2. Storage

Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation. A luxurious satin bag is included for discreet storage and travel.



Figure 6: The included satin storage bag, ideal for discreetly storing and transporting the device.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Device does not charge.	Charging cable or port issue.	Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or adapter.

Problem	Possible Cause	Solution
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.
Device feels uncomfortable or causes irritation.	Insufficient lubrication or allergic reaction to material.	Ensure adequate water-based lubricant is used. Discontinue use if irritation persists and consult a healthcare professional.

## 6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Greedy Girl
Item Model Number	N11196
Brand	Fifty Shades of Grey
Material	Silicone
Color	Black
Product Dimensions	4.72 x 1.57 x 1.97 inches (12 x 4 x 5 cm)
Insertable Length	Approximately 5 inches (12.7 cm)
Weight	3.53 ounces (100 grams)
Battery	1 Lithium Ion battery (included)
Charging	USB Rechargeable
Waterproof	Yes, submersible
Vibration Settings	3 Speeds, 9 Patterns
Manufacturer	Lovehoney

## 7. WARRANTY AND SUPPORT

### 7.1. Warranty Information

Specific warranty details for the Fifty Shades of Grey Greedy Girl Rabbit Vibrator are not provided within this manual. Please refer to the product packaging, the manufacturer's official website, or your point of purchase for comprehensive warranty terms and conditions.

### 7.2. Customer Support

For further assistance, technical support, or inquiries regarding your device, please contact the manufacturer, Lovehoney, or the retailer from whom the product was purchased. Contact information can typically be found on the product packaging or their respective websites.



---

© 2024 Fifty Shades of Grey. All rights reserved.

This manual is for informational purposes only. Manufacturer reserves the right to change specifications without prior notice.