

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Skyworth](#) /

› [Skyworth 65UB7500 Android UHD 4K LED TV User Manual](#)

## Skyworth 65UB7500

# Skyworth 65UB7500 Android UHD 4K LED TV User Manual

Model: 65UB7500

[Instructions](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating](#)  
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## INTRODUCTION

Thank you for purchasing the Skyworth 65UB7500 Android UHD 4K LED TV. This manual provides essential information for setting up, operating, and maintaining your television. Please read it thoroughly before using the product and retain it for future reference.



*Image: Front view of the Skyworth 65UB7500 4K LED TV. This image displays the television from the front, showcasing its screen and slim bezels.*

## SAFETY INFORMATION

Always follow these basic safety precautions when using your television:

- **Power Source:** Ensure the TV is connected to an AC 100-240V, 50/60Hz power supply.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.

- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from heat sources like radiators, heat registers, stoves, or other appliances that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Children:** Supervise children to ensure they do not play with the TV.
- **Placement:** Place the TV on a stable, level surface to prevent it from falling.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Skyworth 65UB7500 4K LED TV
- Remote Control (with batteries)
- Power Cord
- TV Stand (2 pieces)
- Screws for Stand Attachment
- User Manual (this document)

## SETUP

---

### 1. Attaching the TV Stand

To attach the stand to your TV:

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom rear of the TV.
3. Secure each stand piece using the provided screws. Ensure they are tightened firmly.



*Image: Rear view of the Skyworth 65UB7500 TV, showing the stand attachment points. This image illustrates the back panel of the television, highlighting the areas where the two stand feet are to be secured.*

### 2. Wall Mounting (Optional)

The TV supports VESA wall mounts. For wall mounting, remove the stand if already attached. Use a VESA-compatible wall mount kit (sold separately) and follow the instructions provided with the wall mount. Ensure proper installation by a qualified professional to prevent injury or damage.

### 3. Connecting Peripherals

Connect your external devices to the TV using the appropriate ports:

- **HDMI:** For digital connection with AV equipment like Blu-ray players, game consoles, or set-top boxes. The TV features multiple HDMI terminals.
- **USB:** For connecting USB storage devices to play media files.
- **Antenna/Cable:** Connect an antenna or cable TV signal for broadcast channels.
- **Ethernet (LAN):** For a wired internet connection. Alternatively, use Wi-Fi for wireless connectivity.
- **Audio Out:** For connecting external audio systems or soundbars.

### 4. Initial Power On and Setup Wizard

After connecting all necessary cables:

1. Plug the power cord into an electrical outlet.
2. Press the Power button on the remote control or on the TV.
3. The TV will guide you through the initial setup wizard, including language selection, network connection (Wi-Fi or Ethernet), Google account sign-in, and channel scanning.

## OPERATING INSTRUCTIONS

---

### 1. Remote Control Overview

Familiarize yourself with the remote control buttons for easy navigation and control of your TV's features.

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, TV, etc.).
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Navigation (Up/Down/Left/Right) & OK:** Navigates menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Home:** Accesses the Android TV home screen.
- **Google Assistant:** Activates voice commands (if supported by your remote).
- **App Shortcuts:** Dedicated buttons for pre-installed apps like YouTube.

### 2. Smart TV Features (Android 9.0 Pie)

Your Skyworth 65UB7500 TV runs on Android 9.0 Pie, offering a range of smart features:

- **Google Play Store:** Download and install a variety of apps, games, and streaming services.
- **Google Assistant:** Use voice commands to search for content, control smart home devices, and get information.
- **YouTube:** Access a vast library of videos and channels.
- **Chromecast Built-in:** Cast content from your smartphone or tablet directly to the TV.

### 3. Picture and Sound Settings

Adjust picture and sound settings to optimize your viewing experience:

- **Picture Modes:** Select from various preset modes (e.g., Standard, Vivid, Movie, Game) or customize settings like brightness, contrast, color, and sharpness.
- **Sound Modes:** Choose from preset audio modes (e.g., Standard, Music, Movie, Speech) or adjust equalizer

settings. The TV features surround sound for an immersive audio experience.

- **Advanced Settings:** Explore options like Trochilus PQ Extreme for enhanced picture quality and other advanced audio/video configurations.

## MAINTENANCE

### 1. Cleaning the TV

To clean your TV:

- Unplug the power cord before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for LED screens) and wipe gently. Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

### 2. Software Updates

Your TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet. You can usually check for updates in the TV's settings menu under "About" or "System Updates."

## TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into both the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections if using external speakers.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router.
Apps are slow or freezing	Close unused apps. Clear app caches in the TV settings. Restart the TV.

## SPECIFICATIONS

Key technical specifications for the Skyworth 65UB7500 TV:

- **Model Name:** Skyworth 65UB7500
- **Screen Size:** 65 Inches
- **Resolution:** 4K UHD (3840 x 2160)

- **Refresh Rate:** 60 Hz
- **Operating System:** Android 9.0 Pie
- **Processor:** Quad Core
- **Connectivity:** Bluetooth, Wi-Fi, Wireless, HDMI, USB, Ethernet
- **Special Features:** Borderless Design, Trochilus PQ Extreme, Smart/Internet capabilities, Google Assistant, Google Play Store, YouTube
- **Audio:** Surround Sound
- **Included Components:** Stand, TV
- **Dimensions (Package):** 159 x 105 x 19 cm
- **Weight (Package):** 26.7 kg

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Skyworth website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2026 Skyworth. All rights reserved.