

Manuals.plus /

> [VOXON](#) /

> VOXON Wireless Battery Doorbell VX-WD995 Instruction Manual

VOXON VX-WD995

VOXON Wireless Battery Doorbell VX-WD995 Instruction Manual

Model: VX-WD995 | Brand: VOXON

INTRODUCTION

Welcome to your new VOXON Wireless Battery Doorbell. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and a reliable user experience. Please read this manual thoroughly before installation and use.

PACKAGE CONTENTS

- VOXON Wireless Doorbell Receiver (Battery Operated)
- VOXON Wireless Doorbell Transmitter (Push Button)
- Mounting Hardware (e.g., screws, double-sided adhesive pad)
- User Manual

Note: 3x AA batteries for the receiver are not included and must be purchased separately.

PRODUCT FEATURES

- **Wireless Operation:** The battery-powered receiver requires no electrical outlet, offering flexible placement anywhere in your home.
- **Extended Range:** Enjoy a reliable wireless connection with a range of up to 400 meters (1300 feet) in open areas.
- **Customizable Chimes:** Choose from 60 selectable melodies to personalize your doorbell sound.
- **Adjustable Volume:** Features 5 volume levels, ranging from 0 dB (mute) to a loud 110 dB.
- **Visual Alert:** A blue LED indicator flashes with the chime, providing a visual alert for noisy environments or hearing-impaired users.
- **Mute Mode:** Allows for silent operation where only the LED indicator activates when the doorbell is pressed.

- **Durable Design:** The transmitter is IP66 waterproof, suitable for outdoor use in various weather conditions, with an operating temperature range of -20°C to 60°C (-4°F to 144°F).
- **Long Battery Life:** The receiver offers up to 36 months of battery life, and the transmitter up to 54 months, reducing the frequency of battery changes.
- **Low Battery Reminder:** Visual indication alerts you when batteries need replacement.
- **Easy Installation:** Components are pre-linked for immediate use, with options for both screw-free adhesive mounting and screw mounting.



Image: The VOXON wireless doorbell system, showing the receiver unit with a colorful LED ring and the push-button transmitter.

RGBIC LED LIGHT



Colorful
LED Light



60
Ringtones



5
Levels Volume



Image: The doorbell receiver unit placed on a nightstand, highlighting its RGBIC LED light, 60 ringtones, and 5 volume levels.



MUTE MODE



0-110 Decibels Adjustable As You Choose



0dB



25dB



55dB



85dB



110dB

Image: The doorbell receiver in a bedroom setting, illustrating the mute mode feature and adjustable volume from 0 to 110 decibels, suitable for various environments like a sleeping baby's room.

HIGH TEMPERATURE RESISTANCE AND IP66 WATERPROOF



 **-4°F** ↔  **144°F**
(-20°C to 60°C)
Operating Temperature



IP66 Waterproof

Image: The doorbell transmitter shown in a rainy outdoor environment, emphasizing its IP66 waterproof rating and operating temperature range of -4°F to 144°F (-20°C to 60°C).

ULTRA-LONG LIFESPAN OF UP TO **4.5** YEARS

No need to change batteries frequently

36
Months
Battery life



54
Months
Battery life



Low battery reminder
(AA Batteries are not included)

Image: An illustration of the doorbell receiver and transmitter, highlighting their ultra-long battery lifespan of up to 4.5 years, with 36 months for the receiver and 54 months for the transmitter, along with a low battery reminder feature.

400M WIDE RANGE



Image: A visual representation of the doorbell's 400-meter wide wireless range, showing the transmitter at a distance from a house where the receiver is located.

MOVABLE WIRELESS DOORBELL

No Socket Required
Never Miss Visitors Again



Image: The doorbell receiver shown in different indoor settings (living room, kitchen), emphasizing its movability and the absence of a socket requirement.


WIRELESS DOORBELL THAT STAYS WITH YOU



Office



House

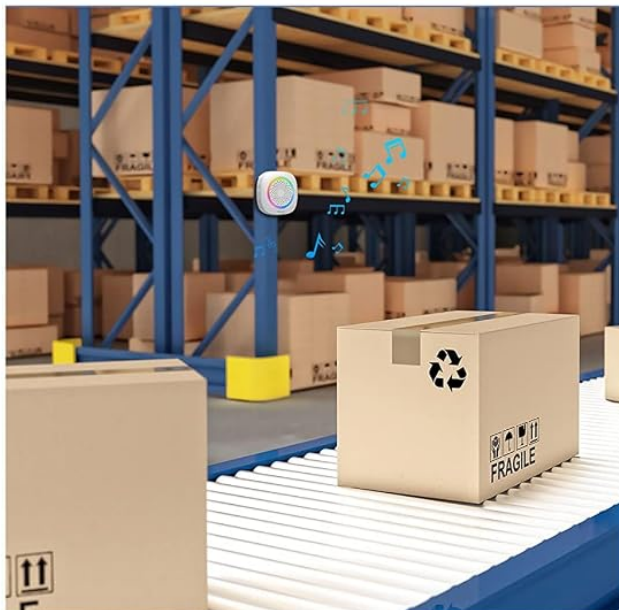

Warehouse



Garden

Image: Various usage scenarios for the wireless doorbell, including an office, house, warehouse, and garden, demonstrating its versatility.

SETUP AND INSTALLATION

1. Insert Batteries into Receiver

Open the battery compartment located on the back of the receiver unit. Insert 3x AA batteries (not included), ensuring correct polarity (+/-). Close the battery compartment securely.

2. Install Transmitter (Push Button)

Choose a suitable, flat location for the transmitter near your door. Ensure the surface is clean and dry for optimal adhesion or secure mounting.

- **Adhesive Mounting:** Peel off the protective film from the double-sided adhesive pad. Firmly press the transmitter onto the desired surface for at least 30 seconds to ensure strong adhesion.
- **Screw Mounting:** For a more permanent installation, use the provided screws to secure the transmitter to the wall. Mark the drill points, drill pilot holes if necessary, and then attach the transmitter.

The transmitter is designed with an IP66 waterproof rating, making it suitable for outdoor exposure to elements.

3. Pairing (Pre-linked)

Your VOXON doorbell receiver and transmitter are pre-linked at the factory. They should function immediately after battery installation.

If re-pairing is necessary (e.g., after battery replacement, adding new components, or if the doorbell does not chime):

1. Press and hold the **Volume** button on the receiver for approximately 5 seconds until it emits a "ding" sound and the LED indicator begins to flash.
2. Immediately press the **Transmitter** button. The receiver will chime, indicating successful pairing.

OPERATING INSTRUCTIONS

Changing Chimes

Press the **Chime Selection** button on the receiver to cycle through the 60 available melodies. The receiver will play each chime as you press the button. Stop pressing when you hear your preferred chime to select it.

Adjusting Volume

Press the **Volume** button on the receiver to cycle through the 5 available volume levels. Each press will adjust the volume, from 0 dB (mute) to 110 dB. Select the desired volume level.

Mute Mode

To activate mute mode, repeatedly press the **Volume** button until the volume reaches 0 dB. In this mode, the doorbell will not produce an audible chime, but the LED indicator will still flash when the transmitter button is pressed, providing a visual alert.

MAINTENANCE

- **Cleaning:** Wipe the doorbell receiver and transmitter units with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the surfaces.
- **Battery Replacement:** Replace the 3x AA batteries in the receiver when the low battery indicator appears or if the doorbell's performance degrades. For the transmitter, replace its battery (typically a 12V 23A battery, though not specified in product data) when the signal becomes weak or stops working. Ensure correct battery polarity during replacement.
- **Environmental Conditions:** While the transmitter is waterproof, avoid prolonged submersion in water. Ensure the receiver unit is always kept in a dry, indoor environment.

TROUBLESHOOTING

Problem	Solution
Doorbell does not chime.	◦ Check if the receiver batteries are correctly inserted and have sufficient charge. ◦ Check if the transmitter battery needs replacement. ◦ Ensure the receiver and transmitter are within the specified wireless range. ◦ Attempt to re-pair the units following the instructions in the "Setup and Installation" section.
Chime is too quiet or too loud.	Adjust the volume level on the receiver using the Volume button.
LED flashes but no sound.	Check if mute mode is active (volume set to 0 dB). Adjust the volume to an audible level.
Short wireless range or intermittent signal.	◦ Ensure there are no large metal objects, thick walls, or other significant obstructions between the transmitter and receiver. ◦ Avoid placing the doorbell near other wireless devices that may cause interference. ◦ Relocate the receiver to a more central position if possible.

TECHNICAL SPECIFICATIONS

- **Model:** VX-WD995
- **Brand:** VOXON
- **Receiver Power:** 3x AA Batteries (not included)
- **Transmitter Power:** 12V 23A Battery (typical, not specified in product data)
- **Wireless Range:** Up to 400 meters (1300 feet) in open areas
- **Chimes:** 60 selectable melodies
- **Volume Levels:** 5 (0 dB to 110 dB)
- **Waterproof Rating (Transmitter):** IP66
- **Operating Temperature:** -20°C to 60°C (-4°F to 144°F)
- **Receiver Dimensions:** 8.7 x 8.6 x 2.7 cm
- **Item Weight:** 140 g (approximate, for the kit)
- **Material:** Plastic

WARRANTY AND SUPPORT

VOXON provides a **36-month warranty** for this product. Please note that product registration may be required to activate the full warranty period.

For any product-related issues, technical support, or warranty claims, please contact our professional customer service team. Refer to the product packaging or the official VOXON website for specific contact details and support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZJ2T8KZ>

More documents and user manuals: <https://manuals.plus/>