

[manuals.plus](#) /› [MONODEAL](#) /› [MONODEAL Portable CD Player User Manual](#)

MONODEAL MD102

MONODEAL Portable CD Player User Manual

Model: MD102 | Brand: MONODEAL

INTRODUCTION

The MONODEAL MD102 Portable CD Player is a versatile and compact device designed for personal audio playback. Featuring a large LCD display, anti-skip and anti-shock protection, and a built-in rechargeable battery, it offers up to 15 hours of playback. This player supports various disc formats including CDs, CD-R, HDCDs, and MP3 CDs, making it suitable for listening to music or audiobooks on the go, in your car, or at home.



The MONODEAL MD102 Portable CD Player, shown with its included headphones.

WHAT'S IN THE Box

- 1 x CD Player
- 1 x 3.5 to 3.5mm AUX Cable
- 1 x USB to Type-C Charging Cable
- 1 x Earphones
- 1 x User Manual

SETUP

1. Charging the Device

Before first use, fully charge the CD player. Connect the provided USB to Type-C charging cable to the player's charging port and a compatible USB power source (e.g., wall charger, power bank, car charger, or laptop). The charging LED indicator will illuminate during charging and turn off when fully charged. A full charge typically provides up to 15 hours of playback.

MONODEAL Portable Rechargeable CD Player

Best Birthday Gift for Kids




The CD player can be conveniently charged via various USB power sources.

2. Inserting a CD

1. Locate the 'OPEN' switch on the side of the player and slide it to open the CD compartment lid.
2. Carefully place your CD (CD, CD-R, HDCD, or MP3 CD) onto the central spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

Compatible with

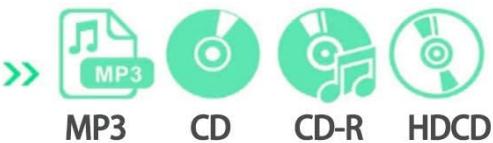

5 PLAY MODES



Play in order



Repeat a track



Repeat all



Intro:Play first 10 secs of per track



Shuf:Play in a random order



The player supports multiple CD formats including MP3, CD, CD-R, and HDCD.

3. Connecting Headphones or External Speakers

Plug the included earphones or your preferred 3.5mm audio headphones into the 'EARPHONE PLUG' port on the side of the player. To connect to external speakers or a car's audio system, use the provided 3.5mm AUX cable. Insert one end into the player's earphone jack and the other into the AUX input of your external device.



Car Connect to Cars Speaker

Support To Connect Car's 3.5mm AUX AUDIO PORT



CAN'T Work with Car's Bluetooth,Bluetooth headphones or Speakers!


The CD player can be connected to a car's audio system using the AUX cable.

Your browser does not support the video tag.

An overview of the MONODEAL Rechargeable Portable CD Player, demonstrating its features and portability.

OPERATING INSTRUCTIONS

Controls Overview

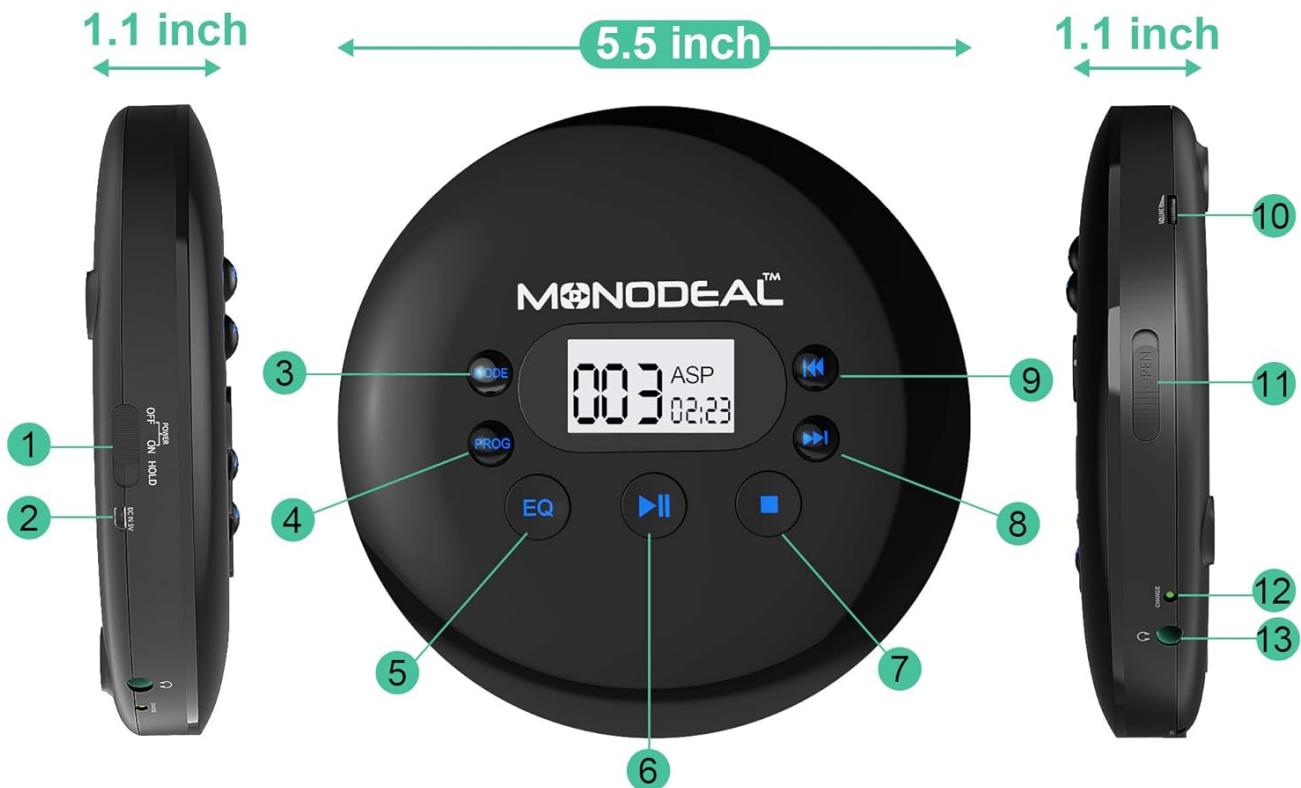

Detailed view of the CD player's controls and ports.

1 Power ON/OFF Switch/Hold	2 DC In 5V	3 Mode
4 Resume Button/Rearrange tracks	5 Sound Effects Options	6 Next/Fast Forward
7 Power Off	8 Previous/Backward	9 Previous/Backward
10 Volume Knob	11 Open CD	12 Charging LED
		13 Earphone Plug

1. **Power ON/OFF Switch/Hold:** Slides to turn the player on or off, or to activate the hold function.
2. **DC In 5V:** Power input for charging.
3. **Mode:** Cycles through playback modes.
4. **PROG (Program) Button:** Used to program track order or toggle last memory function.
5. **EQ (Equalizer) Button:** Cycles through sound effects.
6. **Play/Pause Button:** Starts or pauses playback.
7. **Stop Button:** Stops playback.
8. **Next/Fast Forward Button:** Skips to the next track or fast forwards within a track.
9. **Previous/Rewind Button:** Skips to the previous track or rewinds within a track.
10. **Volume Knob:** Adjusts the audio output volume.
11. **Open CD:** Slide switch to open the CD compartment.
12. **Charging LED:** Indicates charging status.
13. **Earphone Plug:** 3.5mm audio output jack.

Basic Playback

- Slide the 'Power ON/OFF' switch to 'ON'.

- Insert a CD as described in the Setup section.
- Press the **Play/Pause** button to begin playback.
- Use the **Next/Fast Forward** and **Previous/Rewind** buttons to navigate tracks. Hold these buttons to fast forward or rewind within a track.
- Adjust the volume using the 'Volume Knob'.
- Press the **Stop** button to end playback.

Playback Modes and Sound Effects

The player offers 5 playback modes and 5 sound effects to customize your listening experience:

- **Playback Modes:** Play in order, Repeat one track, Repeat all tracks, Play in random order (Shuffle), Play the first 10 seconds of each track (Intro). Press the **MODE** button to cycle through these options.
- **Sound Effects (EQ):** BBS (Bass Boost System), POP, JAZZ, ROCK, CLASSIC. Press the **EQ** button to cycle through these options.

Compatible with






5 PLAY MODES



Play in order



Repeat a track



Repeat all



Intro:Play first 10 secs of per track



Shuf:Play in a random order



BBS



Pop



Jazz



Rock



Classic

Customize your audio with various playback modes and sound effects.

Anti-Skip & Anti-Shock Protection

The MONODEAL MD102 features enhanced anti-skip and anti-shock technology, which helps prevent interruptions in audio playback even during movement. This allows for stable listening while walking, running, or during car travel.



The anti-skip and anti-shock features ensure smooth playback during movement.

Last Memory Function

The player includes a last memory function that resumes playback from where you stopped. To toggle this function On/Off, long press the **PROG** button.

Using in a Car

This CD player is compatible with cars that have a 3.5mm auxiliary (AUX) port. Use the provided AUX cable to connect the player to your car's audio system. Please note that this CD player does not have built-in speakers and is not compatible with Bluetooth connections for car speakers or headphones.

CD PLAYER FOR CAR

Your Fantastic Travel Companion

15H Playback

ASP

Support Headphone

The CD player is a suitable travel companion for cars equipped with an AUX port.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the lens, use a specialized CD lens cleaner. Avoid using abrasive cleaners or solvents.
- Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the player regularly, even if not in use for extended periods.
- Handling Discs:** Always handle CDs by their edges to avoid fingerprints and scratches, which can affect playback quality.

TROUBLESHOOTING

Issue	Possible Cause	Solution
No sound from player	Player has no built-in speakers; Headphones/external speakers not connected or faulty; Volume too low.	Ensure headphones or external speakers are properly connected. Increase volume. Confirm external device is powered on and set to correct input.
Disc skipping or not playing	Disc is dirty, scratched, or damaged; Player is on an unstable surface; Disc inserted incorrectly.	Clean the disc with a soft, lint-free cloth. Try a different disc. Ensure the player is on a stable surface. Re-insert the disc correctly.
Display is dim or unreadable	Low battery; Backlight not activated.	Charge the player. The display has a backlight feature that can be activated by pressing any button to view information easily.

Issue	Possible Cause	Solution
Player does not turn on	Battery is completely drained; Power switch is in 'OFF' or 'HOLD' position.	Connect the player to a power source and allow it to charge. Ensure the 'Power ON/OFF Switch/Hold' is set to 'ON' and not 'HOLD'.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.6 x 5.6 x 0.75 inches
Item Weight	8 ounces
Model Number	MD102
Batteries	1 Lithium Ion battery (included)
Connectivity Technology	Auxiliary
Special Feature	Anti-Skip Protection
First Available Date	October 24, 2019
Manufacturer	Yuanj Co.,Ltd

WARRANTY & SUPPORT

MONODEAL offers a **1-Year Free Replacement** and a **60-Day Refund Without Any Reason** for this product. Additionally, some customers have reported the availability of a lifetime warranty upon registration. For warranty inquiries or support, you may contact the manufacturer directly.

For lifetime warranty registration or support, you may contact: jenna@monodeal.net

Please refer to the included user manual or product packaging for the most up-to-date warranty terms and contact information.