

[Manuals.plus](#) /

> [AILINKE](#) /

> AILINKE Ultrasonic Humidifier (Model Niz-TC68-SM) Instruction Manual

AILINKE Niz-TC68-SM

AILINKE Ultrasonic Humidifier (Model Niz-TC68-SM) Instruction Manual

Your guide to optimal humidity and comfort.

1. PRODUCT OVERVIEW

The AILINKE Ultrasonic Humidifier (Model Niz-TC68-SM) is designed to provide efficient and quiet humidification for large rooms, including bedrooms, living rooms, and offices. Featuring a large 9L (2.3GAL) water tank and a convenient top-fill design, it ensures long-lasting operation and ease of use. The smart constant humidity feature, whisper-quiet operation, and remote control enhance your comfort and convenience.





Figure 1: AILINKE Ultrasonic Humidifier (Model Niz-TC68-SM) in white, showcasing its tall, sleek design with a digital display.



Figure 2: Key features of the AILINKE Humidifier, highlighting its user-friendly design and advanced functionalities.

2. SETUP

- Unpacking:** Carefully remove all packaging materials from the humidifier. Ensure all components, including the main unit, remote control, and cleaning brush, are present.
- Placement:** Place the humidifier on a firm, flat, and waterproof surface. Ensure it is at least 15 cm (6 inches) away from walls and furniture to allow for proper mist dispersion. Avoid placing it directly on carpets or wooden furniture without protection.
- Filling the Water Tank:** The humidifier features a top-fill design for easy refilling.

Top Fill Design

Farewell bottom filling and annoying water leakage



Figure 3: Demonstrating the convenient top-fill water tank design.

Open the top cover and pour clean, cool tap water directly into the water inlet. Do not add water into the mist tube or base chamber directly. Fill up to the 'MAX' line indicated on the water level window. The large 9L (2.3GAL) tank allows for 16-36 hours of continuous operation.

2.3Gal Water Tank

Long last for 36 hours
humidification



Figure 4: The 9L (2.3GAL) water tank ensures extended operation without frequent refills.

4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

3. OPERATING INSTRUCTIONS

The AILINKE Humidifier can be operated using the touch control panel on the unit or the included remote control.



Figure 5: Digital display and touch controls for easy operation.

- **Power On/Off:** Press the Power button on the control panel or remote to turn the unit on or off.
- **Mist Level Adjustment:** Press the Mist button to cycle through low, medium, and high mist output levels.



Figure 6: Choose from three mist levels to suit your preference.

- **Humidity Setting (Humidistat):** Use the Humidity button to set your desired relative humidity level (e.g., 40%-90%). The humidifier will automatically adjust its output to maintain this level.
- **Timer Function:** Press the Timer button to set an operating duration from 1 to 12 hours. The unit will automatically turn off once the set time expires.
- **Sleep Mode:** Activate Sleep Mode to dim the display lights and reduce operational noise for an undisturbed night.

Whisper-quiet

Enjoy your peaceful
sleep all night



Figure 7: Enjoy peaceful sleep with the whisper-quiet operation.

- **360° Rotatable Nozzle:** The mist nozzle can be rotated 360° to direct the mist flow in any desired direction, ensuring even humidification across the room.
- **Essential Oil Tray:** For aromatherapy, add 2-5 drops of essential oil to the aroma pad located in the small tray at the back of the unit. Do not add essential oils directly into the water tank.

Official Product Video Overview

Your browser does not support the video tag.

Video 1: A comprehensive overview of the AILINKE KEECOON Ultrasonic Humidifier, demonstrating its features and benefits for various room types.

4. MAINTENANCE

Regular cleaning is essential to prevent mineral buildup and ensure optimal performance of your humidifier. It is recommended to clean the unit once a week, or every other week depending on water hardness and usage.

1. **Unplug the Humidifier:** Always unplug the unit before cleaning.
2. **Empty the Water Tank:** Remove the water tank from the base and pour out any excess water.

3. **Clean the Water Tank:** Add some detergent and warm water into the water tank. Let it soak for 5 minutes, then clean the inside of the water tank with the provided cleaning brush. Rinse the unit with clean water and dry all parts thoroughly with a clean, dry cloth.
4. **Clean the Base Chamber:** Wipe the base chamber with a soft cloth. Do not immerse the base in water.
5. **Descaling:** If you live in a hard water area, use a descaling solution (e.g., white vinegar) to remove mineral deposits. Follow the descaling product's instructions.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	Low water level; mineral buildup; mist nozzle blocked.	Refill water tank; clean the unit and transducer; ensure mist nozzle is clear.
Unit not turning on	Power cord unplugged; unit malfunction.	Check power connection; contact customer service if issue persists.
White dust around unit	Hard water used.	Use distilled or demineralized water; clean unit regularly.
Unusual noise	Unit not on a flat surface; water level too low.	Place on a flat surface; refill water tank.

6. SPECIFICATIONS

- **Brand:** AILINKE
- **Model Number:** Niz-TC68-SM
- **Color:** White
- **Operation Mode:** Ultrasonic
- **Water Tank Capacity:** 9L (2.3 Gallons)
- **Max Moisture Capacity:** 300ml/h
- **Running Time:** 16-36 hours
- **Floor Area Coverage:** 500 Square Feet
- **Special Features:** Quiet, Remote Control, Timer, Smart Constant Humidity, Top-Refill
- **Control Method:** Remote, Touch Panel
- **Item Weight:** 2.5 Kilograms (5.5 pounds)
- **Package Dimensions:** 29.25 x 10.4 x 9.5 inches
- **Included Components:** Cleaning Brush
- **Batteries:** 1 Lithium Ion batteries required (included for remote)

7. WARRANTY AND SUPPORT

For any product issues, malfunctions, or questions regarding your AILINKE Ultrasonic Humidifier, please contact customer service. Do not attempt to dismantle the unit yourself, as this may void the warranty. Always use only original replaceable parts supplied by the manufacturer. Refer to the official AILINKE website or your purchase documentation for specific warranty terms and contact information.

