

[Manuals.plus](#) /

› [Pretty Love](#) /

› Pretty Love Pixie 10 Function Mini-Vibe Instruction Manual, Model 6089

Pretty Love 6089

Pretty Love Pixie 10 Function Mini-Vibe Instruction Manual

Model: 6089

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Pretty Love Pixie 10 Function Mini-Vibe, Model 6089. Please read this manual thoroughly before first use and retain it for future reference. This device is designed for personal use.

The Pretty Love Pixie is a compact vibrator featuring 10 distinct vibration modes and a tapered design for targeted stimulation. It is constructed from silicone and requires one AA battery for operation.

IMPORTANT SAFETY INFORMATION

- **Do not use** if the device appears damaged.
- **Consult a healthcare professional** if you experience any discomfort or adverse reactions during or after use.
- **Keep out of reach of children.**
- **For external use only.**
- **Clean the device thoroughly** before and after each use as described in the Maintenance section.
- **Do not immerse the device in water for extended periods** despite being waterproof, to prolong its lifespan.
- **Use only lubricants compatible with silicone products.** Oil-based lubricants may damage the silicone material.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Pretty Love Pixie 10 Function Mini-Vibe (Model 6089)
- 1 x Instruction Manual (this document)

Note: 1 AA battery is required and not included in the package.

SETUP

Battery Installation

1. Locate the battery compartment cap at the base of the device.
2. Twist the cap counter-clockwise to open and remove it.
3. Insert one (1) AA battery into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery compartment cap and twist clockwise until securely tightened. Ensure a tight seal to maintain waterproofing.



OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

- To Power On:** Press and hold the power button located on the device's body for approximately 2 seconds. The device will start vibrating in its first mode.
- To Change Vibration Mode:** Briefly press the power button to cycle through the 10 available vibration patterns and intensities.
- To Power Off:** Press and hold the power button for approximately 2 seconds until the vibrations stop.

Experiment with the different modes to find your preferred setting. The tapered tip is designed for precise stimulation.

CARE AND MAINTENANCE

Cleaning

Proper cleaning ensures hygiene and extends the lifespan of your device.

- Before and After Each Use:** Wash the device thoroughly with warm water and a mild, toy-safe soap.
- Rinse the device completely to remove all soap residue.
- Pat dry with a lint-free cloth or allow it to air dry completely before storage.

Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing with other silicone products for prolonged periods to prevent material degradation.
- If storing for an extended period, remove the AA battery to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is dead or incorrectly inserted.	Replace with a new AA battery, ensuring correct polarity (+/-).
Vibrations are weak or inconsistent.	Battery power is low.	Replace the AA battery.
Device stops working unexpectedly.	Battery connection issue or device malfunction.	Check battery connection. If problem persists with a new battery, contact customer support.
Difficulty changing modes.	Button not pressed correctly or device malfunction.	Ensure a firm, brief press of the power button. If issue continues, contact customer support.

SPECIFICATIONS

Model: 6089

Brand: Pretty Love

Material: Silicone

Color: Pink

Vibration Modes: 10 Functions

Power Source: 1 x AA Battery (not included)

Waterproof: Yes

Product Dimensions: 11.97 x 6.06 x 1.77 inches (L x W x H)

Weight: 3.17 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official Pretty Love website. Please have your model number (6089) and purchase date available when contacting support.

Note: Specific warranty terms may vary by region and retailer. Keep your proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZKP1K75>

More documents and user manuals: <https://manuals.plus/>