

[Manuals.plus](#) /

› [TENMIYA](#) /

› TENMIYA Portable Bluetooth Speaker A66 User Manual

TENMIYA RS-A66

TENMIYA Portable Bluetooth Speaker A66 User Manual

Comprehensive guide for setup, operation, and maintenance of your TENMIYA A66 Portable Bluetooth Speaker with Subwoofer.

PRODUCT OVERVIEW

The TENMIYA A66 Portable Bluetooth Speaker is designed to deliver powerful, clear audio with enhanced bass, suitable for various indoor and outdoor environments. It features versatile connectivity options, dynamic RGB lighting, and convenient remote control functionality.



Front view of the TENMIYA A66 Portable Bluetooth Speaker, showcasing its main speakers and control panel with RGB lighting.

WHAT'S IN THE BOX

- 1 x A66 Bluetooth speaker
- 1 x Remote control
- 1 x AUX cable
- 1 x USB cable
- 1 x Shoulder strap
- 1 x User manual
- 1 x Retail box

KEY FEATURES

- **Powerful Sound:** 30W three-speaker configuration with passive subwoofer for rich stereo sound and booming bass.
- **Wireless & Wired Connectivity:** Bluetooth 4.2 for seamless wireless connection to smartphones, tablets, and laptops. Includes 3.5mm AUX jack for wired connections to PCs, TVs, and other non-Bluetooth devices.
- **Long Playtime:** Built-in 4000 mAh rechargeable lithium battery provides up to 10 hours of continuous playback on a full charge.
- **Dynamic RGB Lights:** Colorful LED lights enhance the party atmosphere and can be turned off as desired.
- **EQ Sound Effects:** Features multiple equalizer presets including Jazz, Rock, Classical, and Pop for optimized audio.
- **FM Radio:** Automatic station search and manual input via remote control.
- **Remote Control:** Full control over volume, song selection, play/pause, mode selection, and EQ settings from up to 10 feet away.
- **Portable Design:** Equipped with comfortable handles and a removable shoulder strap for easy transport.
- **Microphone Input:** Includes a microphone inlet for karaoke or public speaking.

Bluetooth 4.2 + Aux Port



Wireless + wired Can connect most of the equipment



USB



FM Radio



RECHARGEABLE



REMOTE



PC/MAC



TF CARD



MP3/4



Mobile Phone

The speaker supports both Bluetooth 4.2 and Aux Port connections for versatile audio input.



Equipped with a 4000mAh battery for extended playtime.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the speaker using the provided USB cable. Connect the USB cable to the DC 5V port on the speaker and a compatible USB power adapter (not included). The charging indicator will show status.

2. Power On/Off

Locate the power switch on the control panel. Turn the switch to the "ON" position to power on the speaker. To power off, turn the switch to "OFF".

3. Attaching the Shoulder Strap

Attach the included shoulder strap to the designated loops on either side of the speaker for convenient portability.

Portable BoomBox Indoor-Outdoor Party Speaker

Colorful lights



The speaker is designed for portability with a convenient shoulder strap.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a "BLUE" display.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "TENMIYA" in your device's Bluetooth list and select it to connect.
4. Once connected, the speaker will confirm with an audible prompt.

Your browser does not support the video tag.

Demonstration of the TENMIYA A66 speaker's features, including Bluetooth connectivity, auxiliary input, charging, EQ sound effects, and portability.

2. Wired Connection (AUX)

Use the provided 3.5mm AUX cable to connect the speaker's AUX port to the audio output of your non-Bluetooth device (e.g., PC, TV). The speaker will automatically switch to AUX mode.

3. FM Radio Operation

- Press the "MODE" button to switch to FM Radio mode.
- To automatically search and save available stations, press and hold the Play/Pause button.
- Use the remote control's number pad to manually input a specific station frequency.



The speaker features a built-in FM radio with colorful lighting effects.

4. EQ Sound Effects

Press the "MIC/EQ" button on the control panel or the "EQ" button on the remote control to cycle through different sound effects: Jazz, Rock, Classical, Pop, and more.

Enjoy the ultimate karaoke party with your family and friends.



Customize your audio experience with various EQ sound effects.

5. RGB Lighting Control

The speaker features colorful RGB lights that can be turned on or off using the remote control. Refer to the remote control section for specific button functions.



Dynamic colorful lights enhance the speaker's visual appeal.

6. Remote Control Usage

The included remote control allows you to manage all speaker functions from a distance of approximately 10 feet. Point the remote directly at the speaker for optimal performance. Functions include volume adjustment, track skipping, play/pause, mode selection, and EQ settings.

7. USB and TF Card Playback

Insert a USB flash drive or a TF (Micro SD) card into the respective slots on the control panel. The speaker will automatically detect and play audio files from the inserted storage device.

8. Microphone Input

Connect a microphone (not included) to the MIC1 or MIC2 input jacks on the control panel for karaoke or voice amplification.

MAINTENANCE

- Keep the speaker dry and away from moisture. It is not waterproof.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Store the speaker in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the USB cable and try again. Check if the power switch is in the "ON" position.
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth mode ("BLUE" displayed). Make sure Bluetooth is enabled on your device and it's within 10 meters of the speaker. Forget previous pairings on your device and try reconnecting.
No sound from speaker.	Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected. For wired connections, verify the AUX cable is securely plugged in.
FM radio reception is poor.	Adjust the speaker's position. Try auto-scanning for stations again. Ensure there are no strong interference sources nearby.
Remote control not working.	Ensure the remote control is pointed directly at the speaker. Check the remote control's battery. Make sure there are no obstructions between the remote and the speaker.

SPECIFICATIONS

Feature	Detail
Model Name	B-A66 (RS-A66)
Brand	TENMIYA
Speaker Type	Subwoofer
Speaker Maximum Output Power	30 Watts
Connectivity Technology	Bluetooth, USB, FM
Wireless Communication Technology	Bluetooth, FM
Bluetooth Range	10 Meters (33 Feet)
Battery Life	10 Hours
Battery Capacity	4000 Milliamp Hours
Input Voltage	5 Volts
Product Dimensions	6.3"D x 14"W x 8.3"H
Item Weight	1.75 Kilograms (3.85 pounds)
Material	Plastic
Is Waterproof	FALSE (Not Water Resistant)
UPC	632016579036



Detailed dimensions of the TENMIYA A66 speaker.

WARRANTY AND SUPPORT

This product comes with a Limited Warranty. For specific warranty terms and conditions, please refer to the documentation included in your retail box or contact TENMIYA customer support directly. Contact information for support is typically found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question