

[Manuals.plus](#) /

› [Croove](#) /

› Croove Rechargeable Karaoke Machine for Kids - Model 818907027057 Instruction Manual

Croove 818907027057

Croove Rechargeable Karaoke Machine for Kids - Model 818907027057 Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Croove Rechargeable Karaoke Machine, Model 818907027057. This portable karaoke system is designed to provide hours of entertainment with its powerful speaker, dual microphones, and vibrant disco lights. It offers multiple connectivity options including Bluetooth, AUX, and USB, making it versatile for various music sources. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your device.

2. PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- Croove Rechargeable Karaoke Machine (Main Unit)
- 2 Wired Microphones
- USB Power Supply Cable / Line-in Cord (AUX cable)
- Rechargeable Lithium Ion Battery (pre-installed in main unit)

CROOVE®



BLUETOOTH
CONNECTIVITY



AUX IN
(CABLE INCLUDED)



USB
PORT



FLASHING
DISCO LIGHTS

POP BOX



Figure 1: Included Components - Main unit, two wired microphones, and USB/AUX cable.

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your karaoke machine:

CROOVE®

MICS' CORD LENGTH IS OVER 4 FEET LONG



Figure 2: Control Panel and Features - Highlighting microphone inputs, volume control, mode selection, and connectivity ports.

- **Microphone Input:** Connect the wired microphones here.
- **Easy Carry Handle:** For convenient portability.
- **AUX In/Charge Port:** For connecting external audio devices via AUX cable or charging the unit.
- **USB Input:** For playing music from USB drives.
- **Lights On/Off Button:** To control the flashing disco lights.
- **Power On/Off Button:** To turn the karaoke machine on or off.
- **Microphone Holder:** Securely store microphones when not in use.
- **Mode/Play/Pause Button:** To switch between input modes (Bluetooth, AUX, USB) and control playback.
- **Speaker:** Audio output.
- **Previous/Next Track Buttons:** To navigate between songs.
- **Volume Control:** Adjust the overall volume of the machine.
- **Mic Power Switch:** On/Off switch located on each microphone.

4. SETUP

4.1 Charging the Karaoke Machine

The karaoke machine includes a long-lasting rechargeable battery. Before first use, it is recommended to fully charge the unit.

1. Connect the provided USB power supply cable to the AUX In/Charge port on the karaoke machine.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

4.2 Connecting Microphones

The karaoke machine comes with two wired microphones.

1. Locate the microphone input jacks on the top of the karaoke machine.
2. Plug each microphone's cable into an available microphone input jack.
3. Ensure the mic power switch on each microphone is set to the 'ON' position when in use.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the **Power On/Off Button** to turn the unit on or off. A voice prompt will confirm the action.

5.2 Adjusting Volume

Rotate the **Volume Control** knob to increase or decrease the overall sound output.

5.3 Selecting Input Mode

Press the **Mode/Play/Pause Button** repeatedly to cycle through available input modes: Bluetooth, AUX, and USB.

5.4 Bluetooth Connectivity

To connect your smartphone or other Bluetooth-enabled device:

1. Switch the karaoke machine to Bluetooth mode. A voice prompt will indicate "Bluetooth Mode" and the indicator light will flash.
2. Enable Bluetooth on your external device and search for "Croove Karaoke" (or similar device name).
3. Select the device to pair. Once connected, a voice prompt will confirm successful pairing.
4. You can now play music from your device through the karaoke machine.

CROOVE®

90 DAY
WARRANTY



Figure 3: Connectivity Options - Illustrating various devices that can connect via Bluetooth or AUX.

5.5 AUX and USB Playback

For non-Bluetooth devices or USB media:

1. **AUX:** Connect your device using the provided AUX cable to the AUX In/Charge port. Switch the karaoke machine to AUX mode.
2. **USB:** Insert a USB drive containing MP3 files into the USB Input. Switch the karaoke machine to USB mode.
3. Use the **Mode/Play/Pause Button** and **Previous/Next Track Buttons** to control playback.

5.6 Disco Lights Operation

Press the **Lights On/Off Button** to activate or deactivate the multicolored whirling disco lights.

6. FEATURES

- **Powerful Speaker:** Delivers clear and robust audio for an immersive karaoke experience.
- **Dual Microphones:** Includes two wired, pro-quality microphones for duets and shared fun.
- **Flashing Disco Lights:** Multi-colored lights synchronize with the music, enhancing the party atmosphere.
- **Multiple Connectivity:** Seamlessly stream music via Bluetooth, AUX-in (cable included), or USB Port.
- **Rechargeable Battery:** Equipped with a long-lasting rechargeable battery for portable use.
- **Easy Portability:** Features a convenient carrying handle for transport.

Your browser does not support the video tag.

Video 1: Official product video showcasing the Croove PopBox Karaoke machine (Model CR-2705).

7. TROUBLESHOOTING

- **No Power:** Ensure the unit is charged. Connect the USB charging cable and allow sufficient time for charging.
- **No Sound from Speaker:** Check the volume control on the karaoke machine and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB) is selected.
- **Microphone Not Working:** Ensure the microphone's power switch is ON. Verify the microphone cable is securely plugged into the input jack.
- **Bluetooth Pairing Issues:** Make sure the karaoke machine is in Bluetooth mode and discoverable. Turn off and on Bluetooth on your external device and try pairing again. Ensure no other devices are actively connected to the karaoke machine.
- **Distorted Sound:** Reduce the volume on both the karaoke machine and your connected device. Ensure microphones are not too close to the speaker to prevent feedback.

8. SPECIFICATIONS

Feature	Detail
Brand	Croove
Model Number	818907027057
Product Dimensions	7.65 x 7.4 x 10 inches
Item Weight	4 pounds (1.82 Kilograms)
Power Source	Battery Powered (1 Lithium Ion battery included)
Connectivity Technology	AUX, Bluetooth, USB
Audio Input	Bluetooth, AUX, USB
Number of Channels	1
Mounting Type	Tabletop
Color	Black
Compatible Devices	Personal Computer, Smartphone

9. WARRANTY AND SUPPORT

The Croove Rechargeable Karaoke Machine comes with a 90-day warranty, ensuring high-quality materials and long-lasting durability. It is 100% safety certified, meeting or exceeding all federal and state safety regulations.

For further assistance or support, please refer to the contact information provided with your purchase or visit the official Croove website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07ZL24XBH>

More documents and user manuals: <https://manuals.plus/>