

USARMT WS-1688

USARMT Replacement Remote Control for Westinghouse WS-1688 TV Models

Instruction Manual

1. INTRODUCTION

This manual provides instructions for the USARMT replacement remote control, model WS-1688, designed for use with various Westinghouse television models. This remote control is pre-programmed and requires no additional setup or programming. Simply insert batteries to begin operation.

Compatible Westinghouse TV models include, but are not limited to: WD24HBB6106, WD40FX1170, WD40HB6106, WD48FAB100, WD32HD1120-C, WD24HAB101, WD32HD1390, WD24HN1108, WD19HN108, WD49FB1018, WD32HB1120, WD40FB1530, WD32HB1390, WD32HKB1001.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is pre-programmed and ready for use immediately after battery installation. No additional setup or pairing is required.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Below is a diagram and description of each

button's function.



Figure 1: USARMT Replacement Remote Control Layout

3.1 Button Functions

Power (Red Button): Turns the television on or off.

USB: Selects the USB input source on the television.

P.MODE (Picture Mode): Cycles through various picture presets (e.g., Standard, Dynamic, Movie).

S.MODE (Sound Mode): Cycles through various sound presets (e.g., Standard, Music, Movie).

SLEEP: Sets the sleep timer, which automatically turns off the TV after a set period.

ASPECT: Changes the screen aspect ratio (e.g., 16:9, 4:3, Zoom).

Number Buttons (0-9): Directly enter channel numbers or numerical values in menus.

'-' (Dash): Used for entering sub-channels (e.g., 7-1) or specific menu inputs.

Recall/Return (Curved Arrow): Returns to the previously viewed channel.

VOL +/- (Volume Up/Down): Adjusts the audio volume level.

MUTE: Mutes or unmutes the television audio.

SOURCE: Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV, TV).

CH +/- (Channel Up/Down): Changes the television channel sequentially.

MTS (Multi-channel Television Sound): Selects different audio tracks for broadcast programs (e.g., Stereo, SAP).

MENU: Displays the main on-screen menu of the television.

FREEZE: Pauses the current video frame on screen.

INFO: Displays current program information or status details.

RETURN (Curved Arrow with 'Return' text): Navigates back to the previous menu or screen.

Navigation Arrows (Up, Down, Left, Right): Used to navigate through on-screen menus and options.

OK: Confirms a selection or enters a sub-menu.

CH.LIST (Channel List): Displays the list of available channels.

EXIT: Closes the current menu or on-screen display.

Playback Controls (Play/Pause, Stop, Rewind, Fast Forward): Control media playback functions, typically for content from USB or connected devices.

REPEAT: Activates or deactivates a repeat function for media playback.

C.C (Closed Captioning): Toggles closed captions on or off.

V-CHIP: Accesses parental control settings for blocking content.

AUTO: Initiates automatic channel scanning or setup.

ADD/ERASE: Used to add or remove channels or items from lists, depending on the menu context.

FAV (Favorites): Accesses or manages favorite channels.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

Remote not responding:

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the effective range and pointing the remote directly at the TV.

Specific buttons not working:

- This remote is pre-programmed. If a specific button does not function, it may not be supported by your particular Westinghouse TV model. Refer to your TV's original manual for compatible remote functions.

6. SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model	WS-1688
Compatible Devices	Television (Various Westinghouse models)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Special Feature	Ergonomic design
Item Weight	3 ounces

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this replacement remote control are not provided in this manual. Please refer to the product listing or contact the seller directly for information regarding warranty coverage and terms.

7.2 Customer Support

For further assistance or inquiries, please contact the seller or manufacturer of this USARMT replacement remote control through the platform where it was purchased.

