

[Manuals.plus](#) /

› [SEAFLO](#) /

› SEAFLO Portable Toilet User Manual (5.3 Gallon Standard)

SEAFLO SFPT

SEAFLO Portable Toilet User Manual

MODEL: SFPT (5.3 GALLON STANDARD)



Make water work for you

1. Introduction

Thank you for choosing the SEAFLO Portable Toilet. This self-contained unit is designed for convenience and hygiene in various outdoor and mobile settings, including marine, RV, camping, and boating. Its robust construction and thoughtful design ensure ease of use and reliable performance. Please read this manual thoroughly before initial use to ensure proper setup, operation, and maintenance.



Figure 1.1: The SEAFLO Portable Toilet, ready for use.

2. Product Components

The SEAFLO Portable Toilet consists of two main separable sections for easy handling and cleaning:

- **Upper Tank (Freshwater Tank):** Contains the flush water, toilet seat, and lid. Features a flushing manual pump and water inlet.
- **Lower Tank (Waste Holding Tank):** Collects waste. Equipped with a double-sealed slide valve to prevent odor leakage and a waste discharge port for emptying.
- **Side Latches:** Securely connect the upper and lower tanks.
- **Pull Handle:** Activates the sealing slide valve.



Figure 2.1: The portable toilet separated into its upper and lower tanks.

3. Setup Instructions

1. **Separate the Tanks:** Ensure the side latches are disengaged. Carefully lift the upper tank from the lower tank.
2. **Fill the Freshwater Tank:** Open the water inlet cap on the upper tank. Fill with clean water. For optimal hygiene and odor control, add a small amount of appropriate toilet chemical (e.g., RV/marine toilet treatment) as per the chemical manufacturer's instructions. Close the cap securely.
3. **Prepare the Waste Holding Tank:** Before connecting, it is recommended to add a small amount of water (approx. 1-2 cups) and the recommended dose of waste tank chemical to the lower tank through the waste discharge port. This helps to activate the chemical and prevent waste from sticking. Close the discharge cap securely.
4. **Connect the Tanks:** Align the upper tank with the lower tank. Ensure they are properly seated. Engage the side latches to securely lock the two tanks together. Verify that the connection is firm and stable.
5. **Position the Toilet:** Place the assembled portable toilet on a flat, stable surface.

4. Operating Instructions

1. **Open the Slide Valve:** Before use, pull the slide valve handle (labeled "PULL") completely out to open the passage to the waste holding tank.
2. **Use the Toilet:** Use the toilet as you would a standard toilet.
3. **Flush:** After use, operate the flushing manual pump (located on the top of the upper tank) to rinse the bowl. Pump several times until the bowl is clean.
4. **Close the Slide Valve:** Push the slide valve handle completely in to seal the waste holding tank. This prevents odors from escaping and keeps the unit self-contained.

Important: Always ensure the slide valve is closed when the toilet is not in use or during transport to prevent spills and odors.

5. Maintenance and Cleaning

Regular maintenance is crucial for the longevity and hygienic operation of your portable toilet.

Emptying the Waste Holding Tank:

1. Ensure the slide valve is closed.
2. Separate the upper tank from the lower tank by disengaging the side latches.
3. Carry the lower tank to an approved waste disposal site (e.g., RV dump station, designated waste facility).
4. Rotate the waste discharge spout to the upright position. Remove the cap.
5. Carefully empty the contents of the tank. Use the integrated handle for easier pouring.
6. Rinse the tank thoroughly with clean water. You may add a small amount of water and shake the tank to dislodge any residue, then empty again.
7. Replace the discharge cap and rotate the spout back to its stored position.

General Cleaning:

- Clean the toilet seat and bowl with a mild, non-abrasive cleaner and a soft cloth or sponge. Avoid harsh chemicals that could damage the plastic.
- Periodically clean the exterior of the unit.
- Ensure all seals and gaskets are clean and free of debris to maintain an airtight seal.

6. Troubleshooting

Problem	Possible Cause	Solution
Odor leakage	Slide valve not fully closed; damaged seal; insufficient chemical treatment.	Ensure slide valve is fully pushed in. Check and clean the slide valve seal. Increase chemical dosage or use a different type.
Difficulty flushing	Low water level in freshwater tank; pump malfunction; clogged nozzle.	Refill freshwater tank. Check pump mechanism. Clean flush nozzle if visible debris.
Leaking between tanks	Tanks not securely latched; damaged main seal.	Ensure side latches are fully engaged. Inspect the large rubber seal between the tanks for damage or debris and clean/replace if necessary.
Waste not emptying completely	Insufficient water/chemical in waste tank; waste buildup.	Add more water and chemical to the waste tank. Rinse thoroughly after emptying. Consider using a tank cleaner.

7. Specifications

Model: SFPT

Capacity: 5.3 Gallon (Standard)

Color: White

Product Dimensions: 15.9"D x 13.9"W x 15.4"H (403.86mm D x 353.06mm W x 391.16mm H)

Material: Acrylonitrile Butadiene Styrene (ABS) / Polypropylene (Seat)

Item Weight: 9.7 Pounds (4.4 kg)

Installation Type: Floor Mounted

Features: Self-contained, easily transported, durable ABS molded plastic, sealing slide valve, handle locks.

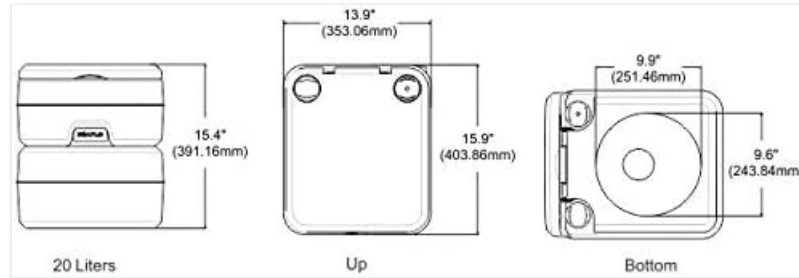


Figure 7.1: Product dimensions for the SEAFLO Portable Toilet.

8. Warranty and Support

SEAFLO products are manufactured to high-quality standards. For specific warranty information regarding your portable toilet, please refer to the warranty card included with your purchase or visit the official SEAFLO website. If you encounter any issues not covered in this manual or require further assistance, please contact SEAFLO customer support through their official channels.

For the latest product information, FAQs, and support, please visit the SEAFLO brand store or official website.