

Lenoxx PPP163_220

Lenoxx Electric Pressure Cooker PPP163_220 User Manual

Model: PPP163_220 | Brand: Lenoxx

INTRODUCTION

Thank you for choosing the Lenoxx Electric Pressure Cooker PPP163_220. This appliance is designed to make your cooking experience efficient and enjoyable, offering uniform cooking and multiple safety features. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new electric pressure cooker. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions thoroughly before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating. See "Operating Instructions" section.
- Never fill the unit above the MAX fill line.
- Do not open the pressure cooker until the unit has cooled and internal pressure has been released. If the handles are difficult to push apart, this indicates that the cooker is still pressurized. Do not force it open.
- Do not fry food in this pressure cooker with oil.
- Ensure the pressure release valve and float valve are clear before use.
- This product operates on 220V. Ensure your power supply matches this requirement.

PRODUCT OVERVIEW

The Lennox Electric Pressure Cooker PPP163_220 features a durable stainless steel and brushed steel body, a removable non-stick inner pot with a 3-liter capacity, and a user-friendly electric control panel. It is equipped with 10 cooking programs and 5 levels of safety for secure operation. The design includes convenient side handles and a handle on the lid for easy and safe transport.



Image: Front view of the Lenoxx Electric Pressure Cooker PPP163_220, showcasing its stainless steel body, control panel, and lid handle.

Included Components:

- 1 x Lenoxx Electric Pressure Cooker PPP163_220
- 1 x Instruction Manual
- 1 x Spoon
- 1 x Measuring Cup

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the inner pot, lid, spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the cooker base with a damp cloth. Do not immerse the cooker base in water.
3. **Placement:** Place the pressure cooker on a stable, level, and heat-resistant surface, away from direct heat

sources and flammable materials. Ensure there is adequate space around the cooker for ventilation.

4. **Power Connection:** Ensure the voltage of your electrical outlet is 220V. Insert the power cord into the cooker's power socket, then plug it into a grounded 220V wall outlet.
5. **Lid Assembly:** Ensure the sealing gasket is properly seated around the lid's rim and the float valve and pressure release valve are correctly installed and clear of any obstructions.

OPERATING INSTRUCTIONS

1. Preparing for Cooking:

- Place the inner pot into the cooker base.
- Add ingredients and liquid to the inner pot. Do not exceed the MAX fill line.
- Place the lid on the cooker base, aligning the arrow on the lid with the arrow on the cooker base. Rotate the lid clockwise until it locks into place.
- Ensure the pressure release valve is set to the "Sealing" position.

2. Selecting a Cooking Program:

- Plug in the pressure cooker. The display will show "----" or a standby indicator.
- Press the desired cooking program button (e.g., Rice, Soup, Meat, Beans). The cooker has 10 pre-set programs.
- The default cooking time for the selected program will appear on the display. You can adjust the cooking time using the "+" and "-" buttons if needed.

3. Starting the Cooking Process:

- After selecting the program and adjusting the time, the cooker will automatically begin preheating. The display may show a rotating indicator or "ON".
- Once sufficient pressure is built, the float valve will rise, and the cooking countdown will begin.

4. Releasing Pressure:

- **Natural Release:** After cooking is complete, the cooker will automatically switch to "Keep Warm" mode. Allow the pressure to release naturally. This can take 10-30 minutes depending on the food volume. The float valve will drop when pressure is fully released.
- **Quick Release:** For certain recipes, you may use the quick release method. Carefully turn the pressure release valve to the "Venting" position. **Caution:** Steam will be released forcefully. Keep hands and face away from the valve. Only use quick release for foods that do not foam or splatter.
- Do not open the lid until the float valve has dropped completely.

5. Opening the Lid:

- Once pressure is fully released and the float valve has dropped, rotate the lid counter-clockwise to unlock it.
- Carefully lift the lid, tilting it away from you to allow any remaining steam to escape.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Lennox Electric Pressure Cooker.

1. **Unplug and Cool:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is dishwasher safe, but hand washing with warm, soapy water and a non-abrasive sponge is recommended to preserve the non-stick coating. Rinse thoroughly and dry.
3. **Lid:** Wash the lid with warm, soapy water. Pay special attention to cleaning the sealing gasket, float valve, and pressure release valve. Remove the sealing gasket for thorough cleaning and ensure it is properly reinstalled before next use. Ensure all valves are clear of food debris.
4. **Cooker Base:** Wipe the exterior of the cooker base with a damp cloth. Do not immerse the cooker base in water or any other liquid. Do not use harsh chemicals or abrasive cleaners.
5. **Accessories:** Wash the spoon and measuring cup with warm, soapy water.
6. **Storage:** Store the cleaned and dried pressure cooker in a dry place. You may place the lid upside down on the inner pot to prevent odors and allow air circulation.

TROUBLESHOOTING

If you encounter any issues with your pressure cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pressure not building / Float valve not rising	Lid not properly sealed; Pressure release valve in 'Venting' position; Sealing gasket damaged or missing; Insufficient liquid.	Ensure lid is locked correctly. Turn pressure release valve to 'Sealing'. Check and re-seat/replace gasket. Add more liquid.
Lid cannot be opened after cooking	Internal pressure still present.	Allow pressure to release naturally or use quick release method (if safe for food type). Do not force the lid. Wait until float valve drops.
Food is undercooked	Insufficient cooking time; Not enough liquid; Pressure not maintained.	Increase cooking time. Ensure adequate liquid. Check lid and valves for proper sealing.
Steam leaking from lid during cooking	Sealing gasket improperly seated or damaged; Food debris on lid rim; Lid not closed properly.	Check and re-seat/replace gasket. Clean lid rim. Ensure lid is locked correctly.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** PPP163_220
- **Brand:** Lenox
- **Capacity:** 3 Liters
- **Voltage:** 220V
- **Material:** Aluminum and Stainless Steel
- **Dimensions (Product):** Approximately 28 x 28 x 32 cm
- **Weight (Product):** Approximately 3.8 kg
- **Power Source:** Electric

- **Special Features:** Programmable, 10 cooking programs, 5 safety levels, non-stick inner pot.
- **GTIN:** 7897181941641

WARRANTY AND SUPPORT

This Lenoxx Electric Pressure Cooker PPP163_220 comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase or your sales receipt for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for any warranty claims.

For technical support, service, or inquiries regarding your product, please contact the retailer where you purchased the appliance or refer to the official Lenoxx website for customer service contact information.