

[Manuals.plus](#) /

› [GASTROBACK](#) /

› GASTROBACK Grind & Brew Pro Thermo Coffee Machine User Manual

## GASTROBACK 42711S

# GASTROBACK Grind & Brew Pro Thermo Coffee Machine User Manual

Model: 42711S

## 1. INTRODUCTION

Thank you for choosing the GASTROBACK Grind & Brew Pro Thermo Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: The GASTROBACK Grind & Brew Pro Thermo Coffee Machine, showcasing its sleek design with a black and silver finish and integrated thermal carafe.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been

damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## 3. PRODUCT OVERVIEW

---

### 3.1 Components

Familiarize yourself with the various parts of your GASTROBACK coffee machine:

- Bean Hopper with Lid
- Conical Burr Grinder
- Control Panel with LCD Display
- Water Tank with Level Indicator
- Filter Basket Holder
- Permanent Filter (or disposable paper filter compatible)
- Thermal Carafe
- Drip Tray



Image 3.1: Close-up view of the filter basket area, showing the removable filter holder for easy access and cleaning.



Image 3.2: The transparent bean hopper filled with fresh coffee beans, ready for grinding.



Image 3.3: A hand interacting with the soft-touch LCD display and control buttons, indicating the user-friendly interface.

## 4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, wash the thermal carafe, filter basket, and permanent filter in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the appliance with a damp cloth.
3. **Positioning:** Place the coffee machine on a stable, flat, heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation around the unit.
4. **First Use Cycle (without coffee):**
  - Fill the water tank with fresh, cold water up to the MAX level.
  - Place the empty filter basket and thermal carafe in position.
  - Plug the appliance into a grounded electrical outlet.
  - Run a brewing cycle without coffee beans or ground coffee. This cleans the internal components and removes

any manufacturing residues.

- Discard the water from the carafe.



Image 4.1: Product dimensions for placement reference: 25cm (depth) x 21cm (width) x 43cm (height).

## 5. OPERATING INSTRUCTIONS

### 5.1 Brewing Coffee with Fresh Beans

1. **Fill Water Tank:** Open the water tank lid and fill with fresh, cold water to the desired level, corresponding to the number of cups you wish to brew (up to 1.0 liter / 8 cups).
2. **Add Coffee Beans:** Open the bean hopper lid and add whole coffee beans. The hopper can hold up to 200g of beans. Close the lid securely.

3. **Insert Filter:** Ensure the permanent filter is correctly placed in the filter basket holder. Alternatively, you can use a standard paper filter (size 4) if preferred.
4. **Place Carafe:** Position the thermal carafe on the warming plate, ensuring it is correctly aligned to activate the drip-stop mechanism.
5. **Select Grind Setting:** Use the grind setting dial to choose your preferred grind fineness. There are 8 grind settings available, from coarse to fine.
6. **Select Coffee Strength/Cups:** Use the control panel to select the desired coffee strength and the number of cups (e.g., 2, 4, 6, or 8 cups).
7. **Start Brewing:** Press the START/STOP button to begin the brewing process. The machine will grind the selected amount of beans and then proceed with brewing.
8. **Enjoy:** Once brewing is complete, the machine will automatically switch off. Carefully remove the thermal carafe and serve. The thermal carafe will keep your coffee warm for an extended period.

## 5.2 Brewing Coffee with Pre-Ground Coffee

Your GASTROBACK coffee machine also allows you to use pre-ground coffee:

1. Follow steps 1, 3, and 4 from "Brewing Coffee with Fresh Beans".
2. **Add Ground Coffee:** Instead of adding beans to the hopper, add the desired amount of pre-ground coffee directly into the permanent filter (or paper filter). Do not overfill.
3. **Select Ground Coffee Mode:** On the control panel, select the pre-ground coffee mode (usually indicated by a specific icon). This bypasses the grinder.
4. **Select Coffee Strength/Cups:** Select the desired coffee strength and number of cups.
5. **Start Brewing:** Press the START/STOP button to begin brewing.

## 5.3 Timer Function

The 24-hour programmable timer allows you to set the machine to start brewing at a specific time:

1. Prepare the machine as if you were going to brew coffee (fill water, add beans/ground coffee, place carafe).
2. Press the "PROG" or "Timer" button on the control panel.
3. Use the hour and minute buttons to set the desired start time.
4. Confirm the setting (refer to the display for confirmation). The machine will now be in standby mode, ready to brew at the programmed time.

# 6. MAINTENANCE

---

## 6.1 Daily Cleaning

Regular cleaning ensures optimal performance and taste:

- Always unplug the appliance before cleaning.
- Wash the thermal carafe, filter basket, and permanent filter after each use with warm, soapy water. Rinse thoroughly and dry. These parts are generally dishwasher safe on the top rack, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the bean hopper regularly to remove oil residue from coffee beans, which can affect flavor and grinder performance. Use a dry brush or cloth.
- Empty and clean the drip tray as needed.



Image 6.1: The filter basket removed from the coffee machine, illustrating ease of access for cleaning.

## 6.2 Descaling

Mineral deposits (limescale) can build up in your coffee machine over time, affecting performance and coffee taste. Descale your machine regularly, depending on water hardness and frequency of use (e.g., every 2-3 months).

1. Prepare a descaling solution according to the descaler manufacturer's instructions (e.g., white vinegar and water, or a commercial descaling agent).
2. Pour the descaling solution into the water tank.
3. Place the empty thermal carafe on the warming plate.
4. Run a brewing cycle without coffee. Allow the full cycle to complete.
5. After the cycle, discard the descaling solution from the carafe.
6. Rinse the machine by running at least two full brewing cycles with fresh, clean water to remove any residual descaling solution.

## 7. TROUBLESHOOTING

| Problem                               | Possible Cause                                                                       | Solution                                                                                                     |
|---------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Coffee does not brew.                 | No water in tank; machine not plugged in; carafe not correctly placed; power outage. | Fill water tank; check power connection; ensure carafe is correctly positioned; check power supply.          |
| Coffee tastes weak or too strong.     | Incorrect coffee-to-water ratio; wrong grind setting; stale coffee beans.            | Adjust coffee amount; change grind setting (finer for stronger, coarser for weaker); use fresh coffee beans. |
| Grinder is not working.               | No beans in hopper; hopper lid not closed properly; grinder clogged.                 | Add beans; ensure lid is secure; clean grinder (refer to maintenance section).                               |
| Water leaks from the machine.         | Water tank not seated correctly; filter basket overflowing; machine needs descaling. | Re-seat water tank; ensure coffee grounds do not block filter; descale the machine.                          |
| Display not working or showing error. | Power issue; internal malfunction.                                                   | Unplug and re-plug the machine; if problem persists, contact customer support.                               |

## 8. SPECIFICATIONS

**Model:** GASTROBACK Grind & Brew Pro Thermo (42711S)

**Type:** Filter Coffee Machine with Integrated Grinder

**Color:** Silver, Black

**Dimensions (L x W x H):** 25 x 21 x 43 cm

**Weight:** 4.6 kg

**Capacity:** 1.0 Liter Thermal Carafe (approx. 8 cups)

**Bean Hopper Capacity:** 200g

**Grind Settings:** 8 levels (conical burr grinder)

**Display:** Soft-Touch LCD Display

**Timer:** 24-hour programmable timer function

**Automatic Shut-off:** Yes

**Power:** 240V

## 9. WARRANTY AND SUPPORT

GASTROBACK provides a warranty for this product in accordance with the legal provisions of your country of purchase. Please retain your proof of purchase for any warranty claims.

For technical support, spare parts, or warranty inquiries, please contact GASTROBACK customer service or visit their official website. Contact information can typically be found on the product packaging or the GASTROBACK official website.

**Online Resources:**

- GASTROBACK Official Website: [www.gastroback.de](http://www.gastroback.de)
- Product Support Page: Refer to the official website for specific product support pages or FAQs.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question