

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ring](#) /

› [Ring Alarm 8-Piece Kit User Manual](#)

Ring Ring Alarm 8-Piece Kit

Ring Alarm 8-Piece Kit User Manual

Model: Ring Alarm 8-Piece Kit

INTRODUCTION

The Ring Alarm 8-Piece Kit is a comprehensive wireless smart home security system designed for easy setup and mobile app control. This kit provides essential components to secure your home, offering peace of mind through expandable protection and optional professional monitoring.

This manual provides detailed instructions for setting up, operating, and maintaining your Ring Alarm system, along with troubleshooting tips and product specifications.

COMPONENTS INCLUDED

Your Ring Alarm 8-Piece Kit includes the following components:

- One (1) Base Station
- One (1) Keypad
- Four (4) Contact Sensors
- One (1) Motion Detector
- One (1) Range Extender



Figure 1: Ring Alarm 8-Piece Kit components, including the Base Station, Keypad, Contact Sensors, Motion Detector, and Range Extender.

SETUP

1. Initial Setup and App Download

1. **Download the Ring App:** Search for "Ring" in your mobile device's app store and download the official Ring app.
2. **Create an Account:** If you don't have one, create a Ring account and follow the on-screen prompts to set up your home location.
3. **Add Your Alarm System:** In the Ring app, select "Set Up a Device" and choose "Security Devices" then "Alarm." Follow the in-app instructions to scan the QR code on your Base Station.

2. Base Station Installation

The Base Station is the central hub of your Ring Alarm system. It should be placed in a central location in your home, preferably near your internet router for optimal connectivity.

- **Power:** Plug the Base Station into a standard power outlet using the included AC adapter.
- **Connectivity:** Connect the Base Station to your internet via Wi-Fi or an Ethernet cable for a more stable connection. Follow the in-app prompts to connect to your home Wi-Fi network.

3. Keypad Placement

The Keypad allows you to arm and disarm your system manually. Place it near your main entry/exit door or in a convenient location where you can easily access it.

- The Keypad can be wall-mounted using the Quick-Release Bracket or placed on any flat surface.
- Ensure it is within range of the Base Station.



**All new look, same
great protection**

Figure 2: The Ring Alarm Keypad, typically placed on a flat surface or mounted near an entry point.

4. Contact Sensor Installation

Contact Sensors detect when a door or window is opened. Install them on frequently used entry points.

- Mount the sensor and its magnet component on the door/window frame and the door/window itself, respectively.
- Ensure the sensor and magnet are within 1 inch of each other when the door/window is closed.
- Use the included double-sided tape or screws for installation.



Quick and easy do-it-yourself installation

Figure 3: Installation of a Ring Alarm Contact Sensor on a door frame, demonstrating the ease of DIY setup.

5. Motion Detector Placement

Motion Detectors sense movement within a room. Place them in corners or on flat walls to cover key areas.

- Install at a height of approximately 7.5 feet (2.3 meters) for optimal detection.
- Avoid placing near heat sources or direct sunlight, which can cause false alarms.

6. Range Extender Setup

The Range Extender boosts the Z-Wave signal from your Base Station, ensuring all your sensors have a strong connection. Plug it into a standard power outlet halfway between your Base Station and the furthest sensor.

Security Modes


The Ring Alarm system operates in three main security modes:

- **Disarmed:** The system is off, and no sensors will trigger the alarm.
- **Home:** Activates select sensors (e.g., perimeter sensors like Contact Sensors) while allowing you to move freely inside your home. Motion Detectors are typically bypassed in this mode.
- **Away:** Activates all sensors, including Motion Detectors, for full protection when no one is home.

Arming and Disarming

You can arm and disarm your Ring Alarm system using the Keypad or the Ring App.

- **Using the Keypad:** Enter your 4-digit access code, then press the desired mode button (Disarmed, Home, or Away).
- **Using the Ring App:** Open the Ring app, navigate to the Alarm dashboard, and tap the desired mode button.

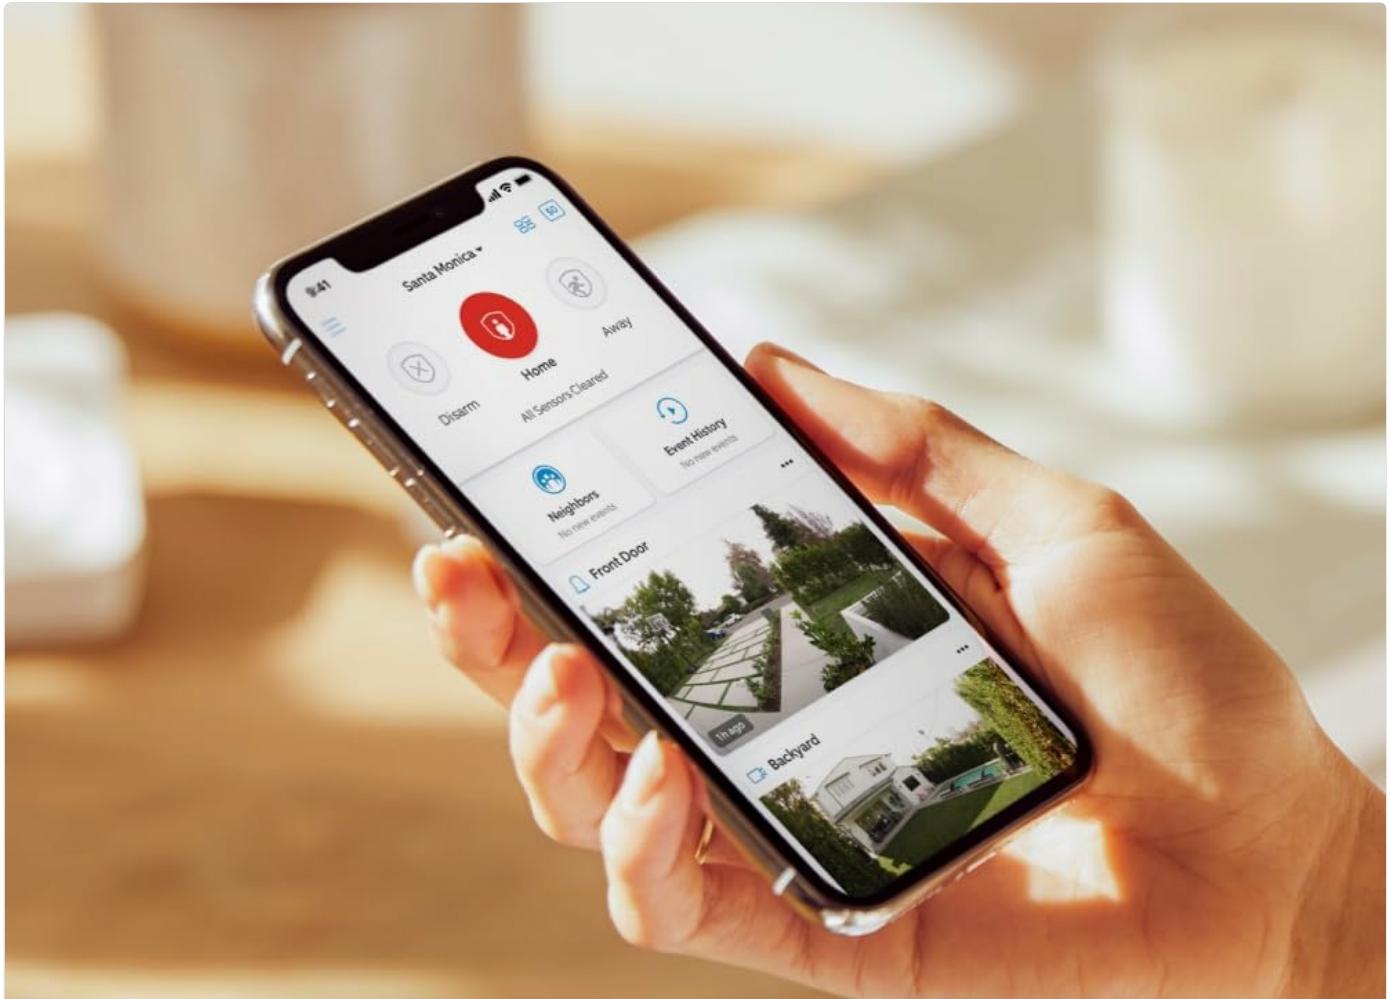

Arm and disarm from the Ring App with an eligible Ring Home subscription

Figure 4: The Ring App provides convenient remote control for arming and disarming your security system.

Alexa Compatibility

The Ring Alarm system is compatible with Alexa. You can enable the Ring Skill in the Alexa app to arm and disarm your system using voice commands (requires a verbal PIN for disarming for security).

MAINTENANCE

Battery Replacement

- **Contact Sensors:** Use CR2032 coin cell batteries. The Ring app will notify you when battery levels are low.
- **Motion Detector:** Uses 2 AA batteries.
- **Keypad:** Features a rechargeable battery. Plug it into a power outlet when the battery is low.

Base Station Battery Backup

The Base Station includes a rechargeable 24-hour battery backup, ensuring your system remains operational during power outages. If you have a Ring Home Standard subscription, cellular backup will also keep your system online if Wi-Fi goes down.

Software Updates

Your Ring Alarm devices receive automatic software security updates to ensure optimal performance and security. Ensure your Base Station is connected to the internet for these updates.

TROUBLESHOOTING

Common Issues and Solutions

- **Device Offline:**
 - Check the power connection of the device.
 - Ensure the device is within range of the Base Station or Range Extender.
 - Verify your home Wi-Fi network is active and the Base Station is connected.
- **Sensor Not Responding:**
 - Check the battery of the sensor and replace if necessary.
 - Ensure the sensor and its magnet (for Contact Sensors) are correctly aligned and within the specified distance.
 - Try removing and re-adding the sensor in the Ring app.
- **False Alarms:**
 - For Motion Detectors, ensure they are not placed near heat sources, vents, or in direct sunlight.
 - Verify Contact Sensors are securely mounted and not shifting.
 - Adjust sensitivity settings for Motion Detectors in the Ring app if available.
- **Keypad Not Responding:**
 - Ensure the Keypad is charged or plugged in.
 - Verify it is within range of the Base Station.

For further assistance, refer to the official Ring support page or contact Ring customer service.

SPECIFICATIONS

Feature	Detail
Brand	Ring
Model	Ring Alarm 8-Piece Kit
Color	WHITE
Base Station Dimensions	6.65 in x 6.65 in x 1.46 in
Keypad Dimensions	4.13 in x 4.41 in x 0.75 in
Contact Sensor Dimensions	1.56 in x 2.09 in x 0.55 in

Feature	Detail
Motion Detector Dimensions	2.6 in x 2.6 in x 1.53 in
Range Extender Dimensions	1.86 in x 3.19 in x 1.66 in
Connectivity	Ethernet, Wi-Fi, Z-Wave, Bluetooth (for setup)
Base Station Power	100-240V 50/60Hz AC Adapter (Included)
Base Station Battery Backup	Rechargeable 24-hour battery backup
Contact Sensor Battery	CR2032 coin cell batteries (Approx. 3 years life)
Motion Detector Battery	2 AA batteries
Operating Conditions (Base Station)	-4°F to 104°F (-20°C to 40°C)
Operating Conditions (Indoor Sensors)	32°F to 120°F (0°C to 49°C)
Security Modes	Disarmed, Away, and Home

WARRANTY AND SUPPORT

Warranty Information

The Ring Alarm Kit includes a 1-year limited warranty and service. Use of the Ring Alarm Kit is subject to specific terms and conditions.

Customer Support

For additional information, troubleshooting, or to view monitoring licenses, please visit the official Ring support resources:

- [Ring Licenses Information](#)
- [Ring Support Page](#) (General support and FAQs)

© 2024 Ring LLC. All rights reserved.

Related Documents - Ring Alarm 8-Piece Kit

	Ring Alarm Range Extender - 2nd Generation User Manual User manual for the Ring Alarm Range Extender (2nd Generation), detailing its introduction, setup, installation, Z-Wave instructions, inclusion and exclusion processes, factory reset, and technical specifications.
---	---

Documents - Ring – Ring Alarm 8-Piece Kit

PRODUCT
CATALOG
HOME SECURITY



Helping you live smartly.

DIGITALHOMEPH INCORPORATED
WWW.DIGITALHOME.PH ADDRESS : TAGUIG CITY | CEBU CITY

[\[pdf\] Dimension Guide Accessories Catalog](#)

Home Security DAFw2IB0DNc BAEG8W3kcxU allen jay cagaanan Download Product Catalog

Digitalhome phDigitalhome 976fc969 40ce 4b5c af9e ef2be3c0ff09cdn shopify s files 1 2107 5383
ef2be3c0ff09 |||

PRODUCT CATALOG HOME SECURITY DIGITALHOMEPH INCORPORATED

WWW.DIGITALHOME.PH ADDRESS : TAGUIG CITY ... rice 15,995.00 - 20,995.00

WWW.DIGITALHOME.PH DIGITALHOMEPH INCORPORATED RING SECURITY

ALRN100 **RING ALARM 8-PIECE KIT 2ND GEN** Base Station Power: 100-240V

50/60Hz AC Battery life: Rechargeable...

lang:en **score:10** filesize: 455.98 K page_count: 8 document date: 2023-10-14