

[Manuals.plus](#) /

› [Nexera](#) /

› Nexera Rustik 72-inch TV Stand with 3 Drawers User Manual

Nexera 105431

Nexera Rustik 72-inch TV Stand with 3 Drawers User Manual

Model: 105431

[Safety Information](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe use, and care of your Nexera Rustik 72-inch TV Stand. This unit features three open storage spaces and three drawers, designed for organizing electronic components and personal items. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

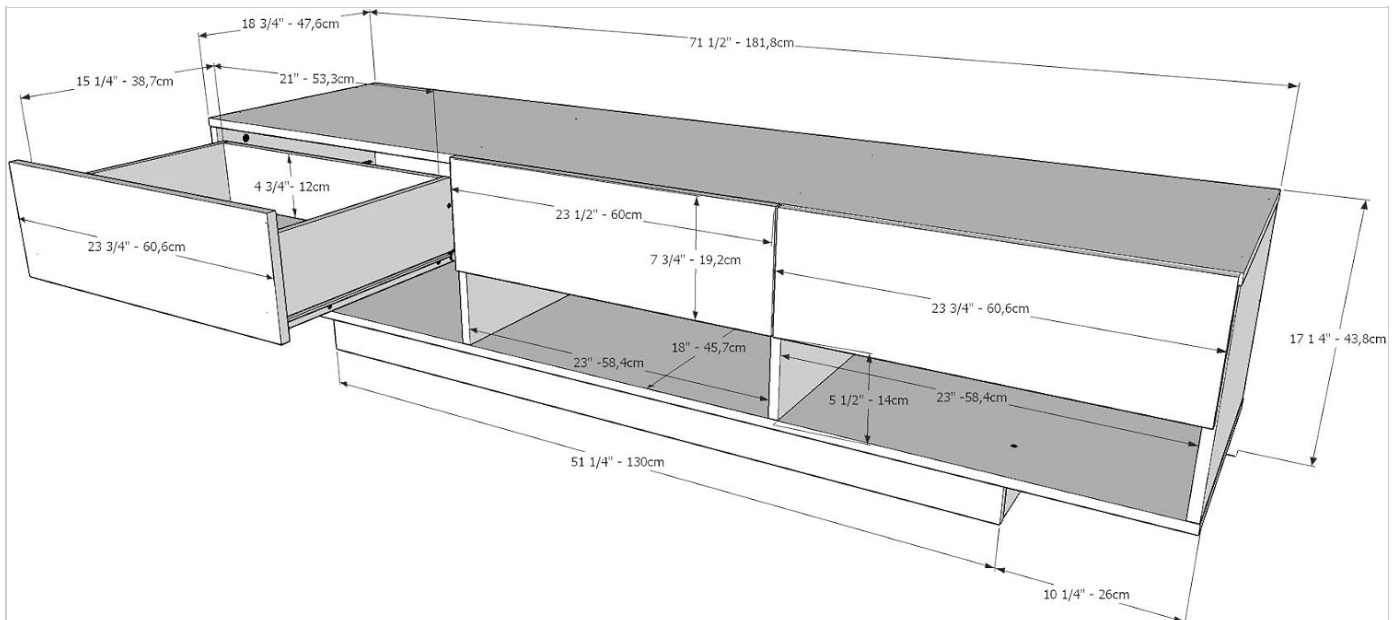


Image: The Nexera Rustik 72-inch TV Stand, showcasing its design with a television placed on top, three open compartments for media devices, and three closed drawers. The stand is finished in a walnut brown.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- Assembly may require two people to avoid injury due to the weight and size of components.
- Do not exceed the maximum weight capacity of 101 pounds (45.8 kg) on the top surface to prevent structural damage or injury.
- Always follow the assembly instructions carefully to ensure safety and proper construction.
- Ensure all fasteners are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- Do not allow children to climb on or play with the TV stand.
- Place the TV stand on a level, stable surface to prevent tipping.

SETUP (ASSEMBLY INSTRUCTIONS)

Assembly of the Nexera Rustik TV Stand is required. It is recommended that two adults perform the assembly. Ensure you have adequate space and the following tools:

- Phillips head screwdriver
- Hammer (optional, for dowels)

Before starting, unpack all components and verify against the parts list (not provided in this document, refer to packaging). Separate and identify all hardware. Follow the step-by-step instructions provided with your product packaging. General assembly involves:

1. Assemble the base structure.
2. Attach side panels and internal dividers.
3. Install the back panel (if applicable).
4. Assemble and install the three drawers onto metal slides.
5. Attach the top surface.



Image: A detailed dimensional diagram of the TV stand, illustrating its overall length (71 1/2 inches / 181.8 cm), height (17 1/4 inches / 43.8 cm), and depth (18 3/4 inches / 47.6 cm). It also shows the internal dimensions of the drawers and open shelves, aiding in component

identification during assembly.

OPERATING INSTRUCTIONS (USAGE)

The Nexera Rustik TV Stand is designed for functional use in your living space.

Placing Your Television

- The stand is suitable for televisions with screens up to 80 inches.
- Ensure the television's weight does not exceed the stand's maximum weight limit of 101 pounds (45.8 kg).
- Center the television on the top surface for optimal stability.

Using Storage Compartments

- **Open Spaces:** Utilize the three open compartments for electronic components such as media players, gaming consoles, or soundbars. These spaces are designed for optimal airflow and feature wire management cutouts (if present, refer to product design) to keep cables organized.
- **Drawers:** The three storage drawers operate on metal slides, providing smooth access for storing personal belongings, remote controls, or other items you wish to keep out of sight.



Image: A close-up of one of the TV stand's drawers, partially open, demonstrating its functionality and the wood-grain finish. This highlights the accessible storage for various items.

MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** The melamine finish is scratch, stain, and water-resistant. Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Spills:** Promptly wipe up any spills to prevent staining or water damage, especially on edges where moisture could penetrate.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.

TROUBLESHOOTING

If you encounter issues with your TV stand, consider the following common solutions:

- **Wobbly Stand:** Ensure the stand is placed on a level surface. Check all assembly screws and re-tighten any that are loose.
- **Drawers Not Sliding Smoothly:** Verify that the drawer slides are correctly installed and aligned. Check for any obstructions in the drawer tracks. Ensure the drawer contents are not exceeding the weight capacity of the drawer.
- **Damaged Parts:** If any parts arrived damaged or become damaged during assembly, contact the retailer or manufacturer for replacement parts. Do not attempt to assemble or use the product with damaged components.
- **Missing Hardware:** If hardware is missing, carefully check all packaging materials. If still missing, contact the retailer or manufacturer for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Nexera
Model Name	Nexera 105431 Rustik TV Stand
Product Dimensions (D x W x H)	18.75"D x 71.5"W x 17.25"H (47.6 cm D x 181.6 cm W x 43.8 cm H)
Color	Brown (Walnut finish)
Material	Engineered Wood (Melamine finish)
Weight Limit (Top Surface)	101 Pounds (45.8 kg)
Item Weight	222 Pounds (100.7 kg)
Number of Drawers	3
Number of Open Shelves	3
Assembly Required	Yes
Recommended Uses	Decorative items, Electronic components

WARRANTY & SUPPORT

For specific warranty information, including coverage details and duration, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Nexera products typically come with a manufacturer's warranty against defects in materials and workmanship.

For customer support, missing parts, or further assistance, please contact your retailer or visit the official Nexera website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question