

[Manuals.plus](#) /

› [UBay](#) /

› UBay WS-1688 Remote Control Instruction Manual for Westinghouse TVs

UBay WS-1688

UBay WS-1688 Remote Control Instruction Manual

For Westinghouse WD49FB1018, WD32HB1120, WD32HKB1001, and Compatible TV Models

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your UBay WS-1688 replacement remote control. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

2. PRODUCT OVERVIEW

The UBay WS-1688 is a direct replacement remote control designed for various Westinghouse TV models. It offers full functionality without the need for programming, providing a seamless transition from your original remote.



Image 1: Front view of the UBay WS-1688 remote control, showing all buttons and their labels.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

3.2 Compatibility

The UBay WS-1688 remote control is compatible with the following Westinghouse TV models:

- WD24HBB6106
- WD40FX1170
- WD40HB6106
- WD48FAB100
- WD32HD1120-C
- WD24HAB101
- WD32HD1390
- WD24HN1108
- WD19HN108
- WD49FB1018
- WD32HB1120
- WD40FB1530
- WD32HB1390
- WD32HKB1001

No programming or setup is required. Once batteries are installed, the remote is ready for use with compatible models.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Westinghouse TV's infrared sensor. Press the desired button to perform the corresponding function.

4.1 Button Functions

Button	Function
POWER ()	Turns the TV on or off.
P.MODE	Selects picture mode (e.g., Standard, Dynamic, Movie).
S.MODE	Selects sound mode (e.g., Standard, Music, Movie).
SLEEP	Sets the sleep timer for automatic TV shutdown.
ASPECT	Changes the screen aspect ratio.

Button	Function
USB	Switches to USB input mode.
0-9	Direct channel selection.
-	Used for entering sub-channels (e.g., 7-1).
MUTE	Mutes or unmutes the TV audio.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel up or down.
SOURCE	Selects the input source (e.g., HDMI, AV, Component).
MENU	Opens the TV's main menu.
MTS	Selects Multi-channel Television Sound (e.g., Stereo, SAP).
INFO	Displays current channel information.
FREEZE	Pauses the current image on screen.
RETURN	Returns to the previous menu or channel.
Navigation Arrows	Navigates through menus and options.
OK	Confirms selections in menus.
CH.LIST	Displays the channel list.
EXIT	Exits the current menu or function.
Play/Pause, Stop, Rewind, Fast Forward, Previous, Next	Media playback controls for compatible devices (e.g., USB media).
REPEAT	Repeats media playback.
C.C	Activates or deactivates Closed Captions.
V-CHIP	Accesses V-Chip parental control settings.
AUTO	Initiates auto-tuning or auto-scan for channels.
ADD/ERASE	Adds or erases channels from the list.
FAV	Accesses favorite channels list.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm that your TV model is listed as compatible in Section 3.2.
- **Buttons are unresponsive:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris.
 - Replace batteries.

7. SPECIFICATIONS

- **Model:** UBay WS-1688
- **Dimensions:** 7 x 2 x 0.5 inches (approximately)
- **Item Weight:** 2.68 ounces (without batteries)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Westinghouse Televisions (specific models listed in Section 3.2)
- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

For any questions regarding the UBay WS-1688 remote control, please refer to the retailer's return policy or contact the manufacturer directly for support. Keep your purchase receipt for warranty claims, if applicable.