

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [ROMOON](#) /

> [ROMOON 4-Section Laundry Sorter Cart Instruction Manual](#)

ROMOON 4-Section Laundry Sorter Cart

ROMOON 4-Section Laundry Sorter Cart Instruction Manual

Model: 4-Section Laundry Sorter Cart (Black)

1. INTRODUCTION

Thank you for choosing the ROMOON 4-Section Laundry Sorter Cart. This manual provides essential information for the safe assembly, operation, and maintenance of your new laundry sorter. Please read these instructions thoroughly before use and retain them for future reference.



Image: The ROMOON 4-Section Laundry Sorter Cart in black, featuring four removable fabric bags within a sturdy metal frame on wheels.

2. PRODUCT FEATURES

- **4-Section Design:** Four individual compartments for efficient sorting of laundry (e.g., lights, darks, delicates).
- **Removable Bags:** Each bag can be easily lifted out for transport to the washing machine.
- **Heavy-Duty Lockable Wheels:** Allows for smooth movement and secure placement.
- **Sturdy Metal Frame:** Constructed for durability and stability, capable of holding up to 100 lbs.
- **Waterproof Oxford Fabric:** Bags are made from thickened, easy-to-clean, and waterproof Oxford fabric.
- **Space-Saving Design:** Modern dark-color design fits well in various room settings and tight spaces.

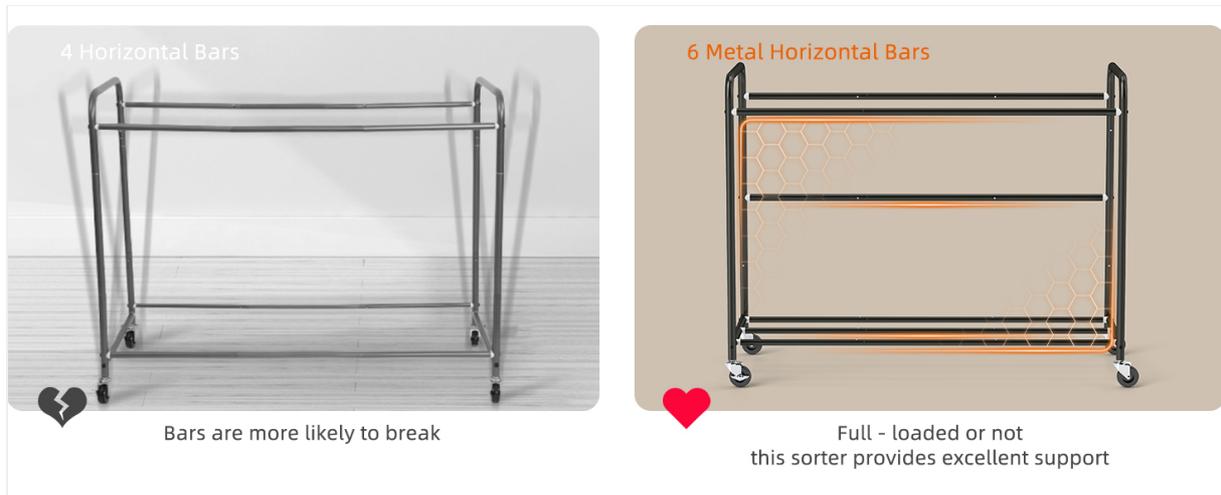


Image: Detailed view of the thickened, waterproof Oxford fabric of the laundry bags, highlighting its easy-clean properties.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Metal Frame (disassembled)
- 4 x Removable Oxford Fabric Bags
- 4 x Heavy-Duty Wheels (2 with locks)
- 1 x Assembly Kit (screws, wrench, etc.)
- 1 x Instruction Manual (this document)

4. SETUP INSTRUCTIONS

Assembly typically takes approximately 25 minutes. Follow these steps carefully:

1. **Unpack Components:** Lay out all parts on a clean, flat surface. Refer to the parts list in the assembly kit to ensure all pieces are accounted for.
2. **Assemble the Base Frame:** Connect the horizontal bars to the vertical side frames using the provided screws. Ensure all connections are secure but do not overtighten initially.

3. **Attach Wheels:** Insert the wheels into the designated slots on the bottom of the frame. Ensure the two lockable wheels are placed on the same side for easier access.
4. **Install Upper Bars:** Secure the upper horizontal bars to the top of the vertical side frames. These bars will support the laundry bags.
5. **Hang Laundry Bags:** Attach the four Oxford fabric bags to the upper bars using their integrated hooks. Ensure each bag is securely fastened.
6. **Final Tightening:** Once all components are in place, carefully tighten all screws to ensure the frame is stable and secure.

After ▾



▲ Before

Image: Illustration of the 4x360° rotating wheels, including two with locking mechanisms, designed for effortless movement and stability.

5. OPERATING INSTRUCTIONS

- **Sorting Laundry:** Utilize the four separate bags to sort clothes by color, fabric type, or washing requirements (e.g., lights, darks, delicates, towels).
- **Moving the Sorter:** Unlock the two lockable wheels by flipping their levers. Push or pull the cart to

your desired location.

- **Securing the Sorter:** Once in position, engage the locks on the two wheels to prevent unintended movement.
- **Removing Bags:** To transport laundry to the washing machine, simply lift the individual bags off their hooks using the integrated handles.
- **Re-attaching Bags:** After emptying or washing, re-hang the bags securely onto the frame's hooks.



Image: The laundry sorter cart positioned in a laundry room, demonstrating its use for sorting clothes into designated sections.

6. MAINTENANCE AND CARE

- **Cleaning Bags:** The Oxford fabric bags are waterproof and easy to clean. Wipe them with a damp cloth and mild detergent as needed. Allow to air dry completely before re-attaching.
- **Frame Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Wheel Maintenance:** Periodically check the wheels for any lint or debris that may hinder smooth operation. Clean as necessary.
- **Tighten Fasteners:** Occasionally check all screws and fasteners and tighten them if they have

loosened over time to maintain stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is unstable or wobbly.	Loose screws or uneven surface.	Ensure all screws are tightened. Move the cart to a flat, even surface.
Wheels do not roll smoothly.	Debris caught in wheels or locks engaged.	Check for and remove any debris from the wheels. Ensure wheel locks are disengaged.
Bags slip off hooks.	Bags not properly hung or overloaded.	Ensure bags are fully seated on all hooks. Avoid exceeding the bag's capacity.

8. SPECIFICATIONS

Brand: ROMOON

Model: 4-Section Laundry Sorter Cart

Material: Oxford Cloth, Metal Frame

Color: Black

Product Dimensions: 39.37"L x 16.93"W x 31.5"H

Capacity: 172 Liters (approximately 12 gallons per bag)


Item Weight: 10.56 Pounds

Number of Compartments: 4

Special Features: Handle, Non-Slip, Removable, Wheeled, Waterproof

6 Metal horizontal bars

The frame more stable

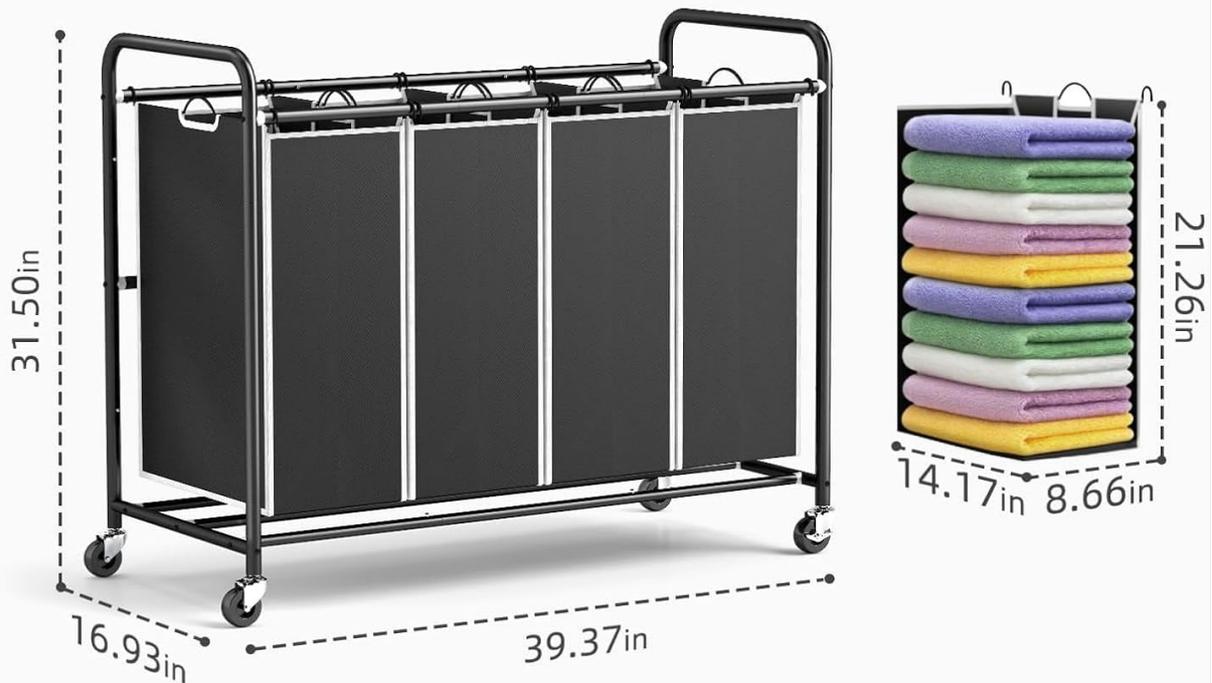

Each bag is able to hold **12** gallons
≈ **15** pairs of jeans can fit into each bag



Image: Technical drawing illustrating the length, width, and height of the laundry sorter, along with individual bag dimensions and capacity.

9. WARRANTY AND SUPPORT

This ROMOON Laundry Sorter Cart comes with an **18-Month Warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact ROMOON customer service through the retailer's platform or visit the official ROMOON store online. Please have your purchase receipt and product model information ready.

Manufacturer: ROMOON