

Marea B35332/3

Marea B35332/3 Digital Men's Watch Instruction Manual

Model: B35332/3

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Marea B35332/3 Digital Men's Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

PRODUCT OVERVIEW

The Marea B35332/3 is a robust digital watch featuring a clear display and multiple functions. Its design includes a durable gold-tone case and bracelet, suitable for daily wear.



Figure 1: Front view of the Marea B35332/3 Digital Watch. The watch features a digital display showing time, date, and day of the week. Buttons are labeled 'LIGHT', 'MODE', 'START', and 'SET' around the bezel.

Button Functions:

- **LIGHT:** Activates the backlight for improved visibility in low-light conditions.
- **MODE:** Cycles through different operational modes (e.g., Time, Chronograph, Alarm).
- **START:** Used to start/stop functions in Chronograph mode or adjust settings in setting modes.
- **SET:** Used to confirm settings or enter setting modes.

SETUP: INITIAL TIME AND DATE SETTING

1. From the Timekeeping Mode, press and hold the **SET** button until the seconds begin to flash. This indicates you are in setting mode.

2. Press the **MODE** button to cycle through the settings: Seconds → Hours → Minutes → Year → Month → Day → 12/24-hour format.
3. Use the **START** button to adjust the flashing value. Hold **START** to rapidly advance the value.
4. Once all settings are correct, press the **SET** button again to exit the setting mode.

Note: The day of the week will automatically adjust once the year, month, and day are set correctly.

OPERATING MODES

1. Timekeeping Mode

This is the default mode, displaying the current time (hours, minutes, seconds), day of the week, and date. To switch between 12-hour and 24-hour formats, enter the setting mode as described above and adjust the 12/24-hour setting.

2. Chronograph (Stopwatch) Mode

- From Timekeeping Mode, press the **MODE** button once to enter Chronograph Mode. The display will show "00:00:00" or the last recorded time.
- Press **START** to begin timing.
- Press **START** again to stop timing.
- While the stopwatch is stopped, press **SET** to reset the chronograph to "00:00:00".
- Press **MODE** to return to Timekeeping Mode.

3. Alarm Mode

- From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The display will show the alarm time.
- Press and hold the **SET** button until the alarm hours begin to flash.
- Press **MODE** to switch between setting hours and minutes.
- Use the **START** button to adjust the flashing value.
- Press **SET** to confirm the alarm time and exit setting mode.
- To turn the alarm ON/OFF, press the **START** button while in Alarm Mode (not in setting mode). An alarm icon will appear/disappear to indicate its status.
- When the alarm sounds, press any button to stop it.

4. Backlight Function

Press the **LIGHT** button at any time to illuminate the display for a few seconds. This feature is useful in dark environments.

MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and smudges. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance (WR5ATM):** Your watch is water resistant to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming. Do not operate buttons while the watch is submerged in water. Avoid exposure to hot water, steam, or sudden temperature changes, as this can compromise the water seals.
- **Battery Replacement:** When the display becomes dim or functions irregularly, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the "Setup: Initial Time and Date Setting" section to reset the time.
Buttons are unresponsive.	Watch may be in a specific mode or internal issue.	Try pressing the MODE button repeatedly to cycle through modes. If unresponsive, a battery replacement might be needed, or contact support.
Water inside the display.	Water resistance compromised.	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

SPECIFICATIONS

Brand: Marea

Model: B35332/3

Display Type: Digital

Functions: Time (12/24-hour), Date, Day of Week, Chronograph (1/100 second), Alarm, Backlight

Water Resistance: WR5ATM (50 meters / 165 feet) - Suitable for short periods of recreational swimming. Not suitable for diving or snorkeling.

Case Material: Metal (assumed based on product image)

Band Material: Metal (assumed based on product image)

Battery Type: Button cell (specific type not provided, consult technician for replacement)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Marea website. If you encounter any issues not covered in this manual or require further assistance, please contact Marea customer support through their official channels.