

[Manuals.plus](#) /

› [UBay](#) /

› UBay Remote Control Instruction Manual

UBay UBay ONA50UB19E05

Instruction Manual for UBay Remote Control

Model: UBay ONA50UB19E05 / ONC50UB18C05

INTRODUCTION

This manual provides comprehensive instructions for the UBay Replacement Remote Control, designed for ONN 4K Ultra HD (2160P) UHD LED TVs. This remote is pre-programmed and ready for use upon battery installation, requiring no additional setup or programming.

Compatible ONN TV Models include, but are not limited to: ONA65UB19E07, ONA50UB19E09, ONC50UB18C05, ONA43UB19E04, ONA24HB19E02, ONA50UB19E05, ONA55UB19E06.

SAFETY INFORMATION

- Do not expose the remote control to direct sunlight or heat sources.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not immerse the remote control in water or any other liquid.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of used batteries according to local regulations.

PRODUCT OVERVIEW

The UBay remote control features an ergonomic design with clearly labeled buttons for intuitive operation of your ONN TV. Below is a detailed layout of the remote's buttons and their functions.



Image: Front view of the UBay remote control, showing all buttons clearly.

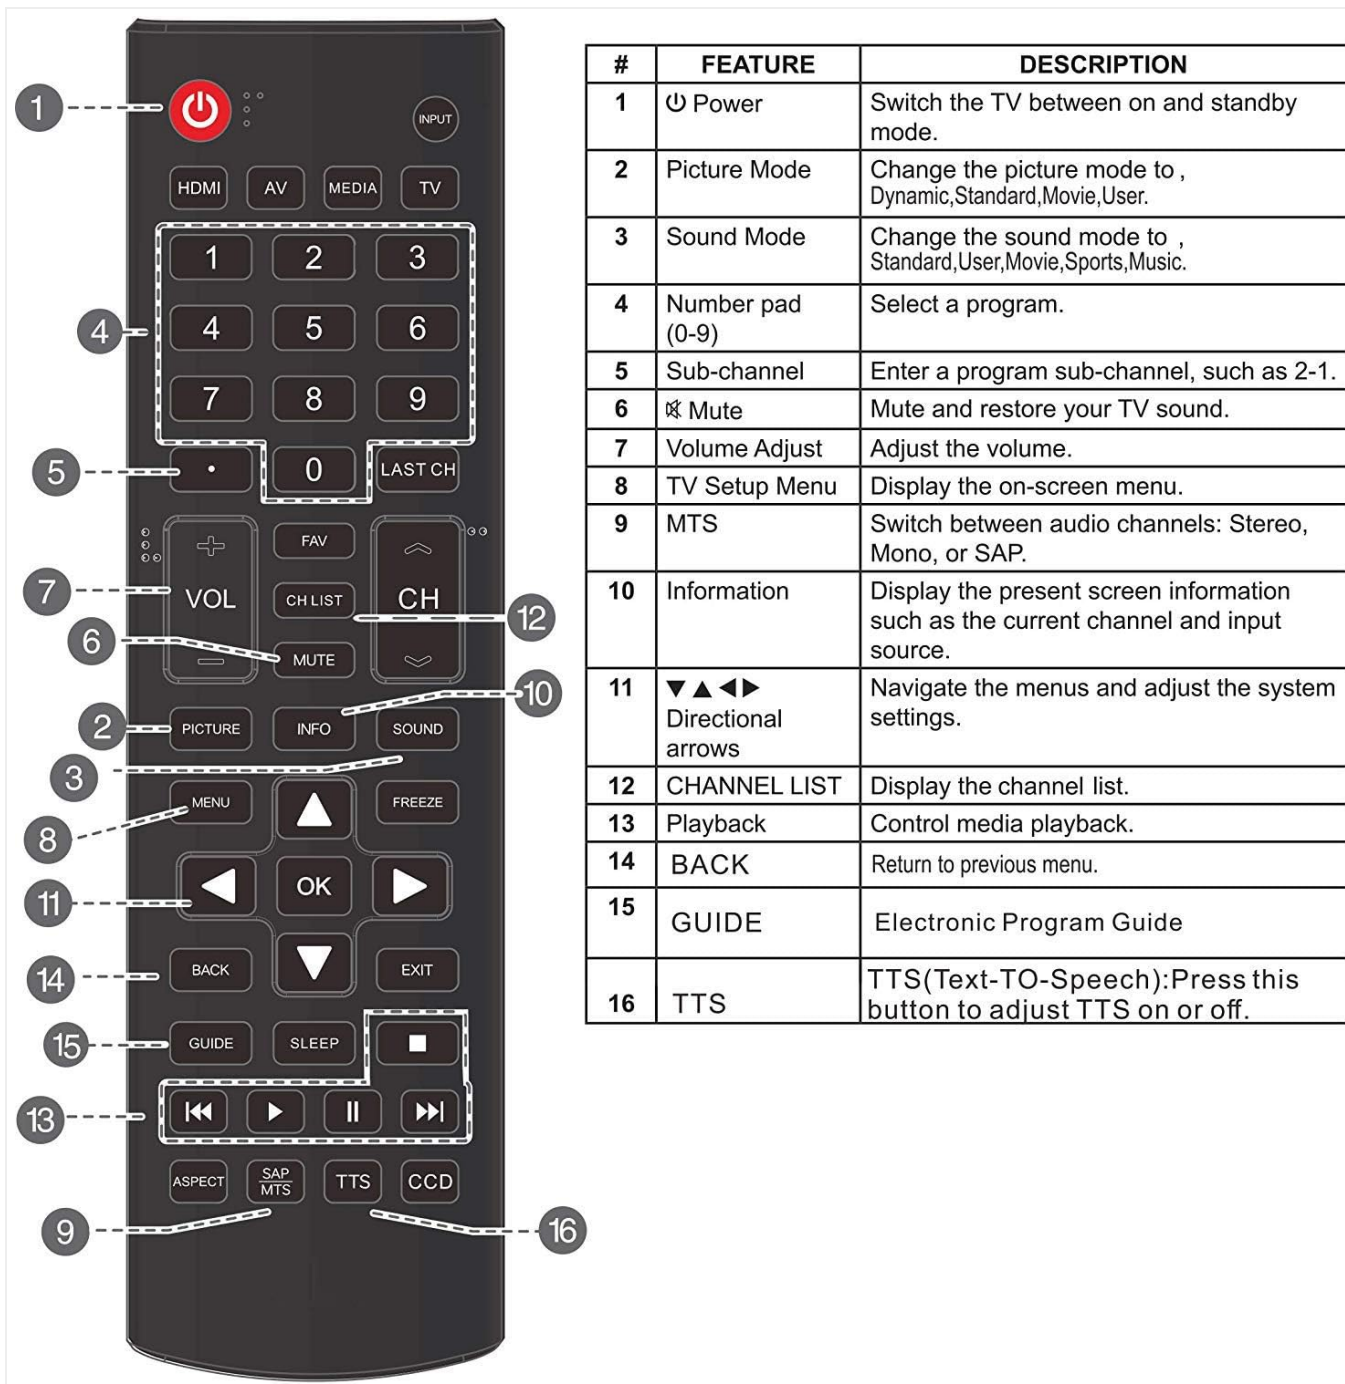


Image: Diagram of the UBay remote control with numbered features (1-16) and a corresponding table of descriptions.

REMOTE CONTROL (CONT.)

#	FEATURE	DESCRIPTION
17	MEDIA	Switch to the MEDIA input.
18	ASPECT	Change the aspect ratio: Normal, Wide, Cinema, FULL/Point TO Point (HDMI/VGA).
19	Sleep	Set the TV sleep timer: off, 5, 10, 15, 30, 60, 90, 120, 180, or 240 minutes.
20	LAST CH	Return to previous channel.
21	Channel Selection	Select a channel.
22	INPUT	Select an input source: TV, AV, Component, HDMI(ARC), PC, Media
23	FREEZE	Freeze the picture.
24	ENTER/OK	Confirm the selection in the menu.
25	EXIT	Exit the on-screen menu.
26	CCD	Change closed caption settings: CC On, CC Off, CC on Mute.
27	FAV	Display the favorite channel list.

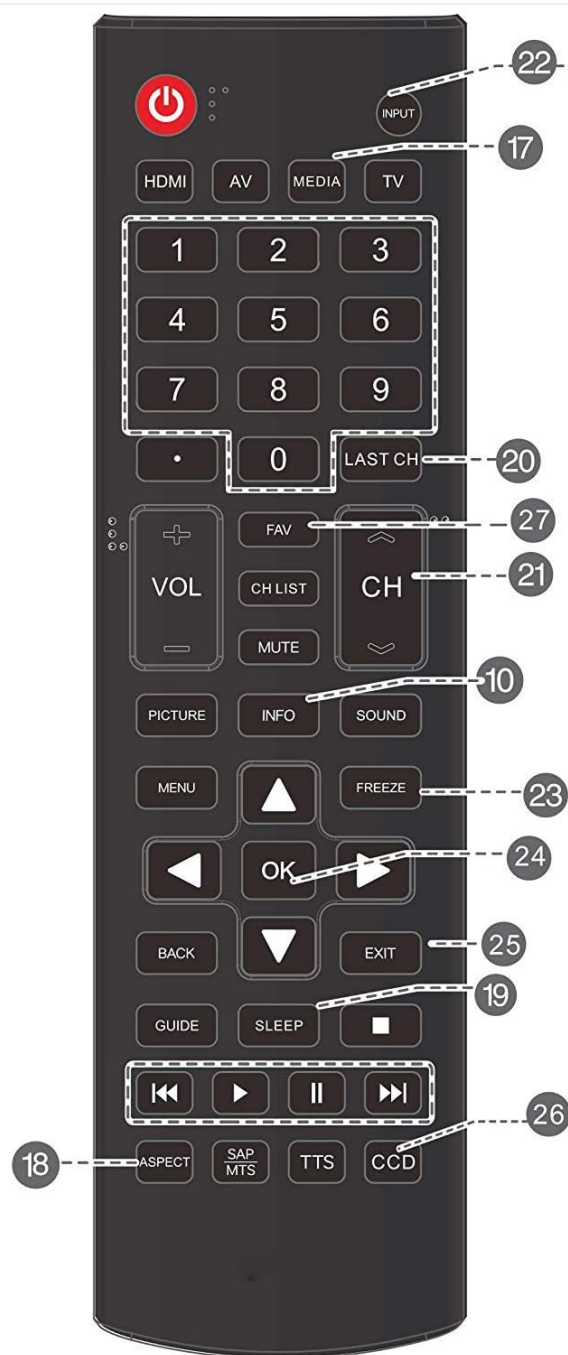


Image: Second diagram of the UBay remote control with numbered features (17-27) and a corresponding table of descriptions.

Button Functions (Part 1)

#	Feature	Description
1	Power	Switch the TV between on and standby mode.
2	Picture Mode	Change the picture mode to Dynamic, Standard, Movie, User.
3	Sound Mode	Change the sound mode to Standard, User, Movie, Sports, Music.
4	Number pad (0-9)	Select a program.
5	Sub-channel	Enter a program sub-channel, such as 2-1.
6	Mute	Mute and restore your TV sound.
7	Volume Adjust	Adjust the volume.

#	Feature	Description
8	TV Setup Menu	Display the on-screen menu.
9	MTS	Switch between audio channels: Stereo, Mono, or SAP.
10	Information	Display the present screen information such as the current channel and input source.
11	Directional arrows	Navigate the menus and adjust the system settings.
12	CHANNEL LIST	Display the channel list.
13	Playback	Control media playback.
14	BACK	Return to previous menu.
15	GUIDE	Electronic Program Guide
16	TTS(Text-To-Speech)	Press this button to adjust TTS on or off.

Button Functions (Part 2)

#	Feature	Description
17	MEDIA	Switch to the MEDIA input.
18	ASPECT	Change the aspect ratio: Normal, Wide, Cinema, FULL/Point To Point (HDMI/VGA).
19	Sleep	Set the TV sleep timer: off, 5, 10, 15, 30, 60, 90, 120, 180, or 240 minutes.
20	LAST CH	Return to previous channel.
21	Channel Selection	Select a channel.
22	INPUT	Select an input source: TV, AV, Component, HDMI(ARC), PC, Media.
23	FREEZE	Freeze the picture.
24	ENTER/OK	Confirm the selection in the menu.
25	EXIT	Exit the on-screen menu.
26	CCD	Change closed caption settings: CC On, CC Off, CC on Mute.
27	FAV	Display the favorite channel list.

SETUP

The UBay remote control is pre-programmed and does not require any manual setup or pairing with your ONN TV. Simply install the batteries, and it will be ready for immediate use.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to operate your compatible ONN TV.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your ONN 4K Ultra HD (2160P) UHD LED TV. Point the remote directly at the TV's infrared sensor for optimal performance.

- **Power On/Off:** Press the **Power** button (1) to turn the TV on or off.
- **Volume Control:** Use the **VOL +/-** buttons (7) to increase or decrease the volume.
- **Channel Selection:** Use the **CH +/-** buttons (21) to change channels sequentially, or use the **Number Pad** (4) to directly enter a channel number.
- **Input Source:** Press the **INPUT** button (22) to cycle through available input sources (e.g., HDMI, AV, TV).
- **Menu Navigation:** Use the **Directional Arrows** (11) to navigate through on-screen menus and the **OK/ENTER** button (24) to confirm selections.
- **Mute:** Press the **MUTE** button (6) to silence the TV audio. Press again to restore.
- **Playback Controls:** Use the **Playback** buttons (13) for media control (Play, Pause, Fast Forward, Rewind, Stop).

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from extreme temperatures and humidity.

TROUBLESHOOTING

If you experience issues with your UBay remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not working or unresponsive.	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote is out of range.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's sensor. Move closer to the TV.
Some buttons are not functioning.	Dirt or debris under the button. Internal malfunction.	Clean the remote surface. If the issue persists, the remote may require replacement.
TV does not respond to remote commands.	TV is off or unplugged. TV's IR sensor is blocked or faulty. Remote is not compatible with the TV model.	Ensure the TV is powered on. Check for obstructions in front of the TV's IR sensor. Verify your TV model is listed as compatible.

As this remote is pre-programmed, no programming steps are required for its operation.

SPECIFICATIONS

- Model Number:** UBay ONA50UB19E05 / ONC50UB18C05
- Brand:** UBay
- Compatible Devices:** ONN 4K Ultra HD (2160P) UHD LED Televisions
- Max Number of Supported Devices:** 1
- Color:** Black
- Special Feature:** Ergonomic
- Product Dimensions:** 6.8 x 1.8 x 0.6 inches

Item Weight: 2.08 ounces

Manufacturer: UBay Factory

Date First Available: October 29, 2019

WARRANTY AND SUPPORT

This UBay remote control comes with a **30-day hassle-free return policy**. For any issues or support inquiries, please contact your retailer or the manufacturer directly. Please refer to your purchase documentation for specific warranty terms and contact information.

© 2024 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question