

[Manuals.plus](#) /

› [UBay](#) /

› User Manual for UBay Replacement Remote Control ONN ONC18TV001 TV

UBay UBay ONC18TV001

User Manual for UBay Replacement Remote Control

Model: ONN ONC18TV001

INTRODUCTION

This manual provides detailed instructions for the UBay replacement remote control, designed for seamless compatibility with ONN ONC18TV001 series televisions. This remote offers full access to all essential functions without the need for complex programming.

SETUP

Battery Installation

The remote control requires two (2) AAA 1.5V batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.

No programming or pairing is required. The remote is ready to use once batteries are installed.



Figure 1: Front view of the UBay replacement remote control, showing the button layout including power, input, navigation, volume, channel, and number keys.

OPERATING INSTRUCTIONS

This replacement remote control provides full functionality for your ONN ONC18TV001 TV. Simply point the remote at the TV's infrared sensor and press the desired button.

Key Functions:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right) & OK:** Used for menu navigation and selection.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel.
- **MUTE:** Mutes or unmutes the TV audio.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **MENU:** Opens the TV's main menu.
- **INFO:** Displays information about the current program or input.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **ENTER:** Confirms input or selection.
- **SAP/MTS:** Selects Secondary Audio Program/Multi-channel Television Sound.
- **CC:** Toggles Closed Captions on/off.
- **TTS:** Toggles Text-to-Speech function.
- **SLEEP TIMER:** Sets a timer for the TV to turn off automatically.



Figure 2: Angled view of the UBay replacement remote control, highlighting its ergonomic design and button placement.

To ensure the longevity and optimal performance of your remote control, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Replace batteries when the remote's response becomes sluggish. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.



Figure 3: Another angled view of the UBay replacement remote control, providing a different perspective of its design.

TROUBLESHOOTING

If your remote control is not functioning as expected, try the following steps to resolve common issues:

1. **Remove Obstacles:** Ensure there are no objects blocking the line of sight between the remote control and the TV's infrared sensor. Most TVs have the remote sensor in the lower left or lower right corner.
2. **Test New Batteries:** Insert fresh, new batteries into the remote control. Double-check that the positive (+) and negative (-) ends are installed in the correct direction.
3. **Power Cycle the Remote:**
 - Remove the batteries from the remote control.
 - Press each button on the remote control at least once to drain any residual power. This also helps to check for stuck buttons.
 - Reinsert the batteries into the remote control.
4. **Power Cycle the TV:** If the above steps do not work, try power cycling your TV:
 - Unplug the TV from the power outlet.
 - Press and hold the TV's power button (on the TV itself, not the remote) for five seconds.
 - Plug the TV back into the power outlet and turn it on.

After performing these steps, check if the remote control is now working.

SPECIFICATIONS

Brand	UBay
Manufacturer	UBay Factory
Model Name	ONN ONC18TV001
Model Number	UBay ONC18TV001
Compatible Devices	ONN FHD LED TV ONC17TV001, ONC18TV001, GZL180106, C18TV001
Special Features	No programming required
Connector Type	Infrared
Battery Type	AAA
Batteries Required	Yes
Batteries Included	No
Product Dimensions	13.97 x 4.06 x 1.52 cm (5.5 x 1.6 x 0.6 inches)
Item Weight	18 g (0.63 ounces)

WARRANTY INFORMATION

UBay products are manufactured to high-quality standards. This product is covered by a standard limited warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact UBay customer support.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact UBay customer support for assistance. Our support team is available to help you with product inquiries, troubleshooting, and warranty services.

Please visit the official UBay website or refer to your product packaging for the most current contact information.

© 2025 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZQTLQTS>

More documents and user manuals: <https://manuals.plus/>