

[Manuals.plus](#) /

› [JACKYLED](#) /

› JACKYLED 12W LED Wall Sconce with Remote Control Instruction Manual

JACKYLED 12W LED Wall Sconce

JACKYLED 12W LED Wall Sconce with Remote Control Instruction Manual

Model: 12W LED Wall Sconce

INTRODUCTION

Thank you for choosing the JACKYLED 12W LED Wall Sconce. This product features stepless dimming and adjustable color temperature, controlled by a multi-function remote. Designed for indoor use, it provides versatile lighting for various spaces. Please read this manual thoroughly before installation and operation to ensure proper use and safety.



Image: The JACKYLED LED Wall Sconce integrated into a modern interior setting.

SAFETY INFORMATION

- Always disconnect power at the circuit breaker before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician or individuals with basic wiring knowledge.
- Ensure all electrical connections comply with local codes and ordinances.
- Do not install on surfaces that are not structurally sound.
- Avoid direct exposure to water or high humidity. This product is for indoor use only.
- Do not attempt to modify the product. Any modifications may void the warranty and pose safety risks.
- Keep the remote control away from children.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LED Wall Sconce (x2)
- Remote Controller (x2)
- Mounting Hardware (Plastic Anchors, Screws, Bolts)
- Wire Connectors
- Glove (x1)
- Instruction Manual (this document)

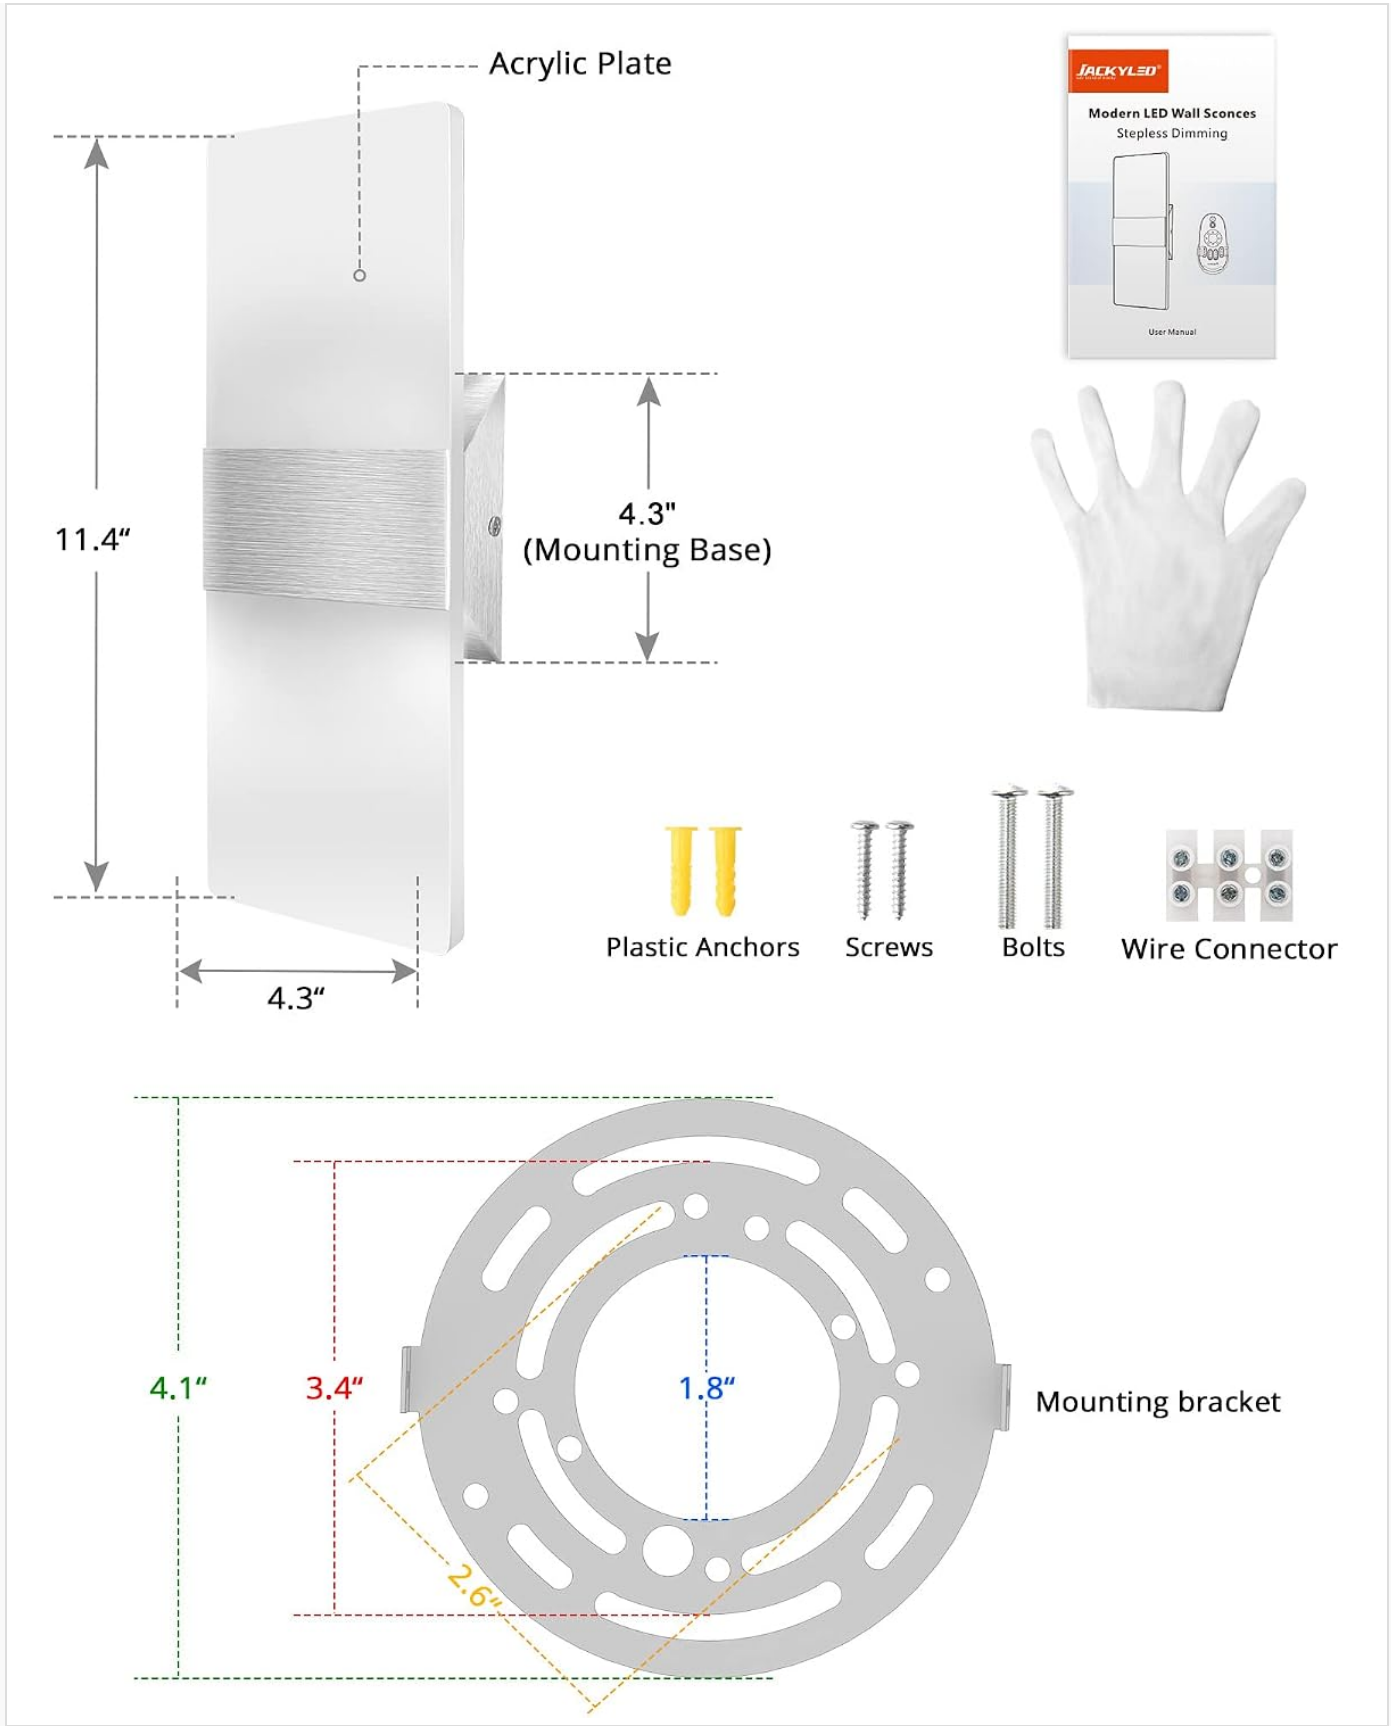 


Image: Overview of included components and detailed product dimensions.

SPECIFICATIONS

Feature	Detail
Brand	JACKYLED

Model	12W LED Wall Sconce
Power Source	Corded Electric
Voltage	110 Volts
Wattage	12 Watts (per sconce)
Light Source Type	LED
Color Temperature	3000K (Warm White) to 6500K (Cool White)
Dimming	Stepless Brightness Adjustment
Control Method	Remote Control
Material	Acrylic, Aluminium
Product Dimensions (approx.)	11.4 inches (Height) x 4.3 inches (Width)
Installation Type	Wall Mount, Hardwired
Indoor/Outdoor Usage	Indoor

Note: Product dimensions are approximate and based on visual interpretation of provided images.



Image: Product dimensions shown in comparison to a standard tablet.

SETUP AND INSTALLATION

Before starting, ensure power is OFF at the circuit breaker. It is recommended to wear the provided gloves during installation to prevent fingerprints on the acrylic surface.

1. **Prepare Mounting Location:** Identify the desired location for the wall sconce. Ensure there is an existing junction box or suitable wiring for hardwiring.
2. **Fix the Mounting Bracket:** Secure the mounting bracket to the wall or junction box using the provided screws and plastic anchors. Ensure it is firmly attached.

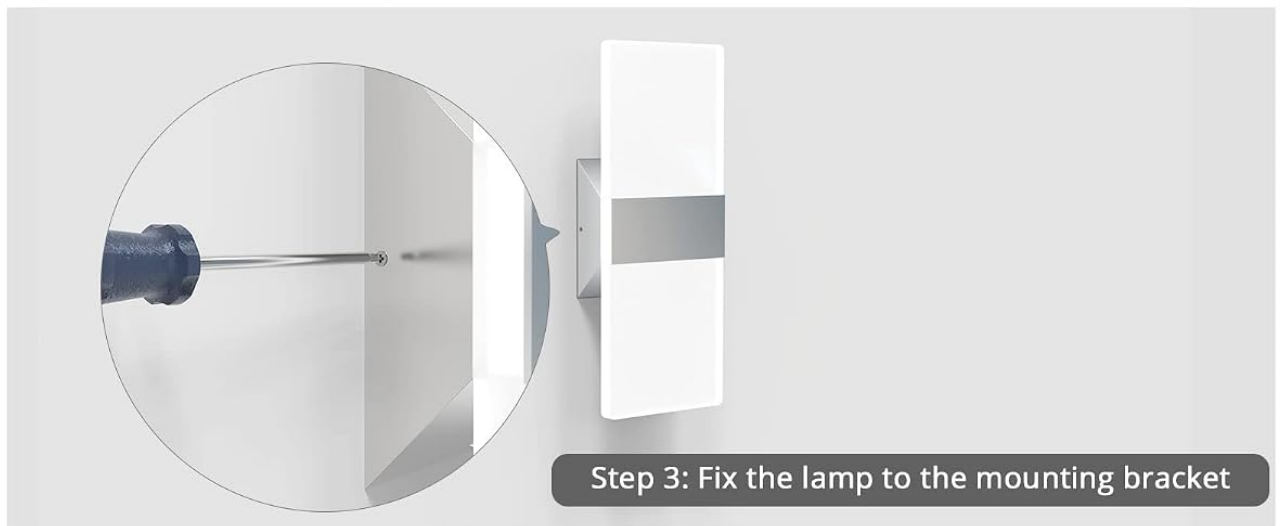 
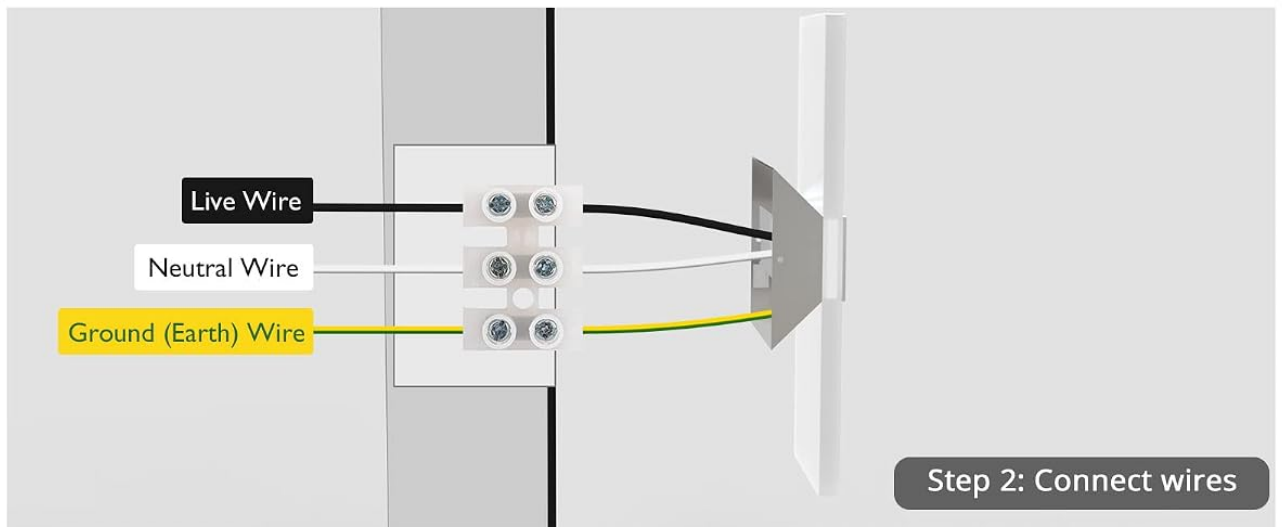 
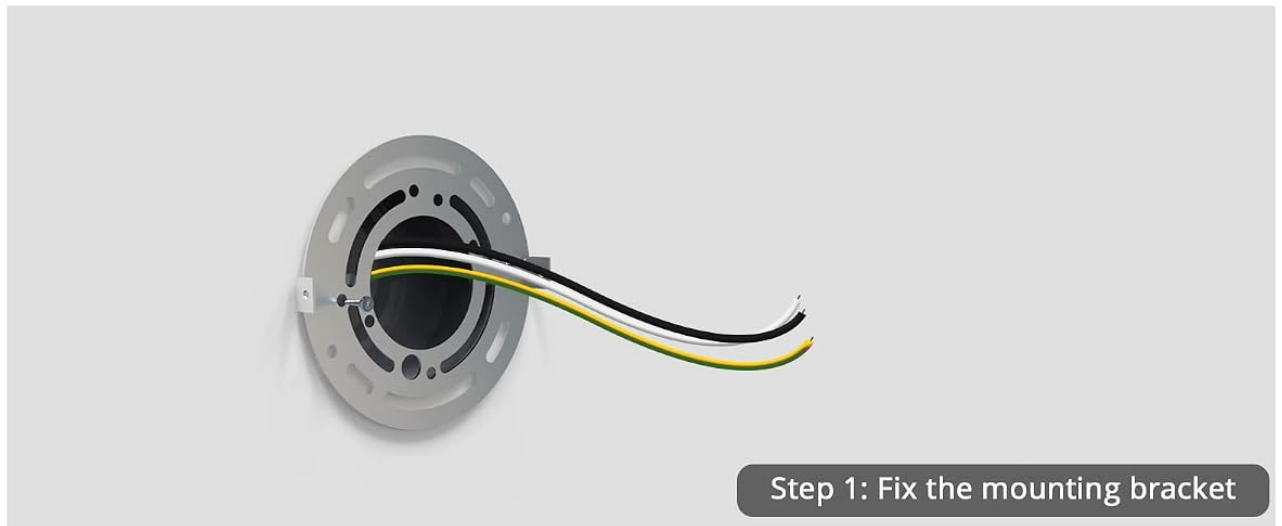 


Image: Illustration of fixing the mounting bracket.

3. **Connect Wires:** Connect the sconce's wires to your household electrical wires. Typically, this involves connecting:

- Live Wire (usually black or red) to the sconce's Live Wire.
- Neutral Wire (usually white or blue) to the sconce's Neutral Wire.
- Ground (Earth) Wire (usually green or bare copper) to the sconce's Ground Wire.

Use the provided wire connectors to secure all connections. Ensure connections are tight and insulated.



 
 
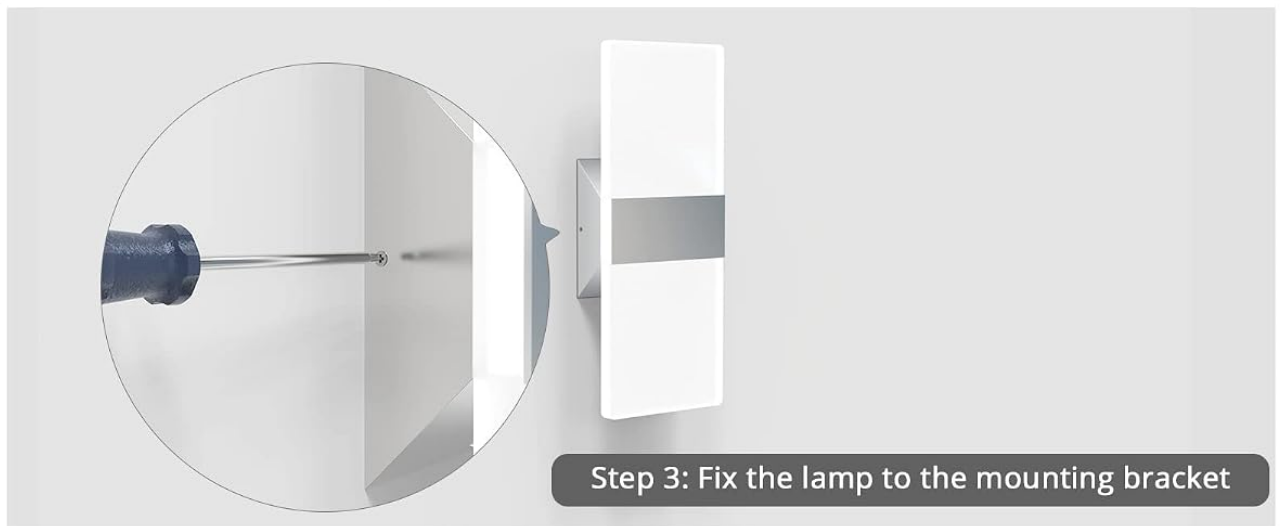 


Image: Diagram showing proper wire connections.

 
4. **Fix the Lamp to the Mounting Bracket:** Carefully align the sconce with the mounting bracket and secure it using the remaining screws or bolts. Ensure the sconce is flush against the wall and stable.

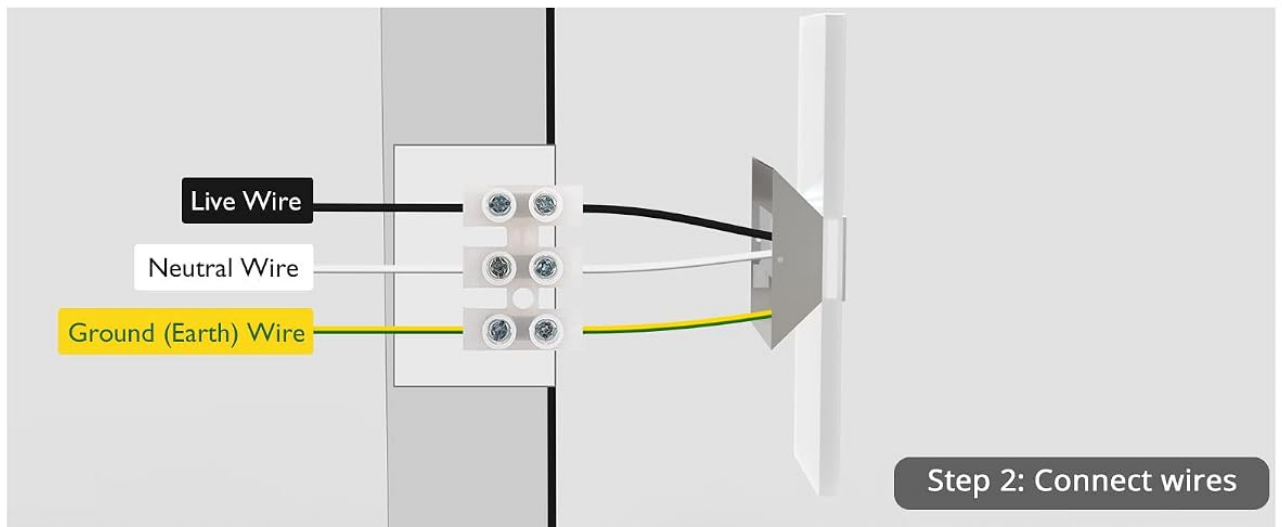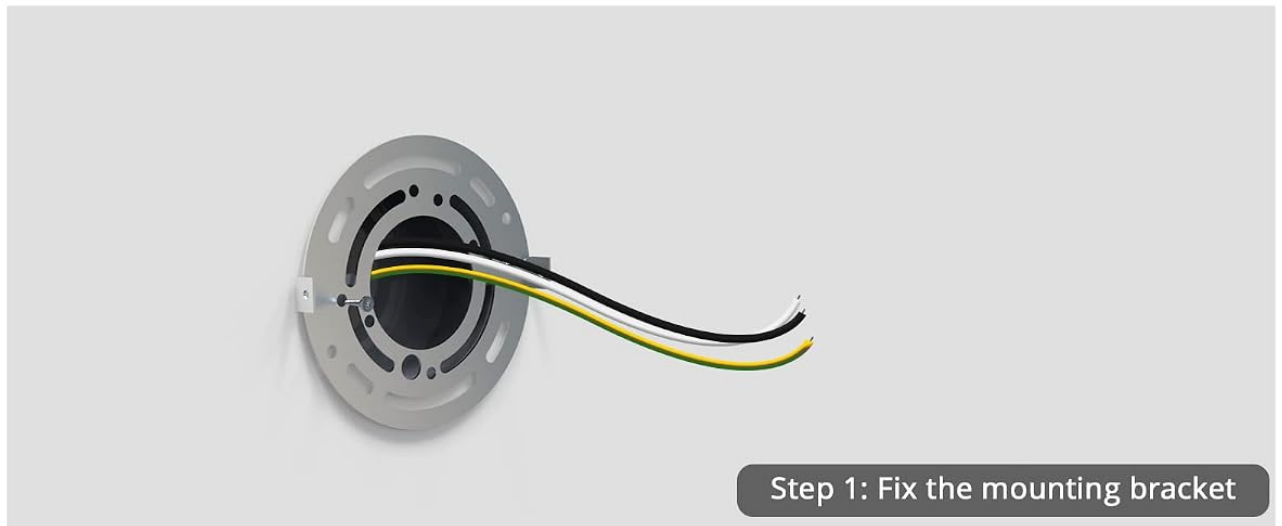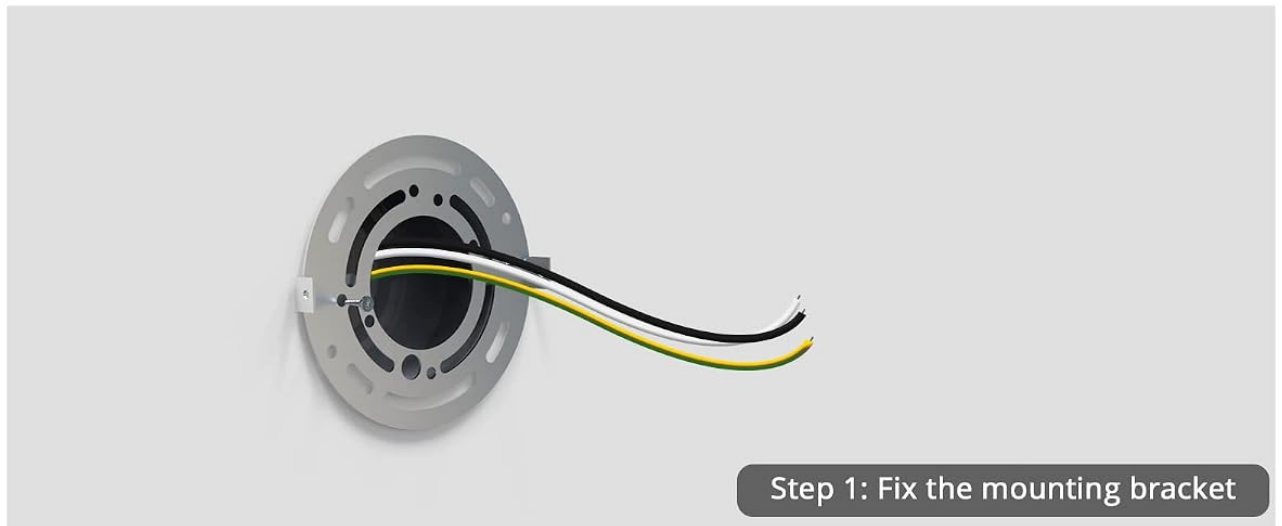

 Step 1: Fix the mounting bracket

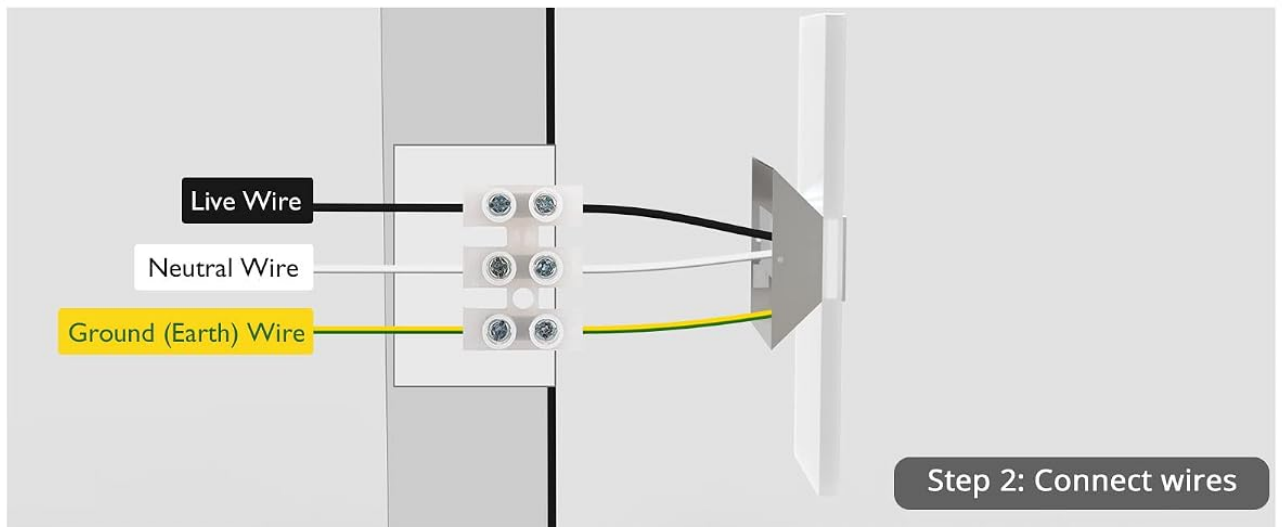

 Step 2: Connect wires

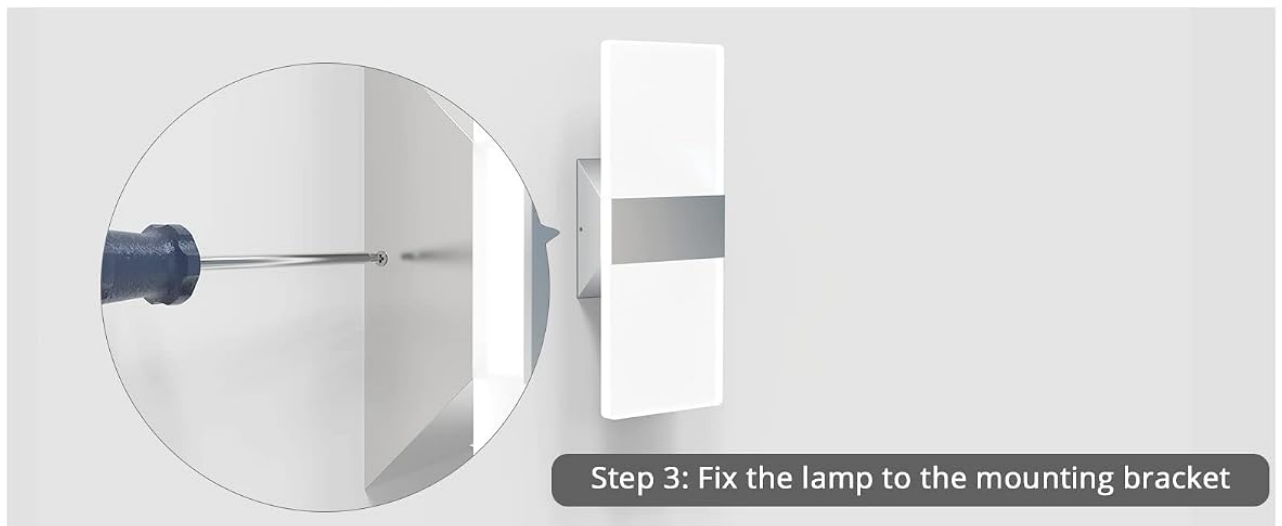

Step 3: Fix the lamp to the mounting bracket

Image: Illustration of attaching the sconce to the bracket.

5. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

If you are unsure about any step, consult a qualified electrician.

OPERATING INSTRUCTIONS

The JACKYLED Wall Sconce is controlled by the included remote control. The remote features fluorescent buttons for easy visibility in the dark.



Image: The wall sconce displaying different light settings, controlled by the remote.

Remote Control Functions:

- **Power On/Off:** Press the **ON** button to turn the light on, and the **OFF** button to turn it off.

Note: If the light is turned off and on using a wall switch, it may not retain the previous settings. Use the remote for consistent settings.

- **Brightness Adjustment (Stepless Dimming):** Use the **Up/Down arrows** to increase or decrease brightness continuously.

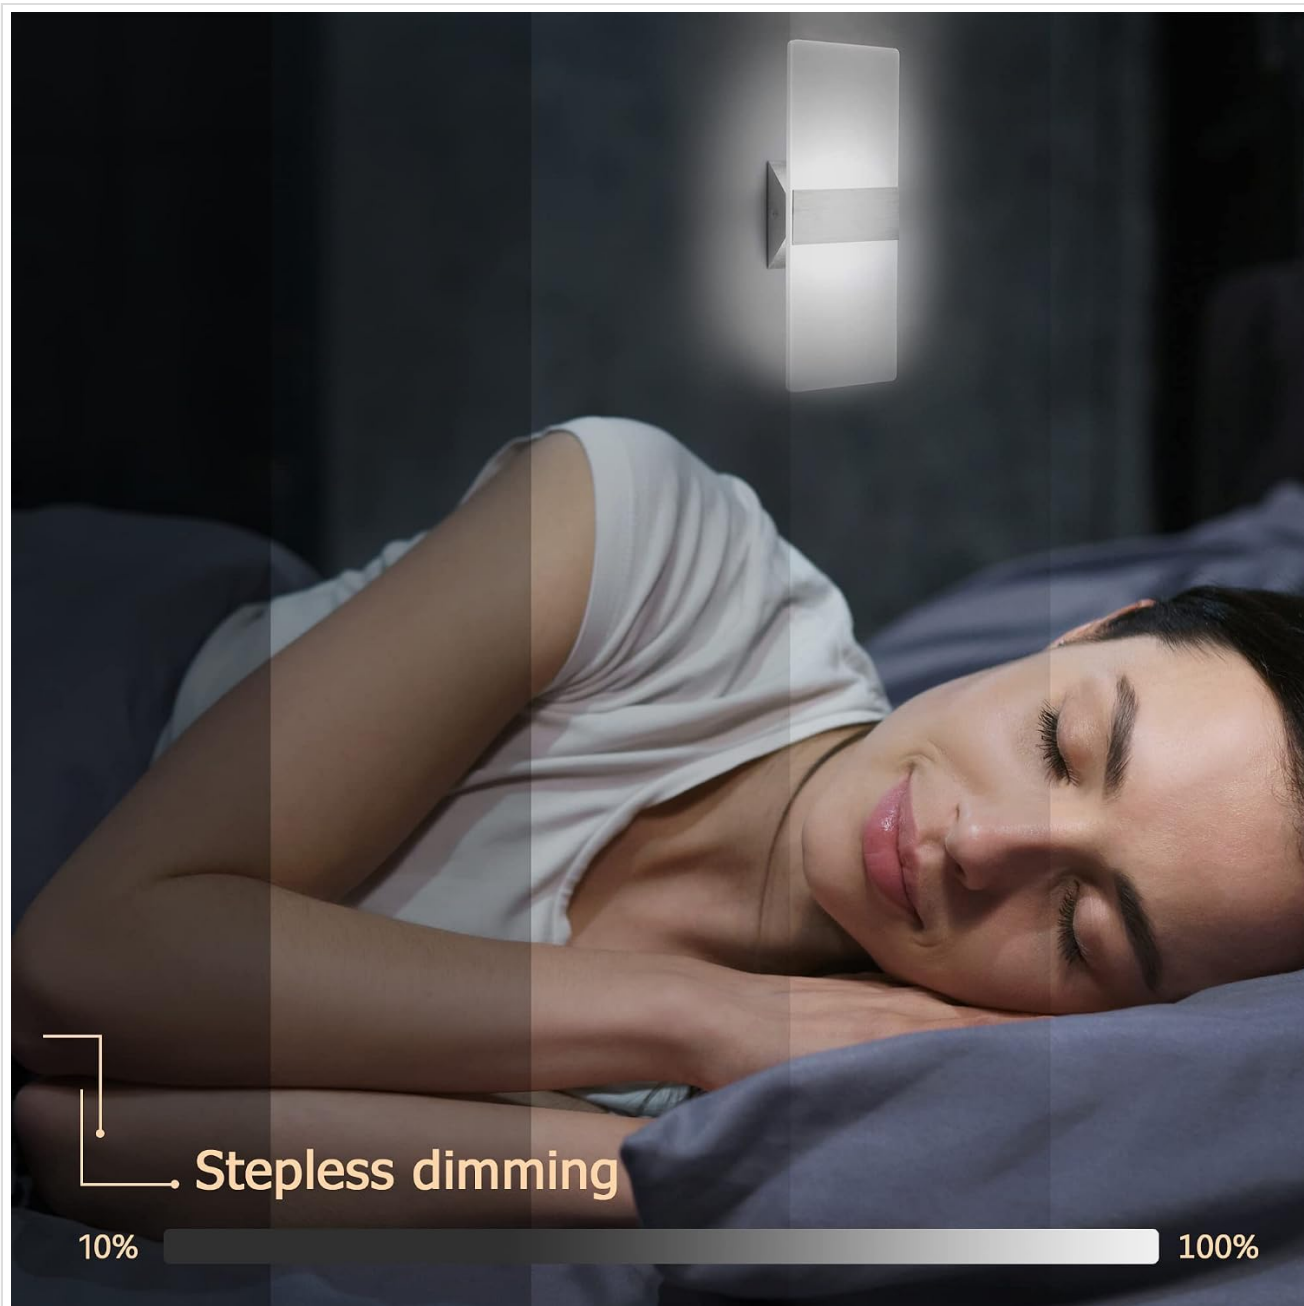 


Image: Visual representation of stepless dimming in a bedroom.

- **Color Temperature Adjustment:** Use the **Left/Right arrows** to adjust the color temperature from 3000K (warm white) to 6500K (cool white).



Adjustable color temperatures

3000K



6500K

Image: Demonstrating the range of adjustable color temperatures.

- **Night Light Mode:** Long press the **OFF** button to activate Night Light Mode (12 lumens). This provides a very low light output suitable for nighttime use.



Image: The sconce in Night Light Mode, with remote control highlighted.

- **Multiple Sconce Control:** One remote can control up to four sconces, either simultaneously or separately.



Image: Illustrates a single remote controlling multiple sconces in different rooms.

MAINTENANCE

- **Cleaning:** Ensure the power is off before cleaning. Wipe the sconce with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or acrylic.
- **LED Longevity:** The integrated LED light source is designed for long-term use and is not user-replaceable.
- **Remote Control:** Replace remote control batteries as needed. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power; loose wiring; remote control battery depleted.	Check circuit breaker. Verify all wire connections are secure. Replace remote control batteries.

Remote control is unresponsive.	Remote control battery depleted; remote out of range; obstruction between remote and sconce.	Replace remote control batteries. Ensure remote is within effective range and pointed towards the sconce. Remove any obstructions.
Light settings (brightness/color) are not saved after turning off/on with a wall switch.	This is expected behavior when power is cut and restored via a wall switch.	Use the remote control to turn the light on and off to retain previous settings.
Sconces display different color temperatures or brightness levels when turned on.	Individual sconces may reset to different default states if power is cycled via a wall switch, or if remotes are on different frequencies.	Use the remote control to synchronize the settings of all sconces. If using multiple remotes, ensure each remote is paired correctly or use a single remote to control all units.

WARRANTY AND SUPPORT

JACKYLED strives to provide high-quality products and customer service. If you encounter any issues with your LED Wall Sconce or require assistance, please contact JACKYLED customer support. Refer to your purchase documentation for specific warranty details and contact information.

© 2025 JACKYLED. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

