

JONATHAN Y JYL6015C

JONATHAN Y Arlo 22" 1-Light Single Swing Arm Wall Sconce

Model: JYL6015C

Brand: JONATHAN Y

1. INTRODUCTION

Thank you for purchasing the JONATHAN Y Arlo 22" 1-Light Single Swing Arm Wall Sconce. This versatile lighting fixture is designed to provide adjustable illumination and convenient USB charging, suitable for various rooms such as bedrooms, living rooms, and home offices. This manual provides detailed instructions for safe installation, operation, and maintenance of your new wall sconce.

2. SAFETY INFORMATION

WARNING: RISK OF ELECTRIC SHOCK. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- Read all instructions carefully before assembly and installation.
- Ensure the electrical rating of the fixture is compatible with your power supply (120 Volts).
- All wiring connections must be in accordance with local and national electrical codes. If you are unsure about wiring, consult a qualified electrician.
- Do not install this fixture in wet or damp locations. It is designed for indoor use only.
- Do not exceed the maximum wattage specified for the bulb.
- Always handle the fixture with care to avoid damage.
- Keep packaging materials away from children.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Wall Sconce Fixture (with integrated USB port and pull-chain)
- LED Bulb (E26 base)
- Cord Cover Rod (adjustable 36")
- Mounting Hardware (screws, wire nuts, mounting plate)

4. PRODUCT FEATURES

The JONATHAN Y Arlo Wall Sconce combines functionality with a classic design, offering:

- **Single Swing Arm:** Allows for easy adjustment of light direction.
- **Dual Installation Options:** Can be installed as a plug-in fixture or hardwired directly into your electrical system.
- **USB Charging Port:** Conveniently charge your mobile devices directly from the sconce.
- **Pull-Chain Switch:** Simple and traditional method for turning the light on and off.
- **Energy-Saving LED Bulb:** Includes an efficient LED bulb for immediate use.
- **Adjustable Cord Cover Rod:** Provides a neat and concealed appearance for the power cord when used as a plug-in.



Figure 4.1: The Arlo Wall Sconce featuring its integrated USB charging port, shown charging a tablet.

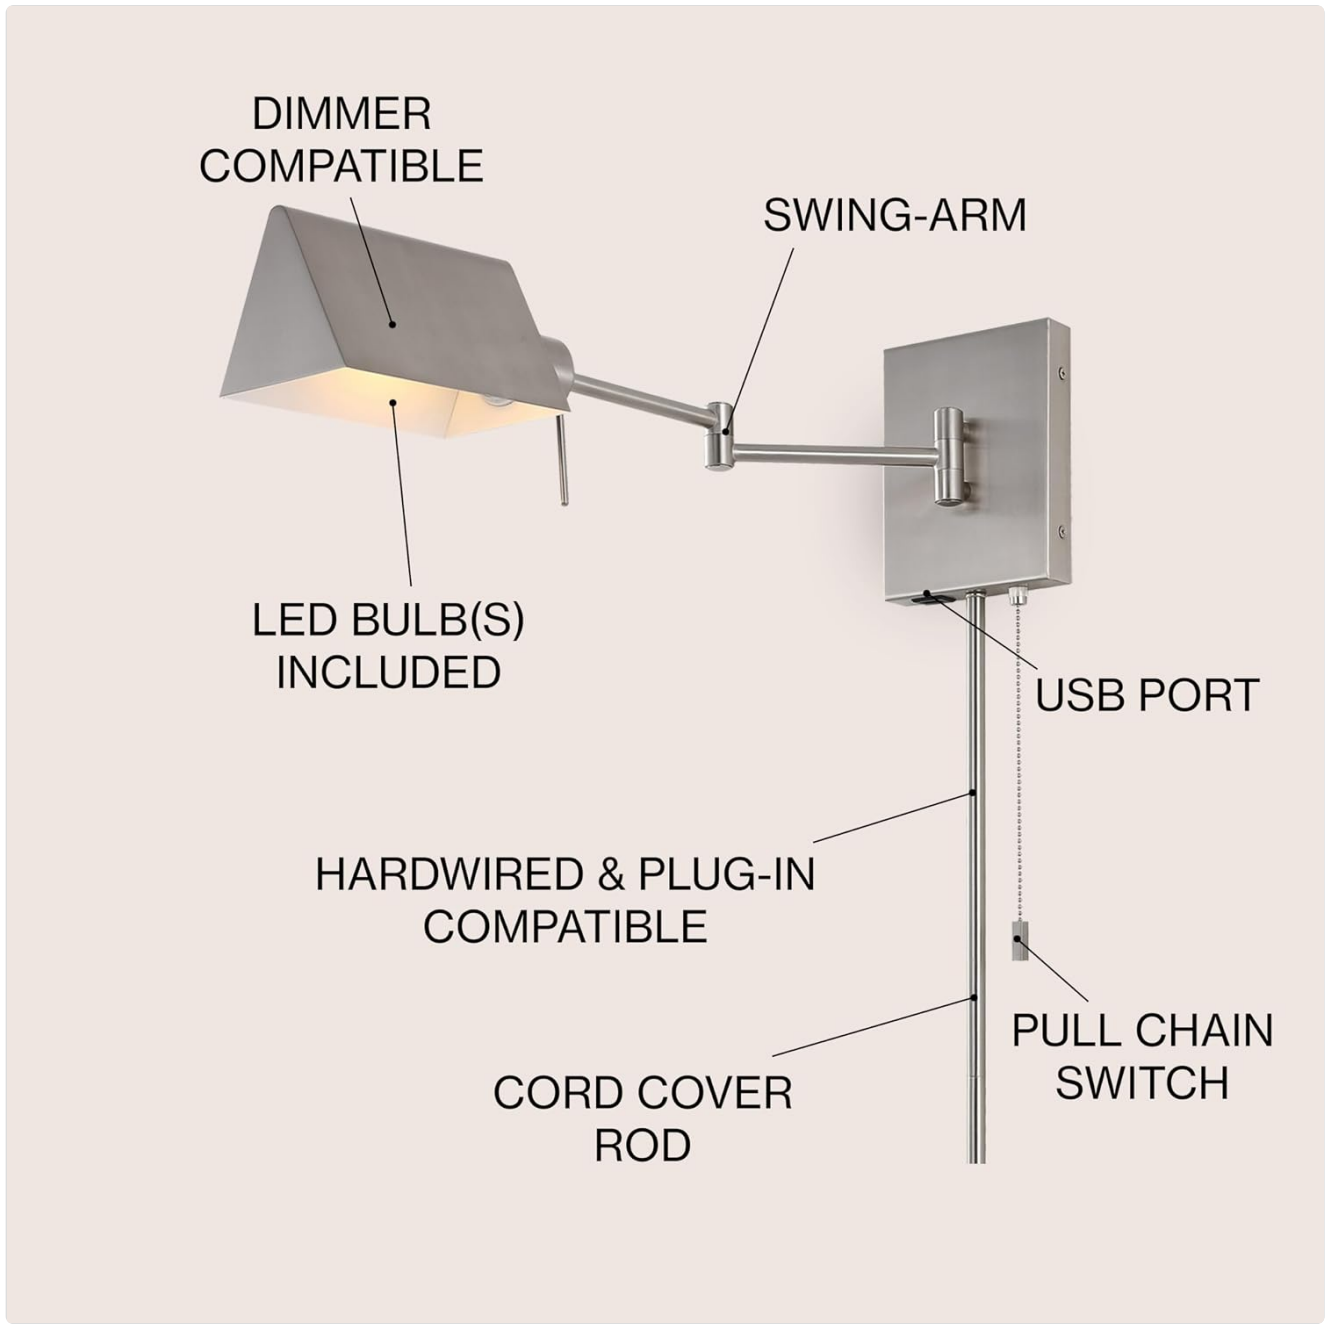


Figure 4.2: Key features of the Arlo Wall Sconce, including its swing arm, USB port, and dual installation compatibility.



Figure 4.3: Detailed views of the scone's components, including the swing arm mechanism, shade interior, and USB/pull-chain area.

5. SPECIFICATIONS

Attribute	Value
Model Name	Arlo
Model Number	JYL6015C
Dimensions (L x W x H)	4.25" x 22" x 6.5"
Item Weight	3.72 Pounds
Material	Metal
Finish Type	Nickel

Attribute	Value
Light Source Type	LED
Bulb Base	E26
Brightness	420 Lumens
Color Temperature	2700 Kelvin
Wattage	25 Watts
Voltage	120 Volts
Installation Type	Plug-In / Hardwired
Control Method	Pull Chain / Wall Switch
Special Features	Single Swing Arm, Dimmable Compatible, USB Charging Port
Assembly Required	Yes

6. SETUP AND INSTALLATION

The Arlo Wall Sconce offers two installation methods: plug-in or hardwired. Choose the method that best suits your needs. Professional installation is recommended for hardwired applications.

6.1 Plug-In Installation

- Choose Location:** Select a wall location near an electrical outlet.
- Mounting Plate:** Secure the mounting plate to the wall using the provided screws. Ensure it is level.
- Attach Fixture:** Connect the sconce fixture to the mounting plate.
- Install Bulb:** Screw the included LED bulb into the socket.
- Attach Cord Cover Rod:** Assemble and attach the adjustable 36" cord cover rod to conceal the power cord, guiding the cord neatly down to the outlet.
- Plug In:** Plug the power cord into a standard 120V electrical outlet.

6.2 Hardwired Installation

For detailed hardwired installation instructions, please refer to the official Installation Manual PDF provided by the manufacturer. A qualified electrician is recommended for this type of installation.

- Download Manual:** You can access the Installation Manual (PDF)[here](#).
- Video 6.1: Setup demonstration for a similar JONATHAN Y wall sconce (JYL6015B), which shares installation principles with the JYL6015C model.
- Video 6.2: Product setup video for a similar JONATHAN Y wall sconce (JYL6015B), illustrating key assembly steps relevant to the JYL6015C.

7. OPERATION

7.1 Turning On/Off

The Arlo Wall Sconce is equipped with a convenient pull-chain switch. To turn the light on or off, simply pull the chain located at the bottom of the fixture's base.



Figure 7.1: Operating the pull-chain switch to control the light.

7.2 Adjusting the Swing Arm

The sconce features a single swing arm that allows you to direct the light where needed. Gently pivot the arm at its joint to adjust the position of the light shade. Ensure the arm moves freely without excessive force.

Video 7.2: Product video demonstrating the swing arm functionality and other features of the JYL6015C sconce.

7.3 Using the USB Charging Port

A USB charging port is integrated into the base of the sconce. Simply connect your USB charging cable to the port and your device (e.g., smartphone, tablet) to begin charging. The port provides standard USB power output.



Figure 7.3: Charging a smartphone using the integrated USB port on the sconce.

7.4 Dimmable Compatibility

This fixture is dimmer compatible. If you wish to use a dimmer, ensure you install a compatible dimmer switch (sold separately) and a dimmable E26 LED bulb. Follow the dimmer switch manufacturer's instructions for installation.

8. MAINTENANCE

8.1 Cleaning

To clean the fixture, ensure it is turned off and unplugged (or power is disconnected at the circuit breaker). Use a soft, dry cloth to wipe down the metal surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.

8.2 Bulb Replacement

To replace the bulb, ensure the fixture is turned off and unplugged (or power is disconnected). Allow the bulb to cool completely. Unscrew the old bulb and screw in a new E26 base LED bulb, not exceeding 25 watts.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check if the fixture is properly plugged in (for plug-in models) or if the circuit breaker is tripped (for hardwired models). Ensure the wall switch is on.
	Bulb is loose or faulty.	Tighten the bulb or replace it with a new one.
USB charging port not working.	Fixture is not powered.	Ensure the light fixture is receiving power. The USB port requires the fixture to be powered, though the light itself does not need to be on.
	USB cable or device is faulty.	Try a different USB cable or device to confirm the issue is not with them.
Swing arm is stiff or difficult to move.	New fixture stiffness.	Gently work the arm back and forth to loosen the joint. Do not apply excessive force.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This JONATHAN Y product comes with a **30-day manufacturer warranty for defects only**. This warranty covers manufacturing defects that may arise during normal use within 30 days of purchase. Normal wear and tear, misuse, accidental damage, or visible damages not noted upon delivery are not covered under this warranty. All products are inspected upon arrival, and worn, dirty, or stained merchandise will not be accepted for warranty claims. For warranty information on this product, please contact the internet customer service center where you purchased the item.

10.2 Customer Support

If you have any questions, require assistance with installation, or need to report a defect, please contact JONATHAN Y customer support or the retailer from whom you purchased the product. Please have your model number (JYL6015C) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question