Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , VOYEE /
- > VOYEE Wireless Controller for PlayStation 3 (Model HY-2208) Instruction Manual

VOYEE HY-2208

VOYEE Wireless Controller for PlayStation 3 Instruction Manual

1. Introduction

Thank you for choosing the VOYEE Wireless Controller for PlayStation 3. This manual provides essential information for setting up, operating, and maintaining your new controller. Please read these instructions carefully to ensure optimal performance and longevity of your product.



Image: A red VOYEE wireless controller and a blue VOYEE wireless controller, both designed for PlayStation 3, are shown side-by-side.

2. PRODUCT FEATURES

- Wireless Connectivity: Enjoy gaming freedom with reliable Bluetooth wireless technology, offering a range of up to 33 feet.
- **Upgraded Joysticks:** Experience precise 360-degree positioning for enhanced control and a realistic gaming experience.
- **Rechargeable Battery:** Built-in battery provides 5-10 hours of working time and 7 days of standby time on a 2-hour charge.
- Motion Control: Integrated motion sensing technology for intuitive gameplay.
- **Double Shock Vibration:** Dual motors provide immersive haptic feedback for enhanced game response and realism.



Image: A detailed view of the upgraded joystick on a red VOYEE controller, illustrating its 360-degree movement capability.



Image: An illustration showing the internal vibration motors of a red VOYEE controller, with blue waves symbolizing the double shock feedback during gameplay.

3. PACKAGE CONTENTS

The VOYEE Wireless Controller package includes the following items:

- 2 x VOYEE Wireless Controllers (one blue, one red)
- 2 x USB Charging Cables



Image: The package contents including two VOYEE controllers (red and blue), a USB charging cable, and the product box, with dimensions indicated.

4. SETUP AND CONNECTION

4.1 Initial Charging

Before first use, fully charge your VOYEE Wireless Controller. Connect the provided USB charging cable to the controller's charging port and the other end to a PlayStation 3 console or a compatible USB power adapter. The controller's indicator lights will show charging status. A full charge typically takes approximately 2 hours.

4.2 Wireless Connection (Pairing)

To connect your controller to the PlayStation 3 console:

- 1. Ensure your PlayStation 3 console is powered on.
- 2. Connect the VOYEE Wireless Controller to the PS3 console using the provided USB charging cable.
- 3. Press the **P3 button** (located in the center of the controller). The controller will automatically pair with the console.
- 4. Once paired, you can disconnect the USB cable for wireless play. For subsequent uses, simply press the **P3 button** to connect wirelessly.

The wireless range is approximately 33 feet (10 meters).



Image: A red VOYEE controller in use, demonstrating its Bluetooth wireless capability with a visual representation of its 33-foot range.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

The VOYEE Wireless Controller features a standard PlayStation 3 button layout:

- Directional Pad (D-pad): For precise directional input.
- Action Buttons (X, O, Triangle, Square): For in-game actions.
- Analog Sticks: Two analog sticks for 360-degree movement and camera control.
- Shoulder Buttons (L1, R1, L2, R2): For various in-game functions.
- SELECT and START Buttons: For menu navigation and pausing games.
- P3 Button: Powers on the controller, accesses the PS3 XMB menu, and initiates pairing.

5.2 Motion Control

The controller includes motion-sensing technology. In compatible games, tilt, shake, or rotate the controller to interact with the game environment.

5.3 Vibration Feedback (Double Shock)

The built-in dual motors provide vibration feedback during gameplay, enhancing immersion by reacting to in-game events such as collisions, explosions, or specific actions.

6. CHARGING AND BATTERY

The VOYEE Wireless Controller is equipped with a rechargeable battery. To charge, connect the controller to your PS3 console or a USB power source using the provided cable. The controller will automatically enter sleep mode after 5 minutes of inactivity to conserve battery life. Press the P3 button to wake it up.

• Working Time: 5-10 hours

• Charging Time: Approximately 2 hours

• Standby Time: Up to 7 days



Image: An X-ray style illustration of a red VOYEE controller, highlighting its internal rechargeable battery and displaying key battery performance metrics: 5-10 hours working time, 2 hours charging time, and 7 days standby time.

7. Maintenance and Care

- Clean the controller regularly with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Avoid exposing the controller to extreme temperatures, direct sunlight, or high humidity.

- Do not drop the controller or subject it to strong impacts.
- Store the controller in a safe place when not in use to prevent damage.

8. TROUBLESHOOTING

- Controller not connecting: Ensure the controller is charged. Connect it to the PS3 via USB cable and press the P3 button to re-pair.
- Lag or unresponsiveness: Check the distance between the controller and the console. Ensure there are no major obstructions or sources of wireless interference.
- **Battery not charging:** Try using a different USB port on the console or a different USB charging cable. Ensure the cable is securely connected.
- Controller turns off automatically: This is normal behavior to conserve battery after 5 minutes of inactivity. Press the P3 button to reactivate.

9. SPECIFICATIONS

Feature	Specification
Model Number	HY-2208
Dimensions	6.22 x 3.86 x 2.36 inches
Weight	13.69 ounces
Connectivity	Bluetooth Wireless
Battery Type	Rechargeable
Wireless Range	Up to 33 feet (10 meters)

10. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your VOYEE Wireless Controller, please contact VOYEE customer service. Refer to your purchase documentation for specific warranty terms and contact information.

Related Documents - HY-2208

VOYEE Wireless Controller User Manual and Setup Guide Comprehensive user manual for the VOYEE Wireless Controller, detailing setup, connection modes (PC, Android, iOS, Switch), advanced features like M1/M2 key mapping, LED adjustments, vibration control, and TURBO function. Includes safety information and troubleshooting tips for optimal gaming experience.
VOYEE S03 Wireless Controller Instruction Manual for Nintendo Switch, PC, and Android Comprehensive instruction manual for the VOYEE S03 Wireless Controller, detailing features, connection modes for Nintendo Switch, PC, and Android, adjustable vibration, TURBO function, programmable buttons, charging, and troubleshooting.



VOYEE N-S Wireless Controllers 503 User Manual

Discover the VOYEE N-S Wireless Controllers 503 User Manual. Learn how to connect, charge, and customize your gamepad for Nintendo Switch, PC, and Android devices. Includes detailed instructions on button mapping, turbo functions, and troubleshooting for an optimized gaming experience.



Test Verification of Conformity for Wireless Controller X107

This document verifies the conformity of the wireless controller model X107, manufactured by Dongguan Chenhao Electronic Technology Co., LTD., with various European safety, health, EMC, and radio standards.