

Clikon CK606-N

Clikon CK606-N Semi-Automatic Washing Machine

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the rating label (220-240V AC, 60Hz). Do not use extension cords or adapters. Always plug into a grounded outlet.
- **Water Connection:** Connect the water inlet hose securely to prevent leaks. Ensure the drain hose is properly positioned to avoid water damage.
- **Placement:** Install the washing machine on a firm, level surface. Avoid direct sunlight, heat sources, or excessively humid environments.
- **Children Safety:** Keep children away from the appliance during operation. Do not allow them to play with the controls or inside the machine.
- **Maintenance:** Disconnect the power supply before cleaning or performing any maintenance. Do not attempt to repair the appliance yourself. Contact qualified service personnel.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked in, or spotted with combustible or explosive substances such as gasoline, dry-cleaning solvents, or other flammable materials.

2. PRODUCT OVERVIEW

The Clikon CK606-N is a semi-automatic washing machine designed for efficient laundry care. It features separate tubs for washing and spinning, offering flexibility and control over your wash cycles.



Image: Clikon CK606-N Semi-Automatic Washing Machine, showing the top view with wash and spin tubs.

Key Features:

- **Wash Capacity:** 10 kg
- **Spin Capacity:** 7.0 kg
- **Magic Filter:** Effectively collects lint and debris during the wash cycle.
- **Double-Layer Body:** Enhances durability and reduces noise.
- **15-Minute Wash Timer:** Allows for precise control over wash duration.
- **ABS Control Panel:** Durable and easy-to-use push-button controls.
- **Transparent Glass Window:** Provides visibility into the washing process.

3. SETUP AND INSTALLATION

3.1 Unpacking

1. Carefully remove the washing machine from its packaging.
2. Inspect the appliance for any damage incurred during transit. If damage is found, do not operate and

contact your retailer.

3. Remove all packing materials, including the base packaging and any internal protective inserts.

3.2 Placement

- Place the machine on a flat, stable, and dry surface. Uneven surfaces can cause excessive vibration and noise.
- Ensure there is adequate space around the machine for ventilation and ease of use.
- Avoid placing the machine in areas exposed to direct sunlight, freezing temperatures, or high humidity.

3.3 Water Connection

- Connect the water inlet hose to a cold water tap. Ensure the connection is tight to prevent leaks.
- Place the other end of the water inlet hose into the wash tub.

3.4 Drainage

- Position the drain hose to ensure proper water discharge. It can be placed over a sink or into a dedicated drain pipe.
- Ensure the drain hose is not kinked or blocked, which could impede drainage.

3.5 Power Connection

- Plug the power cord into a grounded electrical outlet (220-240V AC, 60Hz).
- Do not share the outlet with other high-power appliances.

4. OPERATING INSTRUCTIONS

4.1 Washing Process

1. **Load Laundry:** Open the wash tub lid and place clothes loosely inside. Do not overload the machine beyond the 10 kg capacity.
2. **Add Water:** Fill the wash tub with water to the desired level, considering the amount of laundry.
3. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
4. **Select Wash Time:** Turn the wash timer knob to select the desired wash duration (up to 15 minutes).
5. **Start Washing:** The machine will begin the wash cycle.
6. **Drain Water:** Once the wash cycle is complete, turn the drain selector to drain the water from the wash tub.

4.2 Spin Drying Process

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute them evenly to prevent imbalance. Do not exceed the 7.0 kg spin capacity.
2. **Close Lid:** Close the inner and outer lids of the spin tub securely.
3. **Select Spin Time:** Turn the spin timer knob to select the desired spin duration.
4. **Start Spinning:** The machine will begin the spin cycle.
5. **Remove Laundry:** Once the spin cycle is complete, wait for the drum to stop completely before

opening the lid and removing the clothes.

5. MAINTENANCE AND CARE

5.1 Cleaning the Magic Filter

- The magic filter should be cleaned regularly (after every 2-3 washes) to maintain washing efficiency.
- Remove the filter from the wash tub.
- Open the filter and remove any collected lint or debris.
- Rinse the filter under running water and reinsert it into its position in the wash tub.

5.2 Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.

5.3 Draining After Use

- Always ensure all water is drained from both tubs after each use to prevent odors and mildew.

5.4 Storage

- If storing the machine for an extended period, ensure it is completely dry inside and out.
- Disconnect the power cord and store it in a dry, well-ventilated area.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed properly (spin tub)	Check power cord connection and outlet; Ensure spin tub lid is fully closed.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'	Straighten drain hose and clear any blockages; Set drain selector to 'Drain'.
Excessive vibration/noise during spin	Laundry unevenly distributed; Machine not on a level surface	Rearrange clothes evenly in the spin tub; Adjust machine to be level.
Water leaks	Water inlet/drain hose loose; Overfilling the wash tub	Tighten hose connections; Do not exceed maximum water level.

7. SPECIFICATIONS

Brand	Clikon
Model	CK606-N
Type	Semi-Automatic Washing Machine
Wash Capacity	10 kg
Spin Capacity	7.0 kg
Motor Power (Wash/Spin)	550W / 250W
Voltage	220-240V AC
Frequency	60Hz
Body Material	Double-layer (Plastic)
Drum Material	Stainless Steel
Control Type	Push Button
Color	White
Item Weight	66.14 lbs (approx. 30 kg)
Installation Type	Freestanding
Recommended Use	Residential

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Clikon CK606-N Semi-Automatic Washing Machine comes with a **2-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials under normal domestic use.

The warranty does not cover:

- Damage caused by improper installation or use not in accordance with this manual.
- Damage caused by accidents, misuse, neglect, or unauthorized modifications.
- Normal wear and tear.

Please retain your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact Clikon customer support. Contact details can typically be found on the official Clikon website or on your product packaging. When contacting support, please have your model number (CK606-N) and purchase date ready.

