

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOYEE](#) /

› [VOYEE Wireless Controller for PlayStation 3 \(Model HY-2208\) User Manual](#)

VOYEE HY-2208

VOYEE Wireless Controller for PlayStation 3

Model: HY-2208

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your VOYEE Wireless Controller for PlayStation 3. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

Package Contents

- VOYEE Wireless Controller
- USB Charging Cable
- User Manual



Image 1.1: Package contents including the VOYEE wireless controller, USB charging cable, and user manual.

2. PRODUCT OVERVIEW

The VOYEE Wireless Controller is designed to enhance your PlayStation 3 gaming experience with advanced features and reliable performance.

Key Features

- Enhanced Joysticks:** Features upgraded joysticks with 360-degree ultra-precision positioning for accurate control in all PS3 games.
- Dual Vibration Feedback:** Built-in dual motors provide immersive vibration feedback, enhancing game response and shock effects.
- Motion Sensing Technology:** Integrated motion control technology detects every movement for a realistic gaming experience.
- High-Performance Bluetooth:** Stable wireless connectivity with a range of up to 33 feet (10 meters), ensuring no data loss or signal interference.
- Rechargeable Battery:** Equipped with a 450mAh rechargeable battery for extended playtime.
- Energy Saving:** Automatic 10-minute shutdown mode conserves energy and prolongs battery life.



Image 2.1: Front view of the VOYEE Wireless Controller, showcasing its ergonomic design and button layout.

3. SETUP AND CONNECTION

Initial Charging

1. Connect the small end of the USB charging cable to the controller's charging port.
2. Connect the large end of the USB charging cable to an available USB port on your PlayStation 3 console or a compatible USB wall adapter.
3. The indicator lights on the controller will flash during charging and remain solid when fully charged. A full charge typically takes 2-3 hours.



Image 3.1: Illustration of the controller's charging port and the USB charging cable connection.

Pairing with PlayStation 3

1. Ensure your PlayStation 3 console is powered on.
2. Connect the controller to the PS3 console using the USB charging cable. This initial wired connection is necessary for pairing.
3. Press the **P3 button** (center button with 'P3' logo) on the controller. The indicator lights will flash and then one light will remain solid, indicating successful pairing and connection.
4. Once paired, you can disconnect the USB cable to use the controller wirelessly. The controller will automatically connect to the console via Bluetooth.

Bluetooth Controller

33 Feets Wireless Distance



Image 3.2: A user holding the VOYEE controller, illustrating its wireless Bluetooth connectivity.

4. OPERATING INSTRUCTIONS

Basic Controls

The VOYEE controller features standard PlayStation 3 button layouts, including directional pad, action buttons (Triangle, Circle, Cross, Square), L1/R1/L2/R2 shoulder buttons, SELECT, START, and analog joysticks. Refer to your game's instructions for specific button functions.

Upgraded Joysticks

The analog joysticks offer 360-degree movement with enhanced precision, allowing for fine control in games. Push the joysticks gently for subtle movements or fully for rapid actions.

Upgraded Joysticks

360-degree positioning with ultra-accuracy
New technology provides realistic gaming experience



Image 4.1: A close-up view of the controller's upgraded joystick, highlighting its 360-degree precision.

Dual Vibration Feedback

The controller's dual vibration motors provide tactile feedback during gameplay, such as impacts, explosions, or other in-game events. This feature is automatically activated by compatible games.



Image 4.2: Visual representation of the dual vibration feature within the VOYEE controller.

Motion Control

The integrated motion sensing technology allows for intuitive control in games that support tilt and motion inputs. Move or tilt the controller to interact with the game environment.

Automatic Sleep Mode

To conserve battery life, the controller will automatically enter sleep mode after 10 minutes of inactivity. To wake it up, press the **P3 button**.

5. BATTERY AND CHARGING

The controller is equipped with a built-in 450mAh rechargeable lithium battery. For optimal performance, ensure the controller is fully charged before extended use.

- **Charging Time:** Approximately 2-3 hours for a full charge.
- **Playtime:** Provides 5-10 hours of gameplay on a full charge, depending on game features (e.g., vibration intensity).
- **Battery Indicator:** The player indicator lights on the controller will show charging status.

Built-in Rechargeable Battery

Intelligent power saving design

Automatically enter to sleep mode after 5minutes without operation

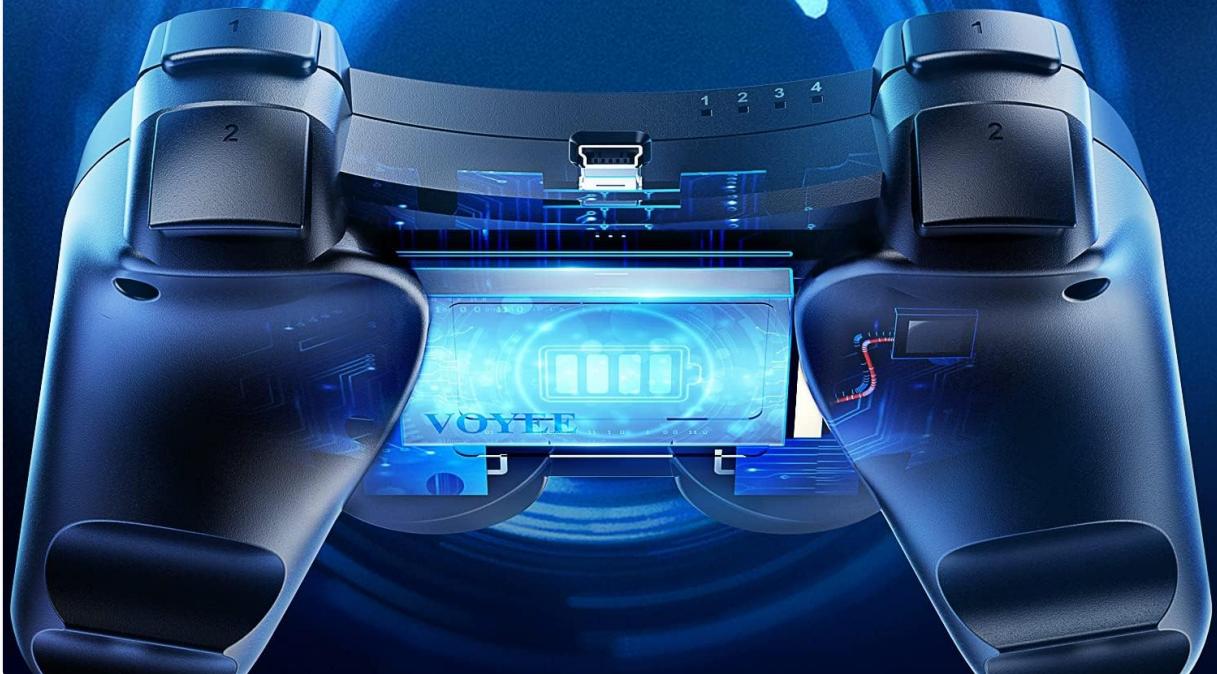


Image 5.1: Diagram illustrating the built-in rechargeable battery and its performance metrics: working time, charging time, and standby time.

6. MAINTENANCE

- Keep the controller dry and away from extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid dropping the controller or subjecting it to strong impacts.
- Store the controller in a safe place when not in use to prevent damage.

7. TROUBLESHOOTING

Controller Not Connecting/Pairing

- Ensure the controller is fully charged.
- Connect the controller to the PS3 console with the USB cable and press the **P3** button to re-establish the connection.
- Check if the USB cable is functioning correctly. Try a different USB port on the console.

- Restart your PlayStation 3 console.

Buttons or Joysticks Unresponsive

- Ensure the controller has sufficient battery charge.
- Try resetting the controller by inserting a thin object (like a paperclip) into the small reset hole on the back of the controller (if present).
- Reconnect the controller to the PS3 console as described in the pairing section.

Vibration Not Working

- Verify that the game you are playing supports vibration feedback.
- Check in the game's settings or PS3 system settings if vibration is enabled.

8. SPECIFICATIONS

Model Number	HY-2208
Connectivity	Bluetooth Wireless
Wireless Range	Up to 33 feet (10 meters)
Battery Type	Built-in Rechargeable Lithium
Battery Capacity	450 mAh
Charging Time	2-3 hours
Playtime	5-10 hours
Dimensions	15.8 x 9.5 x 12 cm
Weight	400 g