

ReadyWired PBT506, PBT518, PBT571, PBT599 Compatible

ReadyWired USB Cable User Manual

For Polaroid PBT506, PBT518, PBT571, PBT599 Speakers

1. PRODUCT OVERVIEW

The ReadyWired USB 2.0 cable is designed to provide reliable charging and data transfer for compatible devices. This high-quality cable ensures efficient power delivery and stable data communication, making it an essential accessory for your Polaroid speakers.

Key Features:

- High-quality USB 2.0 charging and data cable.
- Guaranteed compatibility with Polaroid PBT506, PBT518, PBT571, PBT599 Speakers.
- Length: 3 feet (approximately 0.91 meters).
- Foil and braid shielding to reduce electromagnetic interference (EMI) and radio-frequency interference (RFI).
- Twisted-pair construction to minimize crosstalk and ensure high-speed, error-free data transfer.
- Supports plug & play connections for ease of use.

2. SETUP AND CONNECTION

Connecting your ReadyWired USB cable to your Polaroid speaker and a power source or computer is a straightforward process. Ensure both the speaker and the power source are in a stable position before connecting.

Connection Steps:

1. Identify the USB-A connector (the larger, rectangular end) and the Micro-USB connector (the smaller, trapezoidal end) of the cable.
2. Locate the Micro-USB port on your Polaroid PBT506, PBT518, PBT571, or PBT599 speaker.
3. Gently insert the Micro-USB connector into the speaker's Micro-USB port. Ensure it is oriented correctly to avoid damage. Do not force the connector.
4. Insert the USB-A connector into a compatible USB power adapter (e.g., wall charger, car charger) or a USB port on a computer.
5. Once connected, your speaker should begin charging or be recognized by your computer for data transfer, depending on the function of the connected USB port.



This image displays the ReadyWired USB 2.0 cable. One end features a standard USB-A connector, typically used for power adapters or computer USB ports. The other end has a micro-USB connector, designed for connecting to compatible devices like the Polaroid PBT506, PBT518, PBT571, or PBT599 speakers for charging and data transfer.

3. OPERATION

The ReadyWired USB cable facilitates two primary functions: charging and data transfer.

Charging Your Speaker:

- Connect the Micro-USB end to your Polaroid speaker and the USB-A end to a USB power adapter or a powered USB port on a computer.
- The speaker's charging indicator (if available) should activate, signifying that it is receiving power.
- Charging times may vary depending on the power source and the speaker's battery level.

Data Transfer:

- Connect the Micro-USB end to your Polaroid speaker and the USB-A end to a USB port on a computer.
- Your computer should recognize the speaker as a removable storage device or media device.
- Follow your computer's operating system prompts to access and transfer files to or from your speaker (if supported by the speaker model).

4. MAINTENANCE AND CARE

Proper care of your ReadyWired USB cable will ensure its longevity and continued performance.

- **Storage:** When not in use, coil the cable loosely. Avoid tight coiling or sharp bends, which can damage internal wires.
- **Cleaning:** Use a soft, dry cloth to wipe the cable and connectors. Do not use harsh chemicals or abrasive cleaners.
- **Handling:** Always grasp the connector housing when plugging or unplugging the cable, not the cable itself. This prevents strain on the connection points.

- **Environment:** Keep the cable away from extreme temperatures, direct sunlight, and moisture.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the connectors. Discontinue use if damage is observed.

5. TROUBLESHOOTING

If you encounter issues with your ReadyWired USB cable, refer to the following common problems and solutions:

Problem	Possible Solution
Speaker not charging.	<p>Ensure the cable is securely connected at both ends.</p> <p>Try a different USB power adapter or computer USB port.</p> <p>Verify that the speaker's charging port is clean and free of debris.</p> <p>Confirm the power source is active and providing power.</p>
Speaker not recognized by computer.	<p>Ensure the cable is securely connected at both ends.</p> <p>Try a different USB port on your computer.</p> <p>Restart your computer and the speaker.</p> <p>Check your computer's device manager for any driver issues (if applicable).</p>
Cable appears damaged.	<p>Discontinue use immediately.</p> <p>Contact customer support for warranty information or replacement options.</p>

6. SPECIFICATIONS

Technical details for the ReadyWired USB Cable:

Feature	Detail
Brand	ReadyWired
Connector Type	USB 2.0 (USB-A to Micro-USB)
Cable Type	USB
Compatible Devices	Polaroid PBT506, PBT518, PBT571, PBT599 Speakers
Length	3 Ft. (0.91 m)
Shielding	Foil and Braid
Construction	Twisted-pair
UPC	305978763736
ASIN	B07ZRY6ZFD

7. WARRANTY AND SUPPORT

Warranty Information:

This ReadyWired USB cable comes with a **1-Year Warranty** from the date of purchase, guaranteeing compatibility

and quality. This warranty covers manufacturing defects and ensures the product performs as described under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact ReadyWired customer support. Refer to the retailer's website or your purchase documentation for specific contact details. When contacting support, please have your product model (B07ZRY6ZFD) and purchase information ready.