

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KLARSTEIN](#) /

› [KLARSTEIN Masterchef 60L Electric Mini Oven OV6-90300-efnu User Manual](#)

## KLARSTEIN OV6-90300-efnu

# KLARSTEIN Masterchef 60L Electric Mini Oven

Model: OV6-90300-efnu

Your guide to safe and efficient operation.

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can lead to personal injury and property damage.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot items.
- Ensure adequate ventilation around the oven. Do not block any ventilation openings.
- Unplug the oven from the outlet when not in use and before cleaning.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.

## 2. PRODUCT OVERVIEW

The KLARSTEIN Masterchef 60L Electric Mini Oven is a versatile appliance designed for various cooking tasks, including baking, roasting, and grilling. It features a spacious interior and multiple cooking functions.



## POTENTE


Mini forno da 2000 Watt e funzione spiedo

Image: The KLARSTEIN Masterchef 60L Electric Mini Oven in a kitchen environment, demonstrating its powerful performance in a family setting.

### Components:

- **Oven Housing:** Durable stainless steel construction.
- **Glass Door:** Double-glazed for improved insulation and visibility.
- **Control Panel:** Features temperature, function, and timer knobs.
- **Interior Light:** For clear visibility during cooking.
- **Heating Elements:** Upper and lower heating elements for even cooking.

### Included Accessories:

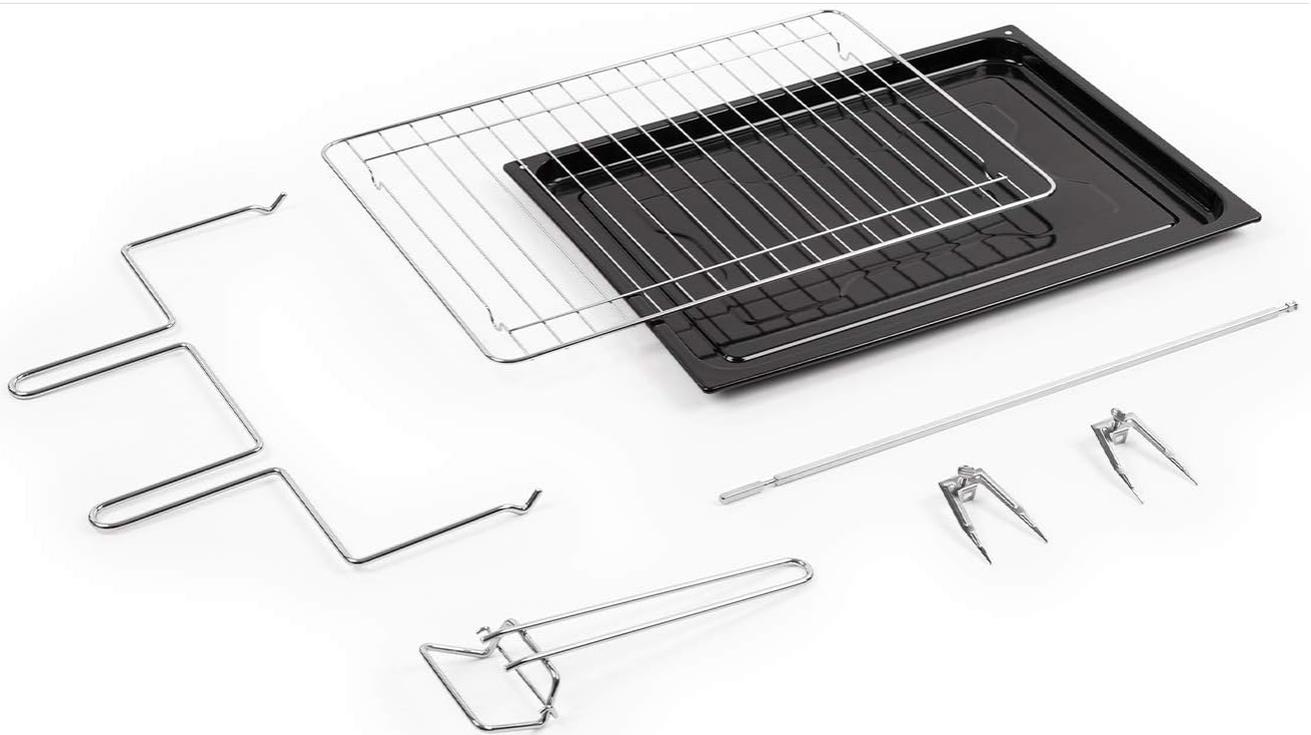

# TUTTO INCLUSO

## Griglia, teglia e spiedo rotante

Image: All included accessories: rotisserie spit, baking tray, and grill rack, ready for use.

- **Rotisserie Spit:** For roasting poultry or other meats.
- **Baking Tray:** For general baking and roasting.
- **Grill Rack:** For grilling and supporting dishes.
- **Tray Handle:** For safe removal of hot trays and racks.

### 3. SETUP AND INITIAL USE

#### Unpacking:

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any protective films or stickers from the appliance.
3. Check for any damage during transit. If damaged, do not use and contact customer support.

#### Placement:


- Place the oven on a flat, stable, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of clear space on all sides of the oven for proper ventilation.
- Do not place the oven near flammable materials or under wall cabinets.

### Initial Cleaning:

1. Wipe the exterior of the oven with a damp cloth.
2. Wash all accessories (baking tray, grill rack, rotisserie spit) in warm, soapy water, rinse thoroughly, and dry.
3. Before first use, operate the oven empty for approximately 15 minutes at 230°C (450°F) with the convection function to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure the room is well-ventilated.

## 4. OPERATING INSTRUCTIONS

The oven features four control knobs for temperature, function, and timer settings.

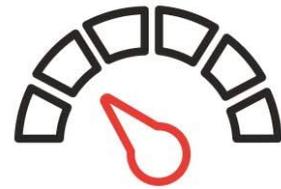

## PREPARAZIONE PERFETTA

Grazie al timer  
da 0-60 minuti

Image: The control panel of the oven, showing the temperature, function, and timer knobs for precise cooking control.

## Temperature Control:

- The top knob adjusts the temperature from 100°C to 230°C.
- Turn the knob clockwise to increase the temperature.



## TEMPERATO AL MEGLIO

Grazie alla funzione ventilata e  
intervallo di temperatura da 100-230°C

Image: The oven interior with visible heating elements and fan, illustrating the optimal temperature distribution for various cooking methods.

## Function Selector:

The second knob from the top selects the cooking function:

- **Upper Heat:** Ideal for grilling and browning.
- **Lower Heat:** Suitable for gentle baking and reheating.
- **Upper and Lower Heat:** Standard baking and roasting.
- **Convection (Fan-assisted):** For even heat distribution and faster cooking.
- **Rotisserie:** Activates the rotisserie function.
- **Convection + Rotisserie:** Combines fan-assisted cooking with rotisserie for perfectly roasted results.

## Timer:

- The bottom knob sets the cooking time from 0 to 60 minutes.

- The oven will automatically switch off and emit an audible signal when the set time expires.
- For continuous operation, turn the timer knob to the 'Stay On' position (if available, otherwise set to max time and monitor).

### Using the Rotisserie:



## A COMPLETARE

Spiedo per conferire ai piatti  
una doratura succosa e croccante

Image: A chicken being placed on the rotisserie spit inside the oven, ready for even roasting.

1. Secure the food (e.g., chicken) onto the rotisserie spit using the forks provided.
2. Insert the rotisserie spit into the designated slots inside the oven.
3. Select the 'Rotisserie' or 'Convection + Rotisserie' function.
4. Set the desired temperature and cooking time.

Your browser does not support the video tag.

Video: This video demonstrates the general operation of a mini oven, including placing food, setting the timer, and using the rotisserie function. While not specific to the KLARSTEIN Masterchef, it illustrates common usage patterns.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your oven.

### General Cleaning:

1. Always unplug the oven and allow it to cool completely before cleaning.
2. Wipe the interior and exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
3. Remove and clean the baking tray, grill rack, and rotisserie spit with warm, soapy water. These accessories are not dishwasher safe.
4. Ensure all parts are thoroughly dry before reassembling or using the oven.

### Glass Door Cleaning:

- For stubborn stains on the glass door, use a non-abrasive glass cleaner.
- Avoid spraying cleaner directly onto the heating elements or controls.

---

## 6. TROUBLESHOOTING

If you encounter any issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	Not plugged in, power outage, timer not set.	Check power connection, verify power supply, set the timer.
Food is not cooking evenly.	Incorrect function selected, oven overloaded, poor air circulation.	Ensure correct function (e.g., convection) is selected. Do not overload the oven. Ensure proper ventilation.
Timer does not work.	Timer knob not set correctly.	Ensure the timer knob is turned past the 10-minute mark and then back to the desired time.
Excessive smoke during cooking.	Food residue, excessive fat, initial burn-off.	Clean the oven interior and accessories. Reduce fat in cooking. Initial smoke is normal for first use.

If the problem persists after trying these solutions, please contact customer support.

---

## 7. TECHNICAL SPECIFICATIONS



Image: Diagram illustrating the external dimensions of the KLARSTEIN Masterchef oven.

- **Brand:** KLARSTEIN
- **Model:** OV6-90300-efnu
- **Color:** Black
- **Capacity:** 60 Liters
- **Power:** 2000 Watts
- **Voltage:** 220-240V, 50/60 Hz
- **Temperature Range:** 100-230°C
- **Timer:** 0-60 minutes with acoustic alarm
- **External Dimensions (LxHxD):** Approximately 62.6 x 36.8 x 45.4 cm
- **Internal Dimensions (LxHxD):** Approximately 48 x 31.6 x 36.3 cm
- **Weight:** Approximately 11.8 kg
- **Special Features:** Convection function, Rotisserie function, Interior lighting, Non-slip rubber feet.

## 8. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or contact KLARSTEIN customer support.

For technical assistance, spare parts, or any questions regarding your KLARSTEIN Masterchef oven, please visit our official website or contact our customer service team. Contact details can be found in the original packaging or on the KLARSTEIN website.