

Sharper Image Foot and Leg Spa (Model B07ZS465C1)

Sharper Image Foot and Leg Spa Instruction Manual

Model: Foot and Leg Spa (B07ZS465C1)

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Keep cord away from heated surfaces.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use on sensitive skin areas or where circulation is poor.
- Do not use on infants, invalids, or sleeping or unconscious persons.

- Do not use if you have any open wounds, skin lesions, or swollen areas on your feet or legs.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Sharper Image Foot and Leg Spa is designed to provide a relaxing and therapeutic experience for your feet and lower legs. Key features include:

- Calf-deep water capacity for comprehensive coverage.
- Hydro jets for stimulating reflex zones.
- Adjustable water heating system, maintaining temperatures between 95°F (35°C) and 116°F (47°C).
- Four motorized foot rollers for targeted massage.
- Accommodates foot sizes up to Women's size 12 and Men's size 13.
- Integrated portable handle and casters for convenient movement.



Image: The Sharper Image Foot and Leg Spa with a user's feet submerged, demonstrating its calf-deep water capacity and hydro-jet action.



Image: An overhead view of the spa's interior, highlighting the four motorized foot rollers and water jet nozzles.

SETUP

1. **Placement:** Position the Foot and Leg Spa on a flat, stable, and waterproof surface. Ensure it is near an electrical outlet and in an area where water spills will not cause damage.
2. **Filling with Water:** Open the lid. Fill the spa with warm or cold tap water to the indicated maximum fill line. Do not overfill. The spa can heat cold water, but warm water will reach the desired temperature faster.
3. **Power Connection:** Ensure your hands are dry, then plug the power cord into a standard electrical outlet.



Image: The front of the spa, illustrating the integrated drain hose for convenient water removal.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operation.



Image: A detailed view of the control panel, showing buttons for power, temperature adjustment, massage, red light therapy, and timer settings.

1. **Power On/Off:** Press the **ON/OFF** button to turn the unit on. The display will illuminate.
2. **Temperature Adjustment:**
 - Use the **TEMP PLUS** button to increase the water temperature.
 - Use the **TEMP MINUS** button to decrease the water temperature.
 - The temperature can be set between 95°F (35°C) and 116°F (47°C). The spa will automatically maintain the set temperature.
3. **Massage Function:** Press the **MASSAGE** button to activate the motorized foot rollers and hydro jets. Press again to cycle through different massage modes or turn off.
4. **Red Light Function:** Press the **RED LIGHT** button to activate the red light therapy feature. Press again to turn off.
5. **Timer Setting:** Press the **TIMER SET** button to set the desired operating duration. The timer can typically be set in increments (e.g., 10, 20, 30 minutes). The unit will automatically shut off once the timer expires.
6. **Using the Spa:** Once settings are adjusted, carefully place your feet into the water. Relax and enjoy the features.
7. **After Use:** When finished, press the **ON/OFF** button to turn off the unit. Unplug from the electrical outlet before draining.

MAINTENANCE

Draining Water

To drain the water from the spa:

1. Ensure the unit is unplugged.
2. Locate the drain hose on the side of the unit.
3. Uncap the drain hose and direct it towards a suitable drain (e.g., bathtub, large sink).
4. Allow all water to drain completely.
5. Recap the drain hose securely.

Cleaning

- Always unplug the unit before cleaning.
- Wipe the interior and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, brushes, or strong chemicals, as these may damage the unit.
- Rinse the interior thoroughly with clean water after each use to prevent mineral buildup.
- Ensure the unit is completely dry before storage.

Storage

- Store the appliance in a cool, dry place.
- Do not hang the unit by the power cord or place heavy objects on it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Water is not heating.	Temperature setting too low; heating element issue.	Increase the temperature setting using the TEMP PLUS button. Allow sufficient time for water to heat, especially if starting with cold water.
Massage rollers/jets are not working.	Massage function not activated; obstruction.	Press the MASSAGE button to activate. Check for any debris obstructing the rollers or jet nozzles.
Water is leaking.	Drain hose uncapped or damaged; unit damaged.	Ensure the drain hose cap is securely closed. Inspect the unit for any visible cracks or damage. If damage is present, discontinue use and contact customer support.

SPECIFICATIONS

- **Model:** Foot and Leg Spa (B07ZS465C1)
- **Brand:** Sharper Image
- **Manufacturer:** Sharper Image
- **Power Source:** Corded Electric (Not Cordless)
- **Temperature Range:** 95°F (35°C) to 116°F (47°C)

- **Features:** Heat, Hydro Jets, Motorized Foot Rollers, Red Light Therapy
- **Foot Size Accommodation:** Up to Women's size 12 / Men's size 13
- **Benefits:** Stress Relief, Pain Relief
- **Style:** Modern

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Sharper Image customer service directly. Keep your purchase receipt as proof of purchase. For further assistance, visit the official Sharper Image website or contact their customer support channels.