

EZBASICS B07ZSHWMSN

EZBASICS Hair Straightener Brush User Manual

Model: B07ZSHWMSN

1. INTRODUCTION

Thank you for choosing the EZBASICS Hair Straightener Brush. This manual provides essential information for the safe and effective use of your new hair straightening device. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

- Keep this product away from children.
- Ensure your hair is completely dry before using the hair straightener brush.
- Do not use this appliance near water or in a damp environment.
- A slight burning smell may occur during initial uses. This is normal and will dissipate with continued use.
- The device features an automatic shut-off function after 20 minutes of non-use for safety.
- Always unplug the device when not in use.

3. PRODUCT FEATURES

- **PTC Ceramic Heating:** Ensures fast and even heat distribution.
- **Anti-Scald Design:** Protective bristles minimize direct contact with heated elements.
- **Rapid Heating:** Reaches desired temperature in 30-60 seconds.
- **Adjustable Temperatures:** Multiple heat settings for various hair types.
- **Auto-Off Function:** Automatically powers down after 20 minutes of inactivity.
- **360° Rotating Power Cord:** Provides flexibility and prevents tangling during use.
- **Anti-Static Technology:** Helps reduce frizz for smoother results.

Anti-Scald Design



Image: The anti-scald design of the brush, showing protective outer bristles.



Instant Heating

20 Mins Auto-off without Operation



Image: Illustration highlighting the 30-second instant heating and 20-minute auto-off features.

360 Rotating Power Cord

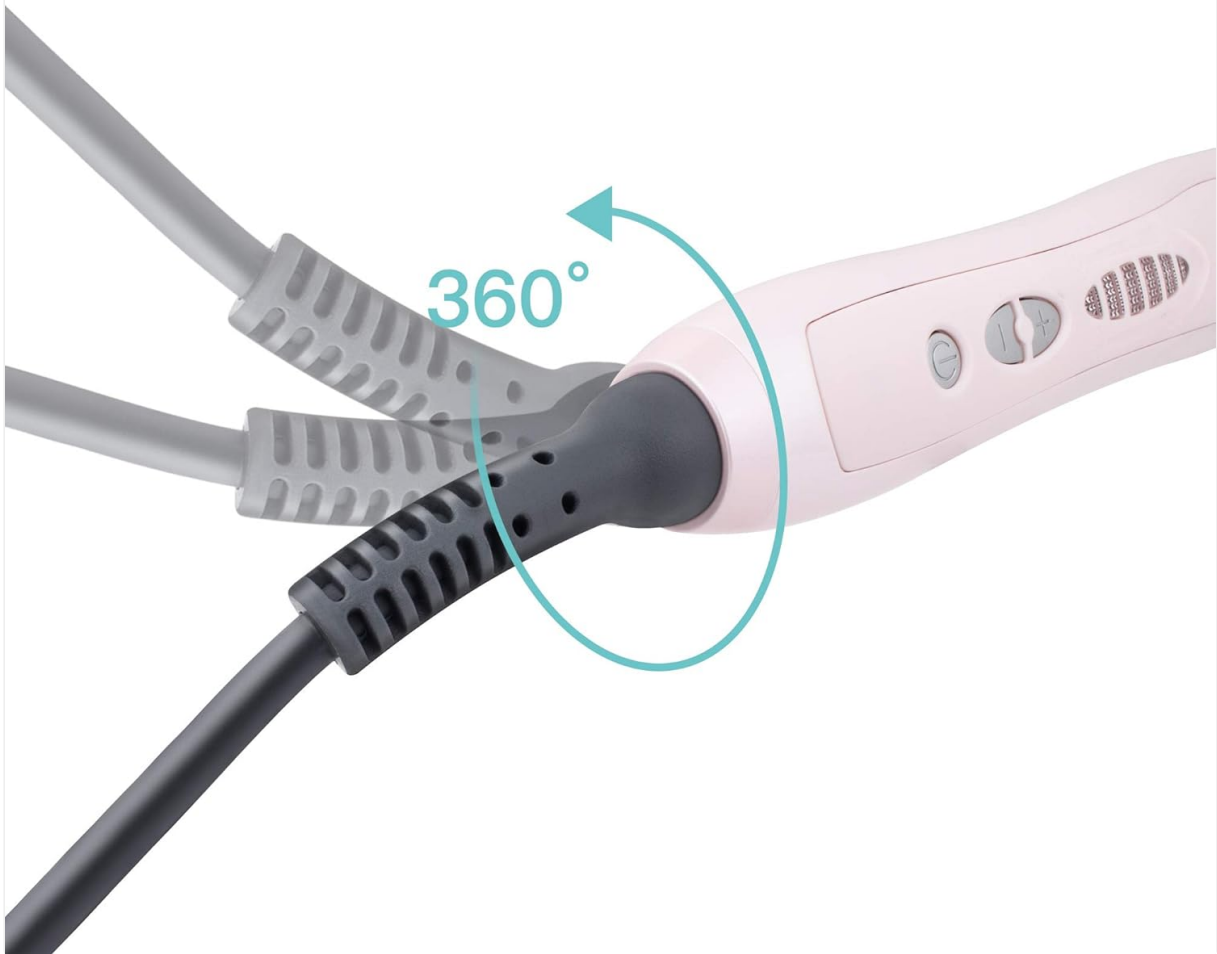 


Image: The 360-degree rotating power cord for flexible styling.

4. SETUP

1. Unpack the EZBASICS Hair Straightener Brush and all accessories from the packaging.
2. Inspect the device for any visible damage. Do not use if damaged.
3. Ensure your hair is clean, dry, and free of tangles before use.

5. OPERATING INSTRUCTIONS

1. Plug the device into a suitable electrical outlet.
2. Press the power button to turn on the device.
3. Allow 30-60 seconds for the brush to heat up to the default temperature.
4. Select an appropriate heat setting using the up/down buttons. There are 6 settings available, ranging from 275°F to 400°F (135°C to 204.4°C).
5. Divide your dry hair into manageable sections.
6. Slowly brush through each section of hair, moving the device from root to tip to straighten and smooth. For best results, ensure the hair passes through the bristles evenly.

7. After use, press and hold the power button to turn off the device, or allow it to automatically shut off after 20 minutes of inactivity.
8. Unplug the device from the power outlet and allow it to cool completely before storing.


Temperature Levels




1st Gear 266°F
Soft and thin hair



2nd Gear 293°F
Blonde, bleached or dyed hair

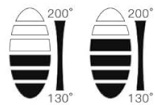

3th/4th Gear 320°F/347°F
Normal and slightly curled hair

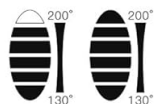

5th/6th Gear 374°F/392°F
Very thick, curly and coarse hair

Up/Down Shift button

on/off button



Image: Diagram showing different temperature settings and recommended hair types.

1st Gear (266°F / 130°C): Suitable for soft and thin hair.

2nd Gear (293°F / 145°C): Ideal for blonde, bleached, or dyed hair.

3rd/4th Gear (320°F / 160°C - 347°F / 175°C): Recommended for normal and slightly curled hair.

5th/6th Gear (374°F / 190°C - 392°F / 200°C): Best for very thick, curly, and coarse hair.

6. MAINTENANCE AND CLEANING

- Always ensure the device is unplugged and completely cool before cleaning.
- Use a dry, clean makeup brush or a soft cloth to gently remove any hair or debris from the bristles and heating elements.
- Do not use harsh chemicals, abrasive cleaners, or immerse the device in water.

- Store the brush in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the power cord is securely plugged into a working outlet. Check if the power button has been pressed and held for a few seconds.
- **Device not heating up:** Verify that the device is plugged in and turned on. Allow sufficient time (30-60 seconds) for it to reach the set temperature. If the issue persists, ensure the power outlet is functional.
- **Hair not straightening effectively:** Ensure hair is completely dry. Use smaller sections of hair. Increase the temperature setting if your hair type requires higher heat. Brush slowly and evenly from root to tip.
- **Burning smell during use:** A slight burning smell is normal during initial uses. If the smell is strong or persistent after prolonged use, discontinue use and contact customer support.

8. SPECIFICATIONS

Brand	EZBASICS
Model Name	Hair Straightener Brush
ASIN	B07ZSHWMSN
Color	Light Pink
Material Type	Ceramic
Heater Surface Material	Ceramic
Power Source	Corded Electric
Max Temperature Setting	204.4°C (400°F)
Package Dimensions	12.8 x 3.31 x 2.56 inches
Weight	1.23 Pounds
Manufacturer	EZBASICS

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact EZBASICS directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.