

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AIDITIYMI](#) /

› [Instruction Manual for AIDITIYMI RMF-TX310U Voice Remote Control](#)

## AIDITIYMI AIDITIYMI-RMFTX310U

# Instruction Manual for AIDITIYMI RMF-TX310U Voice Remote Control

Model: AIDITIYMI-RMFTX310U | Brand: AIDITIYMI

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your new AIDITIYMI RMF-TX310U Replacement Voice Remote Control. This remote is designed to be a direct replacement for select Sony 4K Smart Bravia TV models, offering full functionality including voice control.



Image: The AIDITIYMI RMF-TX310U replacement voice remote control, showcasing its full button layout.

## PRODUCT OVERVIEW AND FEATURES

The AIDITIYMI RMF-TX310U remote control offers a comprehensive set of features for an enhanced television viewing experience:

- Direct replacement for original Sony 4K Smart Bravia TV remotes.
- Integrated microphone for voice control functionality.
- Dedicated buttons for popular streaming services like Google Play and Netflix.
- Full navigation and media playback controls.
- Easy pairing process with compatible Sony TVs.



Image: A hand holding the RMF-TX310U remote control, with a Sony Smart TV displaying content in the background, illustrating typical usage.

## SETUP

### 1. Battery Installation

The remote requires 2 AAA alkaline batteries (not included). To install:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: The rear view of the remote control, with the battery cover removed to show the two AAA battery slots.

## 2. Pairing with Your TV

For full functionality, especially voice control, the remote must be paired with your Sony 4K Smart Bravia TV via Bluetooth. Ensure no other remotes are currently paired with your TV to avoid conflicts.

1. Ensure your TV is powered on.

2. Hold down the "VOL-" button and the "Mic" (microphone) button simultaneously for 3 seconds.
3. The TV should display a pairing confirmation message. Follow any on-screen prompts to complete the pairing process.

**Note:** If your original remote did not have voice functionality, you may need to enable voice control in your TV's menu settings. Navigate to the TV menu, find the VOICE CONTROL setting, and change its default from "disable" to "active" mode.



Image: A visual guide demonstrating how to hold the 'VOL-' and 'Mic' buttons on the remote control for 3 seconds to initiate the pairing process with the TV.

## OPERATING INSTRUCTIONS

Familiarize yourself with the button layout and functions of your new remote control:

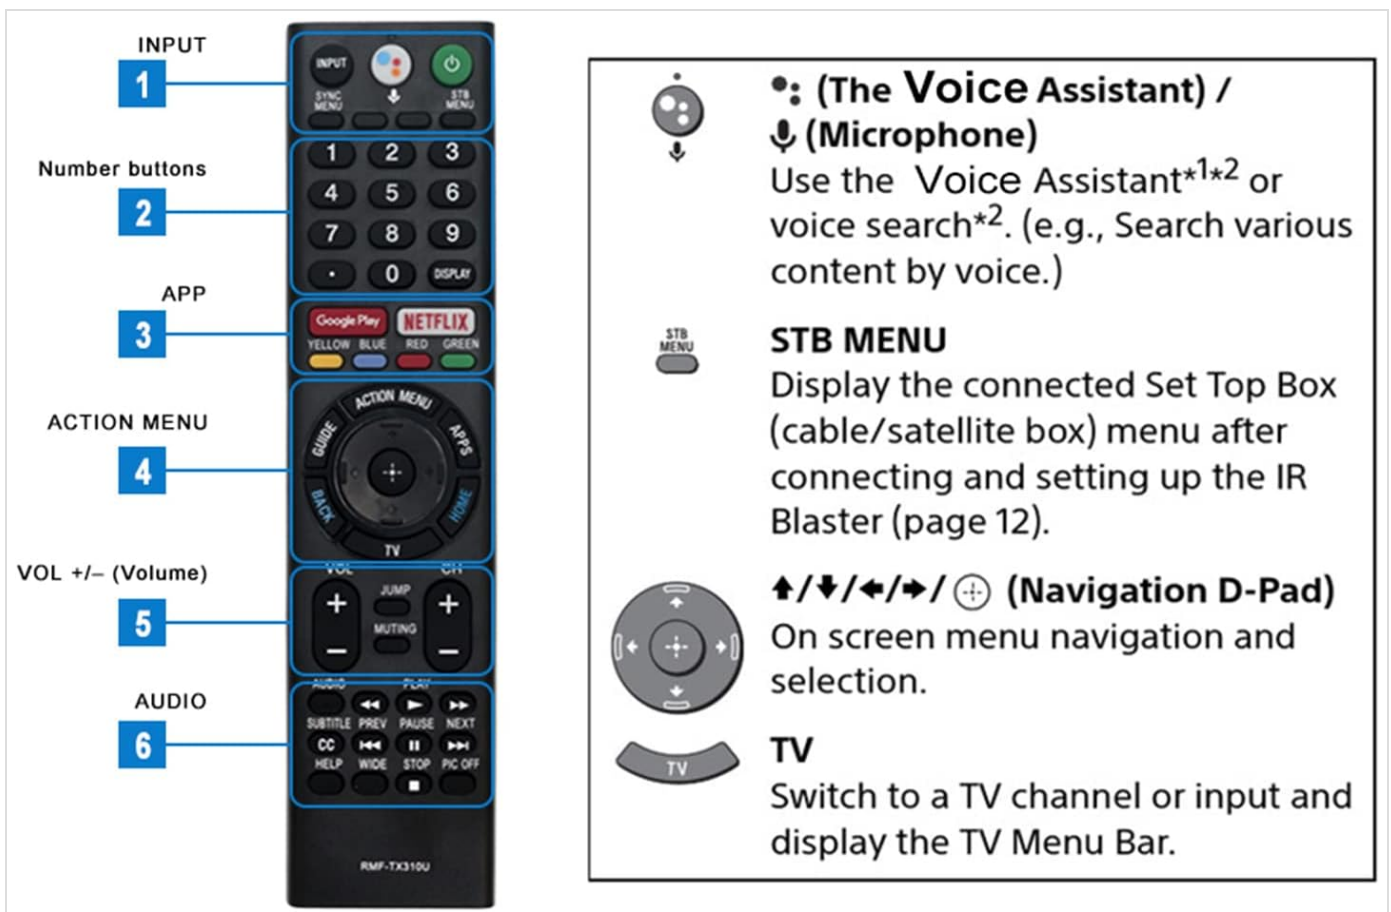


Image: A detailed diagram illustrating the various buttons on the RMF-TX310U remote control, with corresponding labels for their functions such as Input, Number buttons, App, Action Menu, Volume, and Audio controls.

- **Power Button:** Located at the top right, turns the TV on or off.
- **Input/Sync Menu:** Selects input sources or accesses the Sync Menu.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **Google Play/Netflix Buttons:** Quick access to these streaming applications.
- **Voice Assistant/Microphone Button:** Activates voice search or voice commands. Press and speak clearly into the microphone.
- **Navigation D-Pad:** Use the directional arrows to navigate on-screen menus and the center button to confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Volume (+/-) and Channel (+/-):** Adjust volume and change channels respectively.
- **Muting Button:** Mutes or unmutes the TV audio.
- **Media Playback Controls:** Play, Pause, Stop, Rewind, Fast Forward, Previous, Next.
- **Subtitle/CC/Audio/Help/Wide/Pic Off:** Access various display and audio options.

## COMPATIBILITY

This AIDITIYMI RMF-TX310U replacement remote control is compatible with the following Sony 4K Smart Bravia TV models:

- XBR-43X800G
- XBR-75X800G
- XBR-65X800G
- XBR-49X800G

- XBR-55X800G
- XBR-85X900F
- XBR-49X900F
- XBR-75X900F
- XBR-65X900F
- XBR-55X900F
- XBR-55A8G
- XBR-55X850F
- XBR-60X830F
- XBR-65A8G
- XBR-65X850F
- XBR-70X830F
- XBR-49X850F
- XBR-75X850F
- XBR-85X800G
- XBR-85X850F
- XBR-85X855F

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

## TROUBLESHOOTING

---

- **Remote not responding:**

- Check battery orientation and ensure they are fresh.
- Re-pair the remote with your TV following the pairing instructions in the Setup section.
- Ensure there are no obstructions between the remote and the TV's IR receiver.

- **Voice function not working:**

- Ensure the remote is properly paired via Bluetooth. Voice control requires Bluetooth connection.
- Verify that the VOICE CONTROL setting in your TV's menu is set to "active".
- Confirm that only this remote is paired with your TV, as some TVs support only one voice remote at a time.

- **Buttons feel stiff:**

Upon initial use, some buttons may feel slightly stiff. This is normal for a new remote and will soften with regular use over a few days.

- **Back cover not flush:**

The design of the back cover may not sit perfectly flush with the other part of the remote. This is a factory design characteristic and not a defect. It does not affect the remote's functionality.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2 x 0.6 inches
Item Weight	3 ounces
Model Number	AIDITIYMI-RMFTX310U
Batteries Required	2 AAA batteries
Special Feature	Voice Search
Color	Black
Max Number of Supported Devices	1 (one-to-one use)
Compatible Devices	Television (Sony 4K Smart Bravia TVs)
Date First Available	October 30, 2019

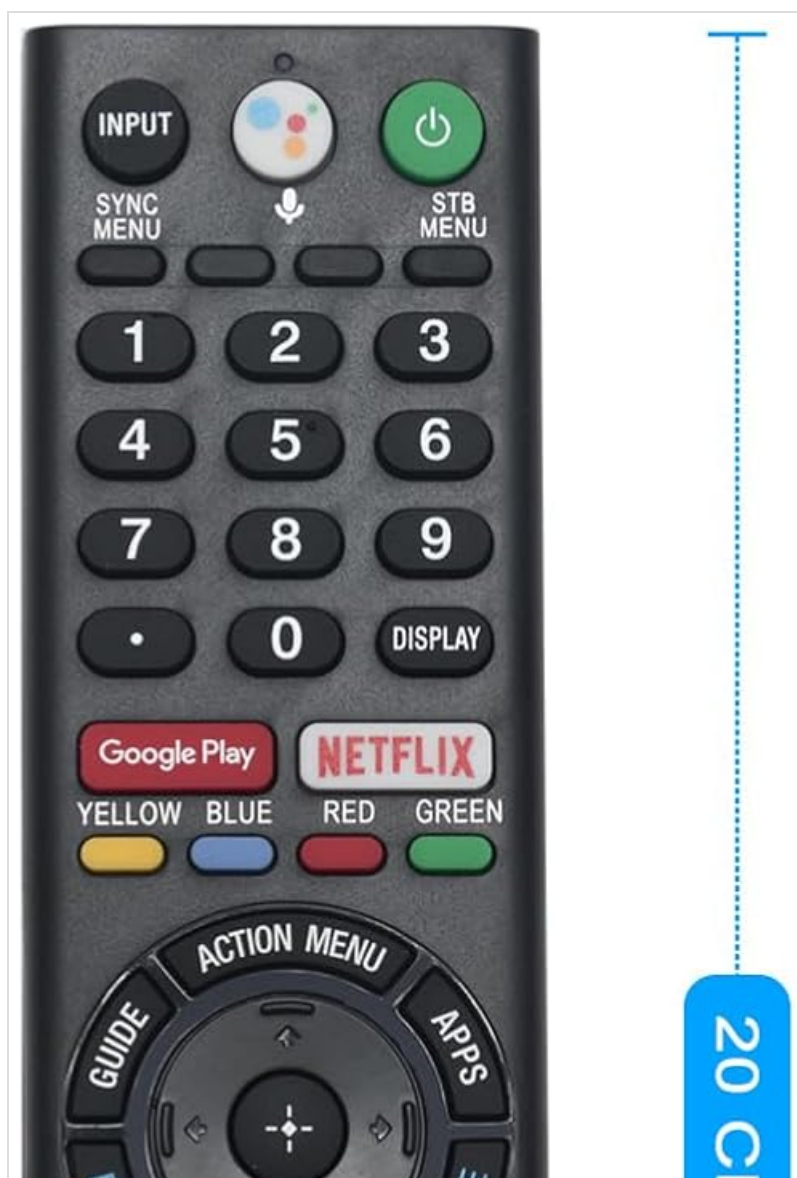




Image: A diagram illustrating the physical dimensions of the remote control, showing its length as 20 cm and width as 5 cm.

## WARRANTY AND SUPPORT

This product typically comes with a standard return policy, allowing for refunds or replacements within 30 days of purchase. For specific warranty details or technical support, please refer to the seller's information on the product listing or contact AIDITIYMI customer service directly.

For further assistance or inquiries, please visit the AIDITIYMI official support channels or the platform where the product was purchased.