

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [EASYTONE](#) /

> [EASYTONE Android TV Box 2025 User Manual - Model 4+32GB](#)

## EASYTONE 4+32GB

# EASYTONE Android TV Box 2025 User Manual

Model: 4+32GB

[Introduction](#)

[Safety](#)

[Package](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Connectivity](#)

[Media](#)

[Mirroring](#)

[Storage](#)

[Troubleshooting](#)

[Specifications](#)

M

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your EASYTONE Android TV Box 2025 (Model: 4+32GB). This device is designed to transform your television into a smart entertainment hub, offering access to various applications, media content, and online services. Please read this manual thoroughly before using the product to ensure proper functionality and safety.



Image 1.1: The EASYTONE Android TV Box 2025 with its included remote control.

## 2. SAFETY INFORMATION

To ensure safe and optimal operation, please observe the following precautions:

- Do not expose the device to moisture, rain, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter. Using unauthorized adapters may damage the device and void the warranty.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from children and pets.
- Ensure proper ventilation around the device to prevent overheating.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- EASYTONE Android TV Box (1 unit)

- Remote Control (1 unit)
- Power Adapter (1 unit)
- HDMI Cable (1 unit)
- User Manual (1 unit)



Image 3.1: Contents of the EASYTONE Android TV Box package.

## 4. PRODUCT OVERVIEW

### 4.1. Device Ports and Dimensions

The Android TV Box features various ports for connectivity and expansion. Refer to the diagram below for port identification and device dimensions.



Image 4.1: Port layout and dimensions of the EASYTONE Android TV Box.

- **AV Port:** For connecting to older televisions using an AV cable (not included).
- **Ethernet Port:** For wired network connection.
- **HD Out (HDMI) Port:** For connecting to an HDTV or monitor.
- **Power Adapter Port:** For connecting the power supply.
- **USB Ports:** For connecting external storage devices, keyboards, mice, or other USB peripherals.
- **TF Card Slot:** For expanding storage with a TF (MicroSD) card.

## 4.2. Key Features

- **Operating System:** Android 10.0 for broad compatibility and seamless updates.
- **Processor:** AllWinner H616 Quad-Core for stable performance.
- **Memory:** 4GB RAM and 32GB ROM for efficient multitasking and app storage.
- **Display Support:** 4K/6K resolution, H.265 decoding, HDR10, and 3D graphics acceleration.
- **Connectivity:** Dual-band 2.4G/5G Wi-Fi, 100M LAN Ethernet, and Bluetooth 5.0.

## 5. SETUP GUIDE

Follow these steps to set up your Android TV Box:

1. **Connect the HDMI Cable:** Connect one end of the HDMI cable to the HD Out port on the TV Box and the other end to an HDMI input port on your television.
2. **Connect the Power Adapter:** Plug the power adapter into the DC IN port on the TV Box, then plug the adapter into a wall outlet.
3. **Power On:** The device should power on automatically. If not, press the power button on the remote control.
4. **Select Input:** On your TV, select the correct HDMI input source using your TV's remote control.
5. **Initial Setup:** Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account login.



Image 5.1: Visual guide for connecting the Android TV Box.

## 6. OPERATING INSTRUCTIONS

### 6.1. Navigating the Interface

Use the included remote control to navigate the Android 10.0 interface. The directional buttons allow movement, and the 'OK' button confirms selections. The 'Back' button returns to the previous screen, and the 'Home' button takes you to the main launcher.

### 6.2. Installing and Managing Applications

Access the Google Play Store to download and install your favorite applications. To manage installed apps, go to **Settings > Apps**. From there, you can open, force stop, or uninstall applications.

# Upgrade Android 10.0 OS

Run smoothly and download Android applications freely



Image 6.1: The Android 10.0 interface displaying various applications.

## 6.3. System Updates (OTA)

The device supports Over-The-Air (OTA) updates to ensure your system remains current with the latest features and security patches. To check for updates, navigate to **Settings > About > System Update**.

## 7. CONNECTIVITY

### 7.1. Wi-Fi Connection

The TV Box supports dual-band 2.4G and 5G Wi-Fi for fast and stable wireless internet access. To connect:

1. Go to **Settings > Network > Wi-Fi**.
2. Select your desired Wi-Fi network from the list.
3. Enter the password if prompted and select **Connect**.



Image 7.1: Dual-band 2.4G/5G Wi-Fi connectivity.

### 7.2. Bluetooth Connection

The device features Bluetooth 5.0, allowing you to connect various Bluetooth peripherals such as keyboards, mice, gamepads, or headphones.

1. Go to **Settings > Connected Devices > Pair new device**.
2. Ensure your Bluetooth device is in pairing mode.
3. Select your device from the list and follow any on-screen prompts to complete pairing.



Image 7.2: Connecting Bluetooth and USB devices.

### 7.3. Ethernet Connection

For a more stable and faster internet connection, you can connect the TV Box directly to your router using an Ethernet cable. Simply plug one end of the Ethernet cable into the LAN port on the TV Box and the other end into an available port on your router.

## 8. MEDIA PLAYBACK

The EASYTONE Android TV Box supports high-resolution media playback and advanced video decoding.

### 8.1. 4K/6K Resolution and HDR10

Enjoy stunning visual clarity with support for 4K and 6K Ultra HD resolutions. The device also supports HDR10 (High Dynamic Range), which provides brighter images, richer colors, and enhanced contrast for a more immersive viewing experience.



Image 8.1: Visual comparison of 6K HDR10 and 4K display quality.

### 8.2. H.265 Video Decoding

The device utilizes H.265 (HEVC) video decoding technology, which offers improved compression efficiency compared to H.264. This allows for higher quality video streaming at lower bandwidths, resulting in clearer images and reduced buffering.



Image 8.2: H.265 video decoding efficiency.

### 8.3. 3D Graphics Acceleration

Experience enhanced visual depth with 3D graphics acceleration support, bringing compatible content to life on your screen.

## 9. SCREEN MIRRORING (AIRSCREEN/MIRACAST)

The TV Box includes built-in Airscreen and Miracast functionality, allowing you to cast content from your mobile device (smartphone or tablet) directly to your television screen.

1. Ensure both your mobile device and the TV Box are connected to the same Wi-Fi network.
2. Open the Airscreen or Miracast application on the TV Box.
3. On your mobile device, activate the screen mirroring feature (often labeled 'Cast', 'Screen Mirroring', 'Smart View', or 'Wireless Display').
4. Select the TV Box from the list of available devices to begin mirroring.



Image 9.1: Screen mirroring using Airscreen built-in feature.

## 10. STORAGE EXPANSION

The TV Box comes with 32GB of internal storage. You can expand this storage using:

- **TF Card:** Insert a TF (MicroSD) card (up to 64GB) into the designated slot.
- **External Hard Drive/USB Drive:** Connect an external hard drive or USB flash drive (up to 1TB) to one of the USB ports.

Expanded storage can be used for additional applications, media files, and other data.

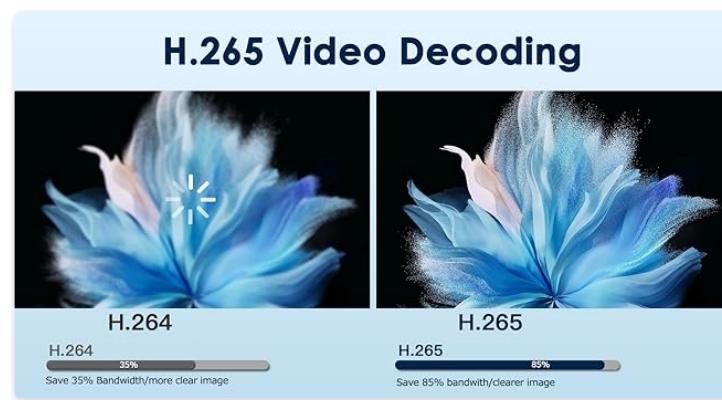


Image 10.1: USB 2.0 for fast data transfer and storage expansion.

## 11. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Device not turning on	Power adapter not connected; faulty power outlet.	Ensure power adapter is securely connected and plugged into a working outlet. Try a different outlet.
No signal on TV screen	Incorrect HDMI input selected; loose HDMI cable.	Verify TV input matches the HDMI port used. Reconnect HDMI cable securely.
Wi-Fi connection unstable or disconnecting	Weak signal; router issues; interference.	Move the TV Box closer to the router. Restart your router. Try connecting via Ethernet for stability. Forget and reconnect to the Wi-Fi network in settings.
Applications crashing or running slowly	Too many apps running; outdated app version; insufficient storage.	Close background apps. Update apps from Google Play Store. Clear app cache/data or uninstall unused apps. Consider expanding storage.
Remote control not responding	Low batteries; obstruction; pairing issue.	Replace batteries. Ensure no obstructions between remote and TV Box. Re-pair the remote if it's a Bluetooth remote (refer to device settings).

## 12. SPECIFICATIONS

Detailed technical specifications for the EASYTONE Android TV Box 2025:

Feature	Detail
Brand	EASYTONE
Model Name	4+32GB
Operating System	Android 10.0
Processor	AllWinner H616 Quad-Core
RAM	4GB
ROM	32GB
Connectivity Technology	Bluetooth 5.0, Ethernet (100M LAN), HDMI, USB, Wi-Fi (2.4G/5G Dual-Band)
Video Resolution	Up to 6K
Special Features	Browser, H.265 Decoding, HDR10, 3D Graphics Acceleration, Airscreen/Miracast
Product Dimensions	3.9 x 3.9 x 0.78 inches
Item Weight	12 ounces

## 13. MAINTENANCE

To ensure the longevity and optimal performance of your TV Box:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Software Updates:** Regularly check for and install system updates to benefit from performance improvements and security enhancements.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not cover ventilation openings.
- **Power Cycle:** If the device becomes unresponsive, disconnect the power adapter for a few seconds and then reconnect it to perform a power cycle.

## 14. WARRANTY AND SUPPORT

Your EASYTONE Android TV Box is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact EASYTONE customer support.

If you require technical assistance or have questions not covered in this manual, please contact EASYTONE customer support through the retailer's platform or the official brand website.