

[Manuals.plus](#) /

› [EAGLE PEAK](#) /

› EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent Instruction Manual

EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent

EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent Instruction Manual

Model: 13x13 Straight Leg Pop Up Canopy Tent

INTRODUCTION

This manual provides detailed instructions for the safe and efficient setup, operation, and maintenance of your EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your product.

What's in the Box

Verify that all components are present before beginning assembly.



Image: Components included in the EAGLE PEAK 13x13 Pop Up Canopy Tent package. This includes the foldable frame, canopy fabric, a wheeled carrying bag, four weight bags, ropes, and ground stakes.

- 1 x Pre-assembled Steel Frame
- 1 x Canopy Top (150D Oxford Fabric with UPF 50+ UV Protection)
- 1 x Wheeled Carrying Bag (600x300D)
- 4 x Reusable Weight Bags
- 4 x Ropes
- 8 x Ground Stakes

SETUP INSTRUCTIONS

The EAGLE PEAK Pop Up Canopy Tent is designed for easy, single-person setup. No tools are required.

Step-by-Step Assembly

1. **Unfold the Steel Frame:** Place the folded frame in the desired location. With a partner, or by yourself, gently pull the outer legs of the frame outwards until it begins to expand.

1-PERSON SETUP IN UNDER 1 MINUTE



1 Push

+



1 Person

+




1 Minute

No Tools Required

STEP 01

Unfold the steel frame and attach the UV canopy top

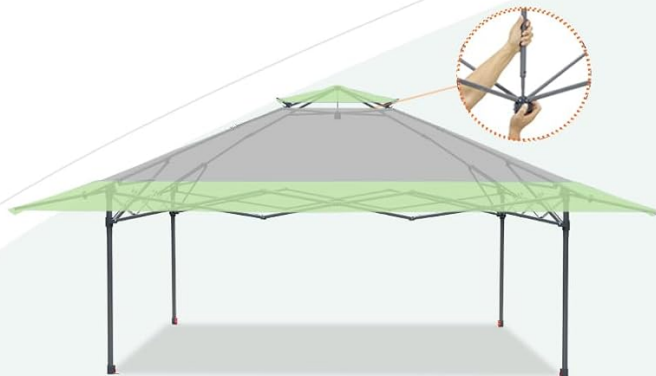

STEP 02

Push the Center-Lock Hub upward until the frame clicks into place



STEP 03

Choose your height level using the push-button sliders

- Image: Illustration showing the initial unfolding of the canopy frame and the attachment of the canopy top fabric to the frame corners.
2. **Attach the Canopy Top:** Drape the canopy fabric over the partially opened frame. Secure the corners of the canopy top to the frame's corner supports using the attached Velcro straps or clips. Ensure the canopy is centered and evenly distributed.

Your browser does not support the video tag.

Video: Demonstrates the process of unfolding the canopy frame and securing the canopy fabric to the frame. This video highlights the ease of setup.

3. **Engage the Center-Lock Hub:** Once the canopy top is attached, stand inside the canopy. Locate the red center-lock hub. Push this hub upward until the frame clicks into place, fully extending the canopy. This patented Peak Push system allows for quick, pinch-free setup.

UPF 50+ SUN PROTECTION CANOPY

STAY COOL & COVERED

Durable 150D Oxford Fabric with Reflective Silver Coating for Maximum UV Protection



Reflective Silver Coating



Color Fade-Resistant



Water-Resistant Fabric

Image: Close-up view of the canopy's center-lock hub, illustrating the upward push motion required to fully extend and lock the frame.

4. **Adjust Height:** Each leg of the canopy features push-button sliders for height adjustment. Press the button and slide the leg to your desired height setting. Ensure all four legs are set to the same height for stability. The frame offers 3 adjustable positions.



Image: Diagram showing the three adjustable height levels on the canopy legs, controlled by push-button sliders.

5. **Secure the Canopy:** For optimal stability, especially in windy conditions, always use the provided ropes and stakes. Attach the ropes to the designated loops on the canopy frame and secure them to the ground with stakes. Fill the four reusable weight bags with sand or other heavy material and attach them to the canopy legs.



Image: Detail of the anchoring system, showing how ropes are attached to the canopy frame for securing it to the ground.



Image: Illustration of the four reusable weight bags, detailing their features like reinforced handles, Velcro closure, and adjustable

straps for attaching to canopy legs.

OPERATING YOUR CANOPY

Your EAGLE PEAK canopy is designed for outdoor use, providing shade and protection from the elements.

Key Features

- **Vented Top:** The canopy features a dual-vented roof for improved airflow and wind resistance, helping to keep the area underneath cooler and more stable.

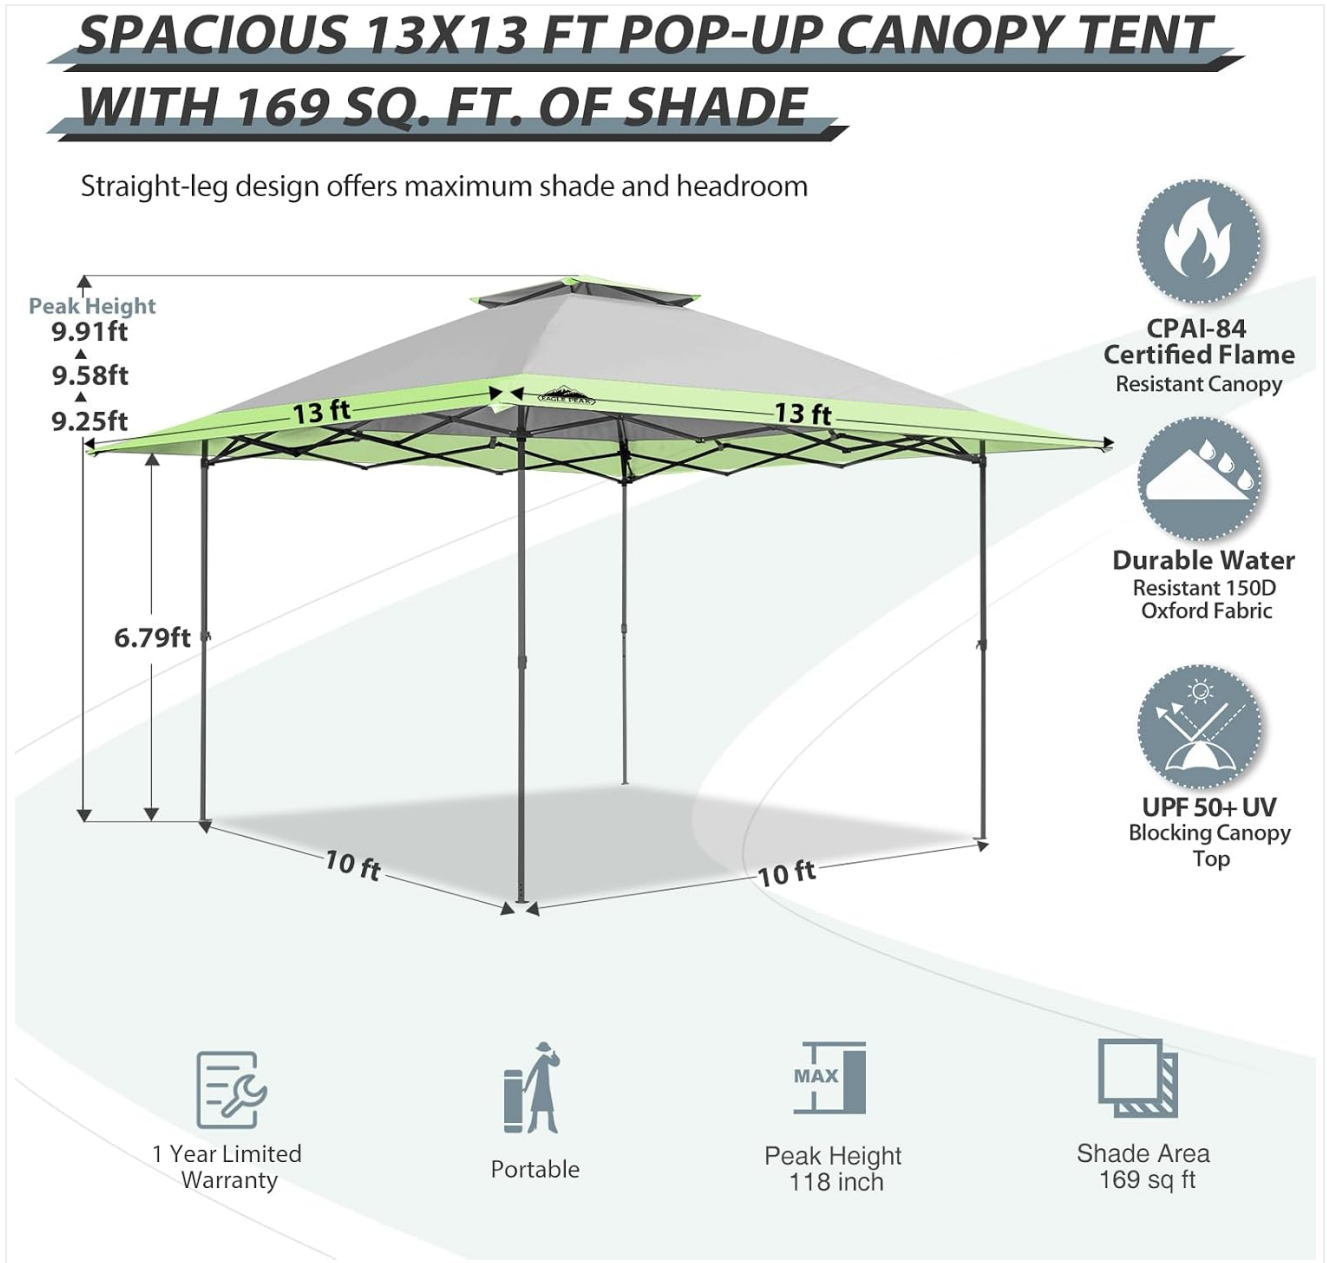


Image: Detail of the canopy's vented top, illustrating how air circulates to reduce heat buildup and increase stability against wind.

- **UPF 50+ UV Protection:** The 150D oxford fabric canopy top is treated with a reflective silver coating, offering UPF 50+ UV sun protection, blocking up to 99% of UVA and UVB rays.

UPF 50+ SUN PROTECTION CANOPY

STAY COOL & COVERED

Durable 150D Oxford Fabric with Reflective Silver Coating for Maximum UV Protection



Reflective Silver Coating



Color Fade-Resistant



Water-Resistant Fabric

Image: Visual representation of the canopy's UPF 50+ sun protection, highlighting its ability to block harmful UV rays.

- **Auto-Extending Eaves:** The eaves automatically extend during setup, providing maximum coverage of 169 square feet without manual adjustment.

SET OF 4 CANOPY WEIGHT BAGS

SECURE & STABLE IN ANY SETUP



Reinforced Carry Handle
for Easy Transport



Velcro Top Closure
Fast Fill & Seal



Adjustable Loop Straps
Compatible with Most Frame Legs

Image: Diagram illustrating the automatic extension of the canopy eaves, which provides additional shade coverage.

- **Water-Resistant Fabric:** The 150D oxford fabric is water-resistant, offering protection from light rain.

Your browser does not support the video tag.

Video: Overview of the EAGLE PEAK 13x13 Straight Leg Pop Up Canopy, showcasing its features like the Peak Push system, vented top, and UV protection. This video provides a general demonstration of the product's benefits and ease of use.

MAINTENANCE

Proper maintenance will extend the life of your canopy.

- **Cleaning the Canopy Top:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or bleach, as this can damage the fabric and its protective coatings. Rinse thoroughly and allow to air dry completely before storing.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. The frame is powder-coated for rust resistance, but prolonged exposure to moisture can still cause issues. Clean any dirt or debris from the frame.
- **Storage:** Always ensure the canopy top and frame are completely dry before folding and storing them in the wheeled carrying bag. Storing a damp canopy can lead to mold, mildew, and fabric degradation. Store in a cool, dry place away from direct sunlight.
- **Fasteners:** Periodically check all nuts and bolts on the frame for tightness. Tighten as necessary to maintain structural integrity.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Canopy difficult to open/close	Frame joints are stiff or misaligned.	Ensure the frame is on a flat surface. Gently wiggle the frame to align joints. Lubricate moving parts if necessary.
Canopy unstable in wind	Insufficient anchoring; strong winds.	Always use all provided ropes and stakes. Fill and attach all four weight bags to the legs. In strong winds, it is recommended to take down the canopy.
Water pooling on canopy top	Heavy rainfall exceeding drainage capacity.	While the canopy is water-resistant, it is not designed for heavy rain. Consider lowering one side slightly to encourage runoff, or take down the canopy during heavy precipitation.
Small tears or poke-throughs in canopy fabric	Sharp edges on frame during setup; excessive tension.	Handle the canopy fabric carefully during setup. Reinforce vulnerable areas (like corners) with strong tape if minor damage occurs. Contact customer service for replacement parts if significant damage.

SPECIFICATIONS

Feature	Detail
Brand	EAGLE PEAK
Model	13x13 Straight Leg Pop Up Canopy Tent
Product Dimensions (L x W x H)	155.9"L x 155.9"W x 118.1"H (approx. 13' x 13' x 9.8')
Shade Area	169 Square Feet

Feature	Detail
Item Weight	18 Kilograms (approx. 39.7 lbs)
Frame Material	Alloy Steel (powder-coated for rust resistance)
Canopy Material	150D Oxford Fabric with Reflective Silver Coating
UV Protection	UPF 50+ (blocks 99% UVA/UVB)
Water Resistance Level	Water Resistant
Assembly Required	No (pre-assembled frame)
Occupancy	8-10 people
Special Features	Peak Push System (single-person setup), Vented Top, Auto-Extending Eaves, 3-Position Adjustable Height

WARRANTY AND SUPPORT

EAGLE PEAK offers a **1-year limited after-sale protection** from the original date of purchase. This warranty covers the frame, canopy, and carrying bag.

For any questions, concerns, or warranty claims, please contact our professional service team. Refer to your purchase documentation for specific contact details or visit the official EAGLE PEAK website.

Important Safety Information: Always stake down and guy out the canopy for stability, especially in windy conditions. Never leave the canopy unattended when in use. For complete safety instructions, please contact our professional service team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question