

**Toastmaster TM-796KECW**

# Toastmaster 1.7 Liter Electric Kettle Instruction Manual (Model TM-796KECW)

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Toastmaster Electric Kettle. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- This appliance is for household use only.
- Ensure the lid is securely closed before operating.
- The kettle must be used only with the stand provided.

## 2. PRODUCT OVERVIEW

The Toastmaster 1.7 Liter Electric Kettle (Model TM-796KECW) is designed for efficient and safe water boiling. Its cordless design and rotating base offer convenience, while features like automatic shut-off and boil-dry protection ensure safety.



Figure 1: Toastmaster 1.7 Liter Electric Kettle showing its overall dimensions (9.06 inches L x 6.3 inches W x 8.66 inches H).

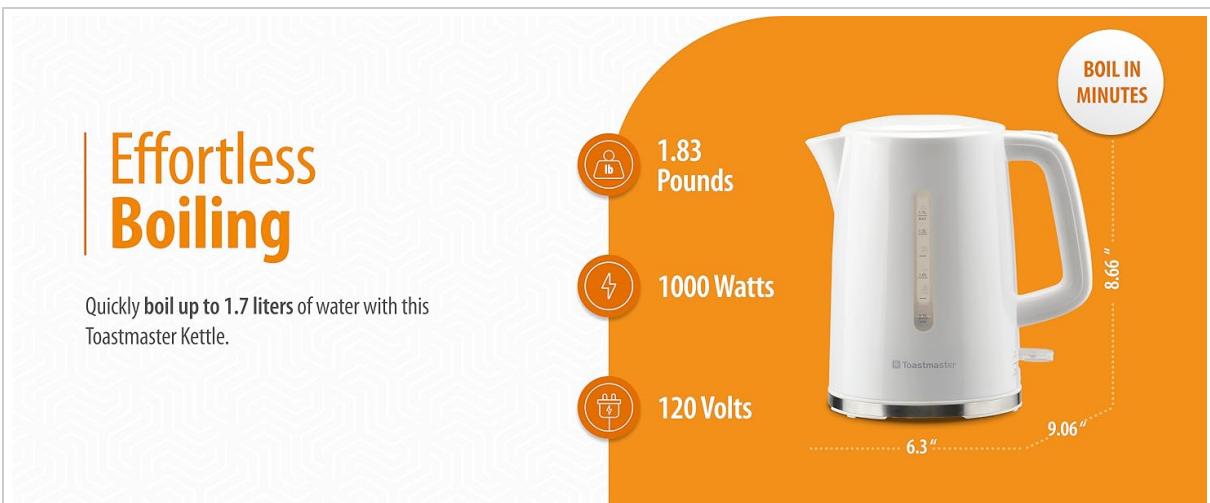


Figure 2: Key design elements including the cordless kettle, 360-degree rotating base, and pour spout with filter.

# Thoughtful Design

Experience the freedom of **cordless convenience** and **effortless pouring**, all complemented by a base that welcomes the kettle back from any angle.



**Cordless Kettle**



**360° Rotating Base**



**Pour Spout with Filter**



Figure 3: Convenient features such as clear water level markings, an illuminated power switch, and boil-dry protection.

## 3. SETUP

- Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.
- Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
- Placement:** Place the power base on a dry, flat, stable surface away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.
- Power Connection:** Plug the power base into a standard electrical outlet.

## 4. OPERATING INSTRUCTIONS

### 1. Filling the Kettle:

- Press the flip-top lid release button located on the handle to open the lid.
- Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX (1.7L) mark indicated on the water window.
- Close the lid securely until it clicks into place.

### 2. Placing on Base:

Place the kettle firmly onto its 360-degree rotating power base.

**Powering On:** Press the illuminated power switch located at the bottom of the handle to the "ON" position. The indicator light will illuminate, signaling that the kettle is heating.

**Automatic Shut-Off:** The kettle will automatically turn off once the water reaches a rolling boil. The indicator light will extinguish.

**Pouring:** Carefully lift the kettle from its base and pour the hot water. The cordless design allows for easy serving.

**Boil-Dry Protection:** The kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without sufficient water, it will automatically turn off to prevent damage. Allow it to cool down before refilling with cold water.

### Demonstration Videos:

Your browser does not support the video tag.

Video 1: Watch the Toastmaster kettle quickly heat water to boiling point. This video demonstrates the speed and efficiency of the electric kettle in action.

Your browser does not support the video tag.

Video 2: A quick demonstration of the kettle's ease of use, from filling to pouring, highlighting its simple operation for tea preparation.

Your browser does not support the video tag.

Video 3: This video showcases the rapid boiling capability of the Toastmaster Electric Kettle, boiling water in under 2 minutes.

Your browser does not support the video tag.

Video 4: A review highlighting the simple and straightforward operation of the Toastmaster Electric Kettle.

Your browser does not support the video tag.

Video 5: This video addresses the ease of use of the kettle, demonstrating its user-friendly design.

Your browser does not support the video tag.

Video 6: A short clip showcasing the Toastmaster kettle in everyday use, emphasizing its convenience.

## 5. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
  - Fill the kettle with 2 cups of white vinegar and 2 cups of water.
  - Bring the mixture to a boil and let it stand for 30 minutes.
  - Discard the mixture and rinse the kettle thoroughly with fresh water several times.
  - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.
- **Filter Cleaning:** The pour spout features a filter. Remove the filter and rinse it under running water. If necessary, use a soft brush to remove any deposits. Reinsert the filter after cleaning.
- **Storage:** When not in use, store the kettle on its base in a dry place. The power cord can be wrapped around the base for tidy storage.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Kettle not properly placed on base; Power switch not engaged; No power to outlet.	Ensure kettle is seated correctly on the base. Press the power switch to ON. Check if the outlet is working by plugging in another appliance.

Problem	Possible Cause	Solution
Kettle turns off before boiling.	Boil-dry protection activated (insufficient water); Mineral deposits inside kettle.	Ensure water level is above MIN mark. Allow kettle to cool, then refill. Descale the kettle as per maintenance instructions.
Water tastes strange or has particles.	New kettle residue; Mineral deposits.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle.
Lid does not close properly.	Obstruction or misalignment.	Check for any obstructions. Ensure the lid is aligned correctly and press firmly until it clicks.

## 7. SPECIFICATIONS

- **Model Name:** TM-796KECW
- **Brand:** Toastmaster
- **Capacity:** 1.7 Liters
- **Material:** Plastic
- **Product Dimensions:** 9.06" L x 6.3" W x 8.66" H
- **Item Weight:** 1.83 Pounds
- **Special Feature:** Cordless design, Automatic Shut-Off, Boil-Dry Protection, 360° Rotating Base, Filtered Pour Spout, Full-View Water Window.
- **Included Components:** Kettle, Power Base, Lid
- **Product Care Instructions:** Hand wash, Wipe clean
- **Recommended Uses:** Making hot drinks, cooking instant food, boiling water for various purposes.

## 8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Toastmaster website. Keep your purchase receipt as proof of purchase for any warranty claims.