

[Manuals.plus](#) /

› [Lifestyle-Solutions](#) /

› Lifestyle-Solutions Lifestyle Battery Pack Instruction Manual

Lifestyle-Solutions Lifestyle Battery Pack

Lifestyle-Solutions Lifestyle Battery Pack Instruction Manual

Wireless Power Solution for Electric Motion Furniture

PRODUCT OVERVIEW

The Lifestyle-Solutions Lifestyle Battery Pack provides a wireless power solution for electric motion furniture, including power recliners, reclining sofas, and lift chairs. This battery pack eliminates the need for furniture to be tethered to a wall outlet, offering flexibility in furniture placement and reducing trip hazards.


The battery pack is designed to power the motor functions of your furniture. It is not intended for use with furniture featuring 'always-on' lighted hand controls, LED lights, or USB ports for charging portable devices, as these features will significantly deplete the battery life.

HOW TO CHARGE



TWO WAYS OF CHARGE:

- 1 - INCLUDED WALL CHARGER
- 2 - YOUR EXISTING RECLINER PLUG

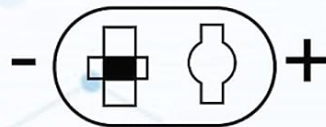

- COMPATIBLE WITH ALL BRANDS THAT USE THE TWO PRONG CONNECTION
- FULL RECHARGE IN 6 HOURS

Image: The Lifestyle Battery Pack, a compact black unit with two output cables, held in a hand to illustrate its size.

SETUP AND INSTALLATION

1. **Initial Charging:** Before first use or after a long storage period, fully charge the battery pack. The battery may require three to four charge/discharge cycles to achieve maximum performance. A full charge typically takes approximately 6 hours.
2. **Charging Methods:** The battery can be charged in two ways:
 - Using your existing recliner's power cable.
 - Using the included wall charger.
3. **Installation:** The battery pack is designed for quick and simple installation. Unplug the motor from your furniture's power supply. Then, plug the battery pack in between the motor and the power supply. Ensure the battery pack is placed away from any moving mechanisms or motors to prevent crushing or damage during furniture operation.
4. **Compatibility Check:** The Lifestyle Battery Pack is compatible with most 2-prong style recliner connections. Verify

your furniture's connection type before purchase.

BOX INCLUDES



EXTENSION CORD



POWER CORD



BATTERY PACK
2200mAh 25.9v



WALL CHARGER

Image: Components included in the box: the battery pack, an extension cord, a power cord, and a wall charger.

BATTERY CONNECTIONS



Below connectors are not compatible



Image: A visual guide showing the compatible 2-prong connectors for the battery pack and examples of incompatible round and multi-pin connectors.

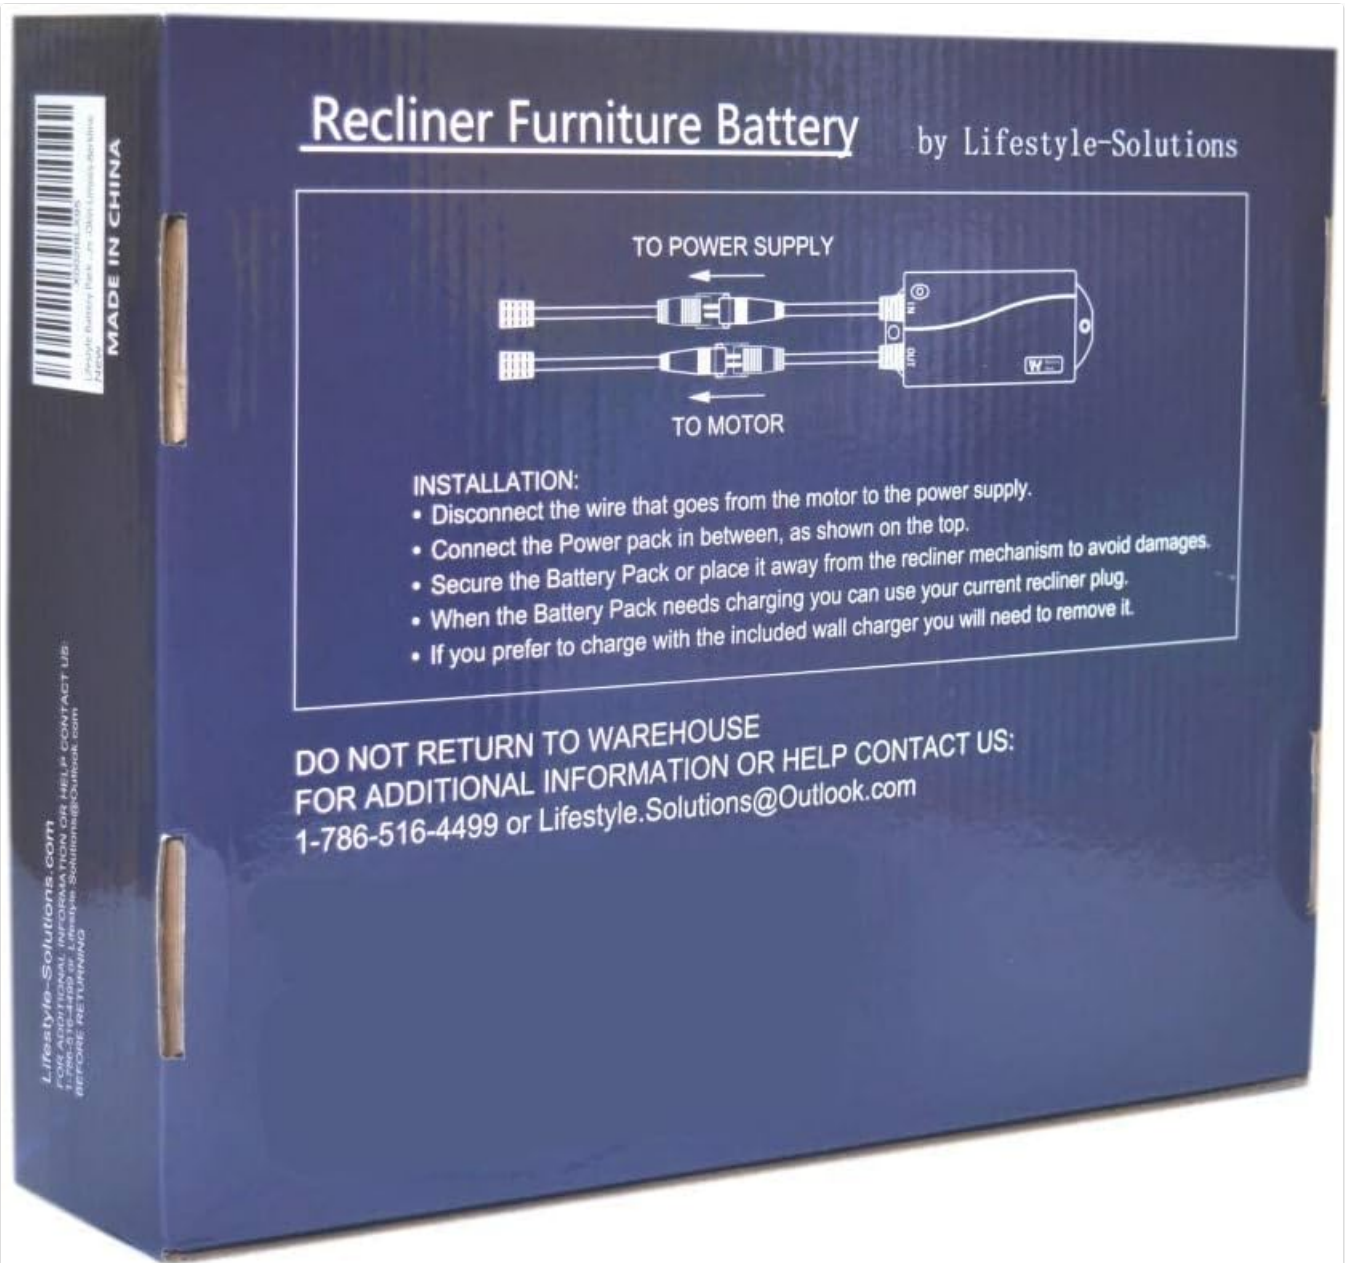


Image: A diagram from the product packaging demonstrating the correct installation of the battery pack between the power supply and the furniture motor.

Your browser does not support the video tag.

Video: An official product video from Lifestyle-Solutions demonstrating the installation and benefits of the Universal Battery Pack for Electric Motion Furniture.

OPERATING INSTRUCTIONS

Once installed and fully charged, the Lifestyle Battery Pack provides power to your electric motion furniture, allowing you to operate its reclining functions wirelessly.

- **Usage Cycles:** The battery pack is designed to provide approximately 300 cycles of operation (one cycle equals one open and one close motion). With moderate usage, the battery can last for about one month between charges.
- **Low Power Warning:** The battery pack features a 'low power' light and an audible alarm to notify you when it needs to be recharged.
- **Placement Flexibility:** Enjoy the freedom to place your electric motion furniture anywhere in your room without being restricted by power outlet locations.

PUT YOUR RECLINER ANYWHERE YOU WANT



Image: An illustration of a recliner sofa positioned freely in a living room, demonstrating the benefit of cordless operation provided by the battery pack.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Lifestyle Battery Pack.

- **Regular Charging:** Recharge the battery pack promptly when the low power warning is activated. Consistent recharging helps maintain battery health.
- **Storage:** If storing the battery pack for an extended period, ensure it is fully charged before storage and periodically recharge it to prevent deep discharge.
- **Cleaning:** Keep the battery pack clean and free from dust and debris. Use a dry, soft cloth for cleaning. Do not use liquid cleaners.

TROUBLESHOOTING

If you encounter issues with your Lifestyle Battery Pack, refer to the following common solutions:

- **Battery Not Holding Charge:** Ensure the battery has completed three to four full charge/discharge cycles. Verify that the charging cable and wall charger are functioning correctly and securely connected.
- **Furniture Not Operating:** Check all connections between the motor, battery pack, and power supply. Confirm the battery pack is adequately charged. Ensure your furniture does not have features (like LED lights or USB charging) that are incompatible with the battery pack, as these can rapidly drain power.
- **Low Power Alarm:** The alarm indicates the battery needs recharging. Plug in the battery pack using either the recliner's power cable or the included wall charger.

SPECIFICATIONS

Feature	Detail
Brand	Lifestyle-Solutions
Model Name	Lifestyle Battery Pack
Model Number	Lifestyle Battery Pack
Color	Black
Material	Plastic
Product Dimensions (D x W x H)	7"D x 4"W x 2"H
Item Weight	1.1 Pounds
Additional Features	Cordless Power
Manufacturer	Dongguan Yiheng Electronics Co LTD

WARRANTY

The Lifestyle Battery Pack comes with an exclusive **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

SUPPORT

For additional information, compatibility questions, or assistance, please contact Lifestyle-Solutions customer support:

- **Phone:** 1-786-516-4499
- **Email:** Lifestyle.Solutions@Outlook.com

We recommend contacting us with any questions before purchasing to ensure compatibility and avoid unnecessary returns.

SAVE THE ENVIROMENT AVOID RETURNS!



BEFORE BUYING, WE RECOMMEND:

1. READ THE **PRODUCT DETAILS** AND WATCH THE **VIDEO**.
2. MAKE SURE THIS IS THE **PART** OR **MODEL NUMBER** YOU NEED.
3. IF YOU HAVE ANY DOUBTS **ALWAYS CONTACT US FIRST**.

Image: A graphic emphasizing the importance of reviewing product details and contacting customer support for any doubts prior to purchase, to minimize returns.

© 2026 Lifestyle-Solutions. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZTV6TH7>

More documents and user manuals: <https://manuals.plus/>