

## Cafe CWE19SP4NW2

# Cafe CWE19SP4NW2 French Door Refrigerator User Manual

Model: CWE19SP4NW2 | Brand: Cafe

## INTRODUCTION

Thank you for choosing the Cafe CWE19SP4NW2 French Door Refrigerator. This appliance is designed to provide efficient and reliable food storage with its 18.6 cu. ft. capacity, fingerprint-resistant matte white finish, and counter-depth design. It is also ENERGY STAR certified, ensuring energy efficiency. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new refrigerator.



## SAFETY INFORMATION

---

Before operating your refrigerator, please read all safety instructions carefully to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- Ensure the refrigerator is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

## SETUP AND INSTALLATION

---

### Unpacking

Remove all packaging materials, tape, and protective film from the refrigerator. Dispose of packaging materials properly. Keep plastic bags away from children.

### Placement

Place the refrigerator on a level, sturdy floor away from direct sunlight and heat sources (e.g., stove, radiator). Allow adequate space around the unit for proper ventilation (at least 2 inches on sides and back, 12 inches on top). This counter-depth model is designed to align with your kitchen cabinetry for a seamless look.

### Electrical Connection

Plug the refrigerator into a dedicated, grounded 115V, 60 Hz, 15 Amp AC outlet. Do not use extension cords or adapter plugs.

### Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a mild detergent and warm water. Wipe dry with a soft cloth.

## OPERATING INSTRUCTIONS

---

### Temperature Control

The refrigerator features intuitive temperature controls. The recommended temperature for the fresh food compartment is 37°F (3°C) and for the freezer compartment is 0°F (-18°C). Adjust settings as needed based on food load and ambient temperature.



Figure 2: Interior view of the refrigerator, showcasing ample storage space and organization.

## Internal Layout and Shelving

Your refrigerator is equipped with adjustable glass shelves and door bins for flexible storage. The interior lighting illuminates all compartments for easy visibility.



Figure 3: Empty interior of the refrigerator, highlighting adjustable shelves and clear bins.

### **TempSelectZone™ Drawer**

The TempSelectZone™ drawer allows you to customize the temperature for specific items such as meat, beverages, or deli items, ensuring optimal freshness. Refer to the control panel inside the drawer for temperature options.

### **Water Dispenser and Ice Maker**

This model includes an internal water dispenser and an automatic ice maker located in the freezer drawer. Ensure the water line is properly connected and the ice maker is turned on for operation. The ice maker produces crescent-shaped ice cubes and stores them in a removable bin.



Figure 4: The pull-out freezer drawer with the ice maker and storage compartments.

## Cleaning

- **Interior:** Clean regularly with a solution of mild soap and warm water. For stubborn odors, use a solution of baking soda and water.
- **Exterior:** Wipe the fingerprint-resistant matte white finish with a clean, damp cloth. Avoid abrasive cleaners.
- **Condenser Coils:** Clean the condenser coils behind the refrigerator at least once a year to maintain efficiency. Unplug the unit before cleaning.

## Water Filter Replacement

If your model includes a water filter, replace it every six months or when the filter indicator light illuminates. Refer to the filter compartment for specific replacement instructions.

## Vacation and Moving Care

For extended vacations, turn off the refrigerator, empty all contents, clean thoroughly, and leave the doors slightly ajar to prevent odors. When moving, secure all internal components and unplug the unit.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Check power cord, reset breaker, check household power.
Temperature is too warm.	Door left open; temperature setting too high; excessive food load.	Ensure door is closed; lower temperature setting; allow time for cooling.
Unusual noises.	Refrigerator not level; items vibrating inside; normal operating sounds.	Level the unit; rearrange items; consult manual for normal sounds.
Water dispenser not working.	Water supply turned off; water filter clogged; dispenser locked.	Check water supply; replace filter; unlock dispenser.

For issues not listed here, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Cafe
Model Number	CWE19SP4NW2
Capacity	18.6 Cubic Feet
Dimensions (D x W x H)	31"D x 32.75"W x 69.88"H
Color	Matte White
Installation Type	Freestanding / Counter Depth
Form Factor	French Door
Special Features	Water Dispenser, Fingerprint Resistant



Feature	Detail
Defrost System	Frost Free
Certification	ENERGY STAR Certified

## WARRANTY AND SUPPORT

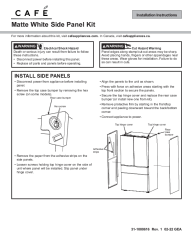 

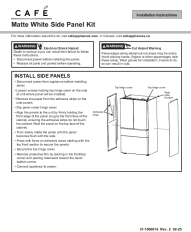 
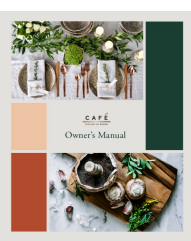 
Your Cafe CWE19SP4NW2 Refrigerator comes with a limited manufacturer's warranty. Please refer to the separate warranty card included with your purchase for specific terms and conditions. For technical support, service requests, or to order replacement parts, please visit the official Cafe Appliances website or contact their customer service line. Have your model and serial number ready when contacting support.

**Online Support:** [www.cafeappliances.com/support](http://www.cafeappliances.com/support)

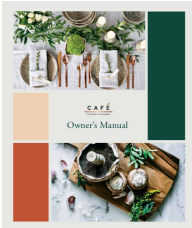 
**Customer Service:** Refer to your warranty documentation for regional contact numbers.

© 2023 Cafe Appliances. All rights reserved.

## Related Documents - CWE19SP4NW2

	<p><a href="#">Café Matte White Side Panel Kit Installation Instructions</a></p> <p>Step-by-step guide for installing the Café Matte White Side Panel Kit on refrigerators, including safety warnings and detailed instructions.</p>
	<p><a href="#">Café Bottom Freezer Refrigerators: Owner's Manual and Installation Instructions</a></p> <p>A comprehensive guide from Café for bottom freezer refrigerators, covering essential safety information, detailed operating instructions, step-by-step installation procedures, troubleshooting tips, and warranty information. Includes guidance for CFE, CYE, and CWE models.</p>
	<p><a href="#">Cafe Matte White Side Panel Kit Installation Instructions</a></p> <p>Detailed instructions for installing the Cafe Matte White Side Panel Kit, including safety warnings and step-by-step guidance for a secure and flush fit.</p>
	<p><a href="#">CAFÉ Bottom Freezer Refrigerator Owner's Manual &amp; Installation Guide</a></p> <p>Comprehensive owner's manual and installation guide for CAFÉ bottom freezer refrigerators (CFE, CYE, CWE models), covering features, operation, safety, installation, and troubleshooting.</p>





### [Café Bottom Freezer Refrigerators Owner's Manual and Installation Guide](#)

This comprehensive owner's manual and installation guide provides detailed information for Café CGE, CJE, CAE, and CHE bottom freezer refrigerators. It covers essential safety precautions, product features, operational controls, installation procedures, troubleshooting tips, and consumer support resources.



### [CAFÉ Bottom Freezer Refrigerator Owner's Manual and Installation Guide](#)

Comprehensive owner's manual and installation instructions for CAFÉ Bottom Freezer Refrigerators (Models CFE, CYE, CWE). Learn about safety, features, controls, installation, troubleshooting, and warranty from GE Appliances.