

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gourmia](#) /

› [Gourmia GTF7600 Digital Air Fryer Oven User Manual](#)

Gourmia GTF7600

Gourmia GTF7600 Digital Air Fryer Oven User Manual

Model: GTF7600

INTRODUCTION

The Gourmia GTF7600 Digital Air Fryer Oven is a versatile 16-in-1 multi-function appliance designed to simplify your cooking experience. This unit combines the capabilities of a toaster oven, air fryer, and dehydrator, offering 17 easy-to-use presets for a wide range of culinary tasks. From air frying healthy meals to toasting, baking, and dehydrating, this appliance is engineered for efficiency and convenience in your kitchen.



Figure 1: The Gourmia GTF7600 Digital Air Fryer Oven, showcasing its digital display and interior with food.

SAFETY INFORMATION

IMPORTANT SAFEGUARDS:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This product is ETL-certified, ensuring it meets safety and quality standards.

PRODUCT OVERVIEW AND COMPONENTS

The Gourmia GTF7600 is constructed from durable stainless steel, featuring a modern and sleek design. Its intuitive digital interface provides full control over all settings.

Glass Viewing Window

Provides at-a-glance monitoring while locking in heat

Stainless Steel

Modern, sleek and durable design



Figure 2: Close-up of the Gourmia GTF7600 highlighting its glass viewing window and stainless steel construction.

Included Accessories:

- **Air Fry Basket:** Ideal for air frying foods, allowing for optimal air circulation.
- **Oven Rack:** For baking, roasting, and general oven use.

- **Baking Pan:** Suitable for various baking needs.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning.

Included dishwasher safe accessories:



Figure 3: All dishwasher-safe accessories included with the Gourmia GTF7600.

Dimensions:

- Product Dimensions: 15.2"D x 15.5"W x 13"H
- Item Weight: 19 Pounds



Figure 4: Visual representation of the Gourmia GTF7600's dimensions.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels from the appliance.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a clean, damp cloth. Wash all removable accessories (Air Fry Basket, Oven Rack, Baking Pan, Crumb Tray) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the Gourmia GTF7600 on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the appliance into a standard 120 Volts electrical outlet.
5. **First Use Burn-Off:** It is recommended to run the appliance empty for about 15 minutes at 400°F (200°C) before cooking food. This helps to burn off any manufacturing residues and odors. A slight odor or smoke may be present during this initial use; this is normal.

OPERATING INSTRUCTIONS

The Gourmia GTF7600 features an intuitive digital control panel with a central dial and dedicated buttons for various functions. It offers 17 one-touch cooking presets.



Figure 5: The Gourmia GTF7600 in a kitchen, demonstrating its compact size and integration.

Control Panel Overview:

- **Digital Display:** Shows time, temperature, and selected preset.
- **Menu Button:** Cycles through the 17 cooking presets.
- **Central Dial:** Used to adjust time, temperature, and toast shade/slices.
- **Temp/Shade Button:** Toggles between temperature adjustment and toast shade selection.
- **Time/Slices Button:** Toggles between time adjustment and toast slices selection.
- **Convection Button:** Activates or deactivates the convection fan for even cooking.
- **Start/Cancel Button:** Initiates or stops a cooking cycle.

Using Presets:

The appliance comes with 17 presets for common cooking tasks, including:

- Air Fry, Toast, Bagel, Broil, Bake, Cookies, Roast, Pizza, Reheat, Warm, Slow Cook, Proof, Convection, Fries, Wings, Snacks, Dehydrate.

1. **Select Preset:** Press the MENU button repeatedly until your desired preset is highlighted on the digital display.
2. **Adjust Settings (Optional):** For most presets, you can adjust the default time and temperature using the central dial after pressing the TIME/SLICES or TEMP/SHADE buttons.
3. **Start Cooking:** Press the START/CANCEL button to begin the cooking cycle.

FryForce 360° Technology:

This patented technology utilizes an advanced airflow system to circulate super-heated air from every direction, ensuring

food is cooked evenly and achieves an authentic fried crispiness with up to 80% less fat compared to traditional frying methods.

FryForce 360°

Powerful Air Circulation targets food with fast, super-heated air from every direction



Big taste. Less fat.

FRIES WITH AIR FOR UP TO 80% LESS FAT

Figure 6: FryForce 360° Technology diagram, showing powerful air circulation for even cooking.

Express Heat System:

The Express Heat System allows for up to 30% faster cooking times compared to standard ovens, making meal preparation quicker and more convenient.

Dehydrate Function:

The built-in dehydrate function allows you to easily create dried snacks from fruits, vegetables, or meats. Simply select the "Dehydrate" preset and adjust time/temperature as needed.

Official Product Video:

Your browser does not support the video tag.

Video 1: Official Gourmia GTF7600 Full Length Product Video. This video demonstrates the various features and functions of the Gourmia Digital Air Fryer Oven, including its 17 presets, FryForce 360 technology, and ease of use for preparing healthy and delicious meals.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Gourmia GTF7600. All included accessories are dishwasher safe for convenience.

- Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning:** Wipe the exterior of the oven with a clean, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.
- Interior Cleaning:** The interior can be wiped with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure the interior is completely dry before next use.
- Accessory Cleaning:** The Air Fry Basket, Oven Rack, Baking Pan, and Crumb Tray are all dishwasher safe. For manual cleaning, wash with warm, soapy water and a non-abrasive sponge.
- Crumb Tray:** The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.

TROUBLESHOOTING

If you encounter any issues with your Gourmia GTF7600, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooking evenly.	Overcrowding the basket; incorrect temperature/time.	Avoid overcrowding the air fry basket. Cook in smaller batches if necessary. Adjust temperature and time according to recipe or food type. Ensure proper rack placement.
White smoke coming from the appliance.	Grease/oil residue; high-fat food.	Clean the crumb tray and interior thoroughly. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Not enough oil (for air frying); overcrowding; moisture.	For air frying, a light coating of oil can help. Do not overcrowd the basket. Pat food dry before cooking.
Digital display is not responding.	Temporary electronic glitch.	Unplug the appliance for a few minutes, then plug it back in to reset.

SPECIFICATIONS

Feature	Detail
Model Name	GTF7600
Brand	Gourmia
Product Dimensions	15.2"D x 15.5"W x 13"H
Color	Silver
Material	Stainless Steel (Inner and Outer)
Item Weight	19 Pounds
Wattage	1800 Watts
Voltage	120 Volts
Control Method	Touch (Digital)
Special Feature	Manual, 17 Cooking Presets, FryForce 360° Technology, Express Heat System, Dehydrate Function, Glass Viewing Window
Dishwasher Safe Parts	Yes (Accessories)
Certifications	ETL-Certified

WARRANTY AND SUPPORT

Gourmia stands by the quality of its products. For detailed warranty information and customer support, please refer to the official Gourmia website or the warranty card included with your purchase.

For additional assistance, you may also refer to the official User Manual (PDF) available online [Gourmia GTF7600 User Manual PDF](#)

For product registration, troubleshooting tips, and frequently asked questions, visit the Gourmia support page or contact their customer service directly.