

[Manuals.plus](#) /

› [Lifeprint](#) /

› Lifeprint 3x4.5 Portable Photo and Video Printer User Manual

Lifeprint LP3X4K3WH

Lifeprint 3x4.5 Portable Photo and Video Printer User Manual

Model: LP3X4K3WH

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Lifeprint 3x4.5 Portable Photo and Video Printer. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

The Lifeprint 3x4.5 printer allows you to print photos and videos with augmented reality capabilities, known as Hyperphotos. It connects wirelessly via Wi-Fi and Bluetooth, enabling printing from various social media platforms and your device's gallery.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Lifeprint 3x4.5 Portable Photo and Video Printer
- Lifeprint 40-pack Zink paper
- Soft Camera Case
- 64-Pocket Photo Album
- Sticker Frames set
- Vintage Frame set
- 9 sets of Stickers
- Set of 12 Markers
- 50 Stickers Set
- USB Charging Cable

The Lifeprint printer uses ZINK (Zero Ink) paper. Ensure you load the paper correctly for optimal print quality.

1. Open the paper tray cover on the printer.
2. Insert the stack of Lifeprint ZINK paper with the glossy side facing up. Ensure the blue calibration sheet is at the bottom of the stack, with the barcode facing down.
3. Close the paper tray cover securely.



Image: Packaging for Lifeprint 20-pack ZINK photo paper, indicating its compatibility with the printer and ZINK Zero Ink Technology.

4. Connecting the Printer to Your Device

The printer can connect via Bluetooth or Wi-Fi.

Bluetooth Connection:

1. Turn on the Lifeprint printer.
2. Enable Bluetooth on your mobile device.
3. Open the Lifeprint app. The app will guide you through pairing the printer. Select your Lifeprint printer from the list of available devices.

Wi-Fi Connection:

For extended range printing, connect your printer to your home Wi-Fi network through the Lifeprint app settings. This allows you to print from anywhere with an internet connection.

1. Ensure your printer is connected via Bluetooth first.
2. In the Lifeprint app, navigate to the printer settings.
3. Select "Wi-Fi Setup" and follow the prompts to connect your printer to your local Wi-Fi network.

OPERATING THE PRINTER

1. Printing Photos

The Lifeprint app is your primary interface for printing.

1. Open the Lifestrip app.
2. Select the photo or video you wish to print from your device's gallery or linked social media accounts (Instagram, Facebook, Snaps, etc.).
3. Use the in-app editing tools to crop, filter, or customize your image if desired.
4. Tap the print icon. The app will send the image to your connected Lifestrip printer.



Image: A close-up view of the Lifestrip 3x4.5 Portable Photo and Video Printer as it prints a photo, with the photo emerging from the front slot.

2. Hyperphotos (Augmented Reality)

Lifestrip's unique Hyperphoto feature embeds a video within your printed photo.

1. When selecting a video to print, the app will allow you to choose a still frame as the printed image.
2. After printing, open the Lifestrip app and point your device's camera at the printed Hyperphoto.
3. The embedded video will play on your device's screen, appearing to come to life from the photo.

3. Sharing Photos with Friends

The Lifestrip app functions as a social network, allowing you to share physical prints with other Lifestrip users globally.

1. Add friends within the Lifestrip app (similar to following on social media).
2. Select a photo or video to share.
3. Choose a friend's Lifestrip printer as the destination. The photo will be sent directly to their printer, wherever they are in the world.

MAINTENANCE

1. Cleaning the Printer

To maintain print quality, periodically clean the printer's exterior and paper path.

- Use a soft, dry, lint-free cloth to wipe the exterior of the printer.
- Do not use liquid cleaners or abrasive materials.
- The ZINK paper includes a blue calibration sheet that helps clean the print head with each new pack.

2. Storing ZINK Paper

Store unused ZINK paper in its original packaging in a cool, dry place away from direct sunlight to prevent damage and maintain print quality.

3. Battery Care

The printer contains a Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the printer regularly, even if not in frequent use.
- Store the printer in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not turning on	Low battery; Power button not pressed correctly	Charge the printer; Press and hold the power button for a few seconds.
Cannot connect to printer	Bluetooth/Wi-Fi off; Printer out of range; App issue	Ensure Bluetooth/Wi-Fi is enabled; Move closer to the printer; Restart the app and printer; Re-pair the device.
Poor print quality (grainy, blurry, incorrect colors)	Low quality source image; Old/damaged ZINK paper; Printer head needs cleaning	Use high-resolution images; Replace ZINK paper; Ensure the blue calibration sheet is used with each new pack. Adjust color/clarity in the app before printing.
Printer jams or doesn't recognize paper	Paper loaded incorrectly; Too much paper; Foreign object in paper path	Reload paper correctly (glossy side up, blue sheet at bottom); Ensure only one pack of paper is loaded; Check for obstructions.
App crashes or is glitchy	Software bug; Outdated app version; Device memory issues	Update the Lifeprint app; Restart your mobile device; Reinstall the app if issues persist.

SPECIFICATIONS

Feature	Detail
Model Name	Lifeprint 3x4.5 Portable Photo and Video Printer
Model Number	LP3X4K3WH
Printing Technology	Zink Technology (Zero Ink)
Maximum Media Size	3x4.5 inches
Connectivity Technology	Wireless (Bluetooth, Wi-Fi)
Compatible Devices	Smartphones (iOS, Android)
Battery Type	Lithium Ion (included)
Item Weight	1 Pounds
Memory Storage Capacity	64 GB

Feature	Detail
Included Components	Printer, ZINK paper, Soft Camera Case, Photo Album, Sticker Frames, Vintage Frame, Stickers, Markers

WARRANTY INFORMATION

Lifeprint products typically come with a limited manufacturer's warranty. For specific details regarding your product's warranty period and coverage, please refer to the warranty card included in your product packaging or visit the official Lifeprint support website. Keep your proof of purchase for warranty claims.

SUPPORT AND CONTACT

For further assistance, technical support, or to purchase additional ZINK paper and accessories, please visit the official Lifeprint website or contact their customer service.

- **User Manual (PDF):** [Download PDF Manual](#)