

[Manuals.plus](#) /

› [Premium-Plus](#) /

› Premium Plus Stove Protectors for GE Gas Range Model CGS700P2MS1 User Manual

Premium-Plus CGS700P2MS1

Premium Plus Stove Protectors User Manual

Model: CGS700P2MS1

PRODUCT OVERVIEW

The Premium Plus Stove Protectors are custom-cut liners designed specifically for the GE Gas Range Model CGS700P2MS1. These non-stick liners are engineered to protect your stovetop's metal surface from spills and grease, making cleanup significantly easier and helping to maintain the pristine condition of your appliance. They are made in the USA and are heat resistant up to 500 degrees Fahrenheit.

The product includes three customized stovetop protector liners, detailed care instructions, and a lifetime warranty card.

INSTALLATION GUIDE


Follow these simple steps to install your Premium Plus Stove Protectors:

1. **Prepare the Stovetop:** Ensure your stovetop is cool and clean. Remove all grates and burner caps from the gas stovetop.
2. **Align the Liners:** The liners come in three pieces. Begin by aligning the middle section, followed by the two side pieces. Ensure all pieces overlap correctly on your stovetop for complete protection.
3. **Reassemble Components:** Once the liners are in place, carefully reassemble the burner caps and grates.

For visual assistance, please refer to the images and video below:

Customized Stovetop Protector Liners

Help make life easier; easy living for life

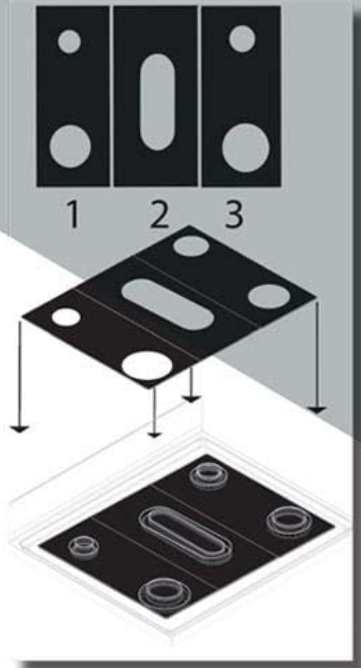

EASY FITTING AND REMOVING -

Our Customized Stovetop Protector Liners by Premium Plus are customized to fit your stove, simply place them on your stovetop to keep your stove clean like new.



DISHWASHER SAFE -

Keep your stovetop clean, simply remove your Customized Stovetop Protector Liners and just place them in your dishwasher - it's so simple and easy!



FDA APPROVED -

Our Customized Stovetop Protector Liners are FDA approved and they are PFOA & BPA Free!

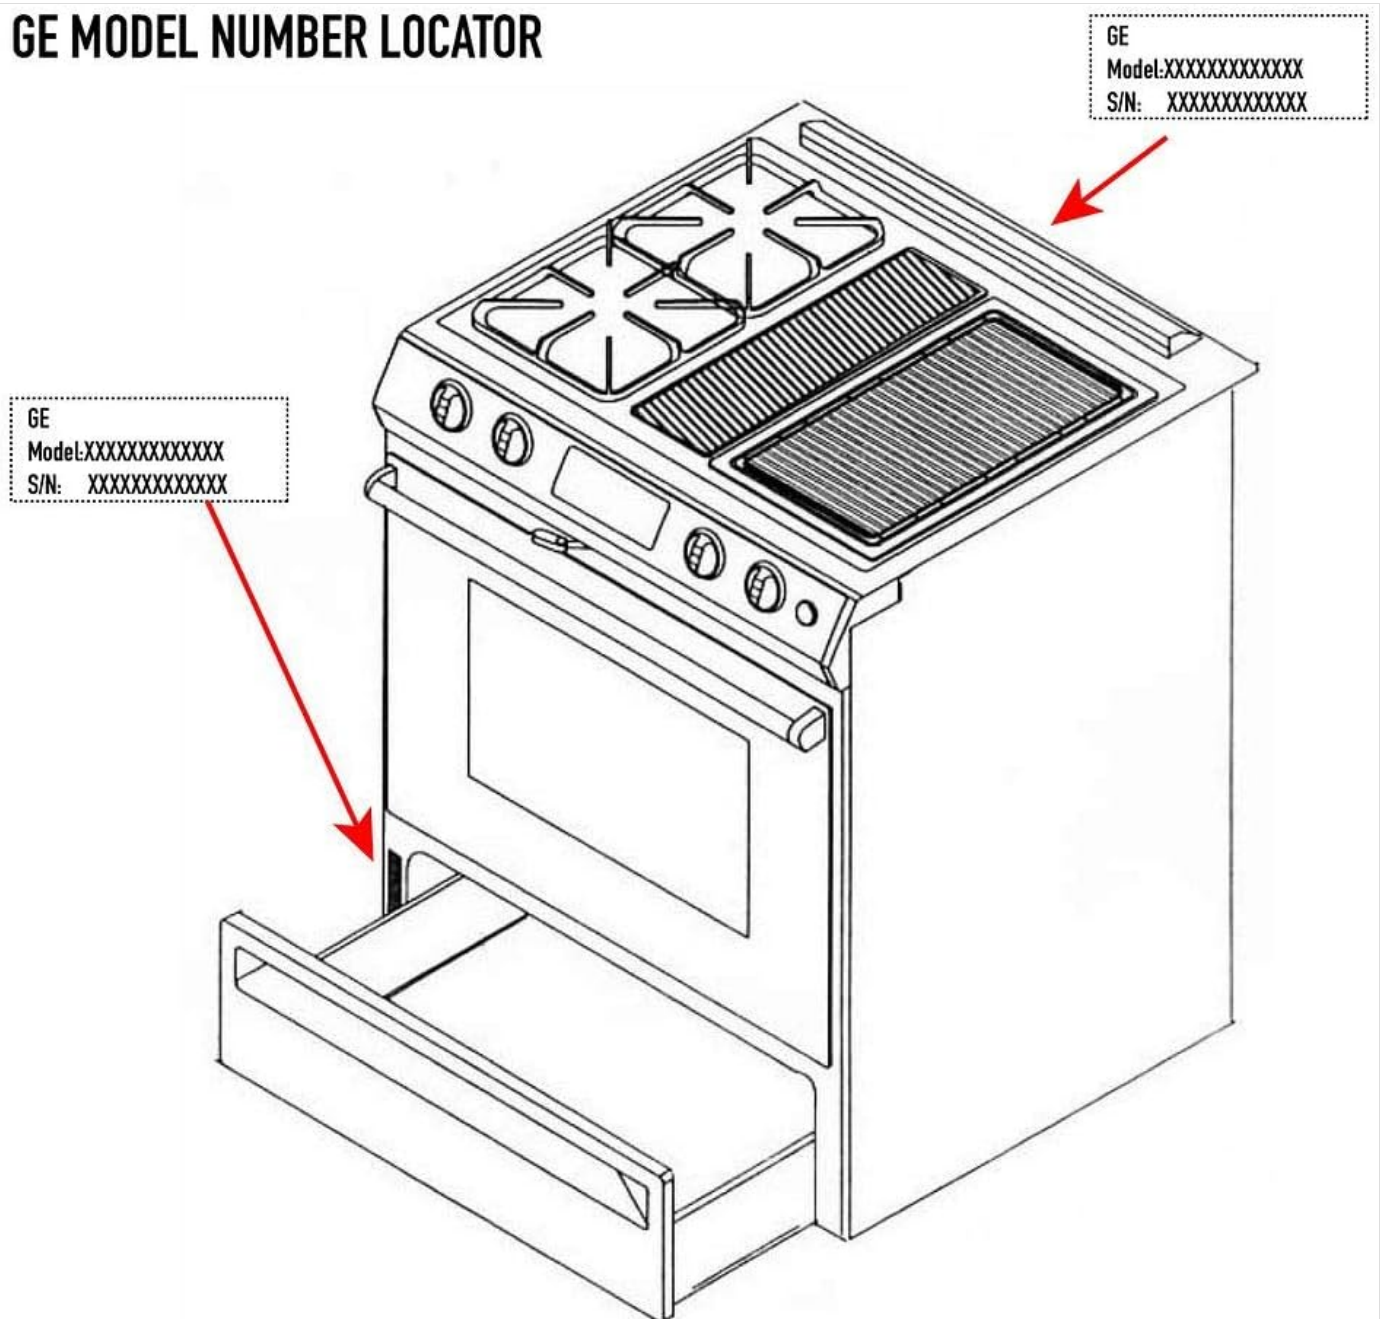 


Image: Step-by-step illustration of installing the stove protectors.



Image: A close-up view of a person placing one of the stove protector pieces onto the stovetop.

GE MODEL NUMBER LOCATOR



Slide-In Ranges: The model and serial numbers are located either behind the storage drawer on the left or right side of the oven frame or on the right side of the bottom oven frame.

Double Oven Ranges: The model and serial numbers are located behind the control panel.

Image: Diagram illustrating common locations for GE stove model numbers, typically behind the storage drawer or on the bottom oven frame.

Match your Stove burners location with our image. If your Stove burner location matches our image than our “Customized Stovetop Protector Liners” will fit your Gas Stoptop perfectly.

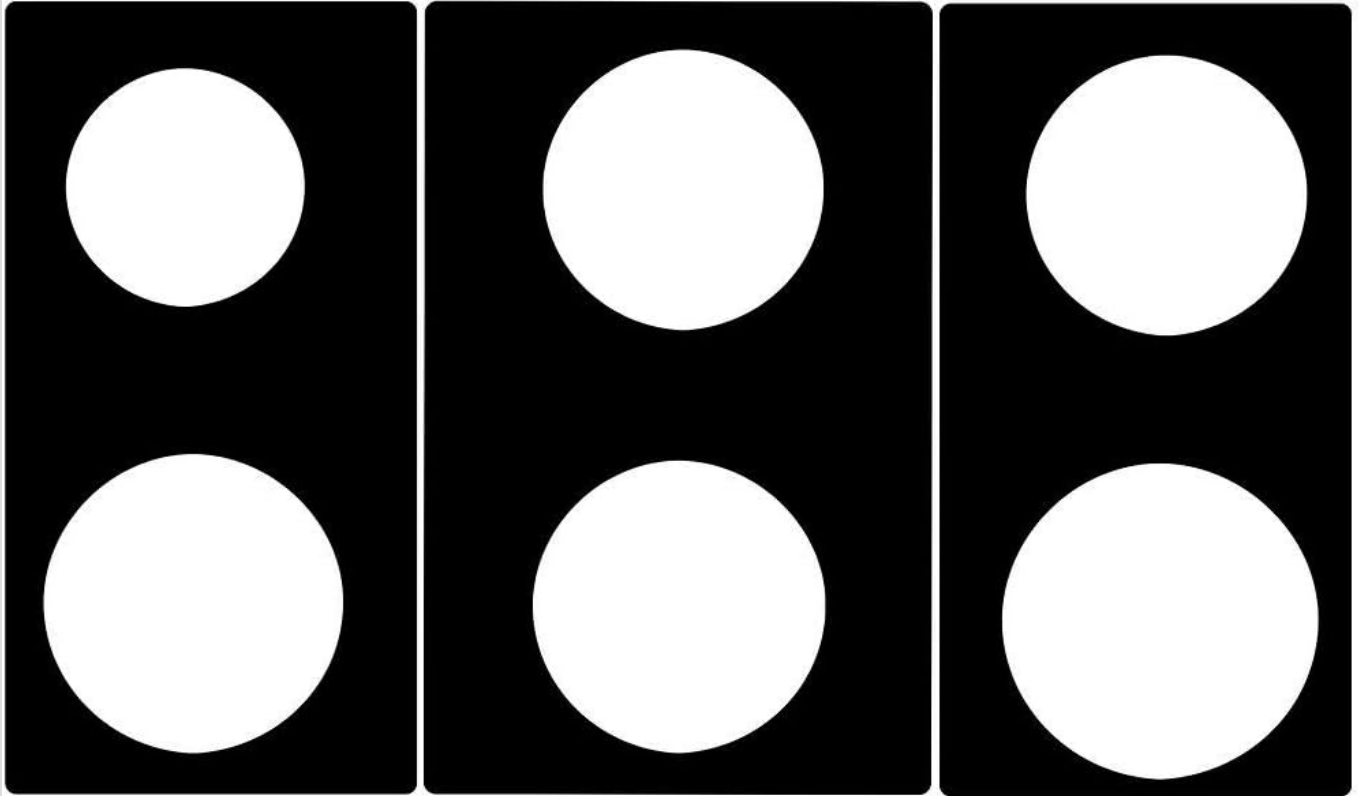 


Image: A diagram showing the specific burner layout that these stove protectors are designed to fit, ensuring proper compatibility.

Your browser does not support the video tag.

Video: Official Premium Plus video demonstrating the easy installation and cleaning process of the stovetop protectors.

USAGE GUIDELINES

The Premium Plus Stove Protectors are designed to withstand high temperatures up to 500°F (260°C), providing a protective barrier against spills and splatters during cooking. While the liners are heat resistant, direct contact with open flames should be avoided. Always ensure the liners are properly positioned around the burners before operating the stove.

These liners are intended for use with gas ranges and are not suitable for electric or induction cooktops unless specifically stated by the manufacturer.

MAINTENANCE AND CLEANING

Keeping your stovetop clean is effortless with Premium Plus Stove Protectors. They are designed for quick and easy cleaning:

- **Daily Cleaning:** For localized spills, simply remove the affected liner piece, wipe it clean with a damp sponge or cloth, and replace it.

- **Deep Cleaning:** The liners are dishwasher safe. For thorough cleaning, place them on the top rack of your dishwasher. They can also be hand-washed with warm soapy water.
- **Reusable Design:** These liners are reusable, ensuring long-term protection and cleanliness for your stovetop.

Refer to the images and video for cleaning demonstrations:



Image: A stove protector liner being placed into the top rack of a dishwasher, highlighting its dishwasher-safe feature.



Image: A split image showing both handwashing a liner with a sponge and placing a liner in a dishwasher, demonstrating easy cleaning methods.

Your browser does not support the video tag.

Video: Official Premium Plus video demonstrating the easy installation and cleaning process of the stovetop protectors.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Liner does not fit correctly.	Incorrect model number or improper alignment during installation.	Verify your GE range model number matches CGS700P2MS1. Re-align the three liner pieces carefully, ensuring they overlap as instructed.

Issue	Possible Cause	Solution
Stains or grease not coming off easily.	Stubborn, baked-on residue or insufficient cleaning method.	For tough stains, soak the liner in warm soapy water before scrubbing. Ensure you are using the top rack if dishwashing.
Liner appears warped or damaged.	Exposed to temperatures exceeding 500°F or direct flame contact.	Ensure liners are not directly exposed to open flames. If damage persists, contact customer support for warranty information.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Premium Plus Inc
Model Number	CGS700P2MS1
Part Number	GSSTC3C-135
Material	Non-stick, Heat Resistant
Heat Resistance	Up to 500°F (260°C)
Color	Black
Dimensions	18 x 12 x 0.2 inches (Package)
Item Weight	12 ounces
Package Quantity	3 customized pieces
Safety Features	PFOA & BPA Free, Eco-friendly
Origin	Made in the USA

WARRANTY AND SUPPORT

Premium Plus Inc. stands behind the quality of its products. The Premium Plus Stove Protectors come with a **Lifetime Warranty**, ensuring your satisfaction. This warranty covers manufacturing defects and ensures the product performs as described under normal use.

For any questions, concerns, or warranty claims, please refer to the detailed care instructions and warranty card included in your package. You may also visit the official Premium-Plus store on Amazon for further assistance and contact information.

[Visit the Premium-Plus Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZXR7T6H>

More documents and user manuals: **<https://manuals.plus/>**