

[Manuals.plus](#) /

› [SURKER](#) /

› SURKER Mens Hair Clippers Cord Cordless Hair Trimmer Professional Haircut Kit for Men Rechargeable LED Display

SURKER K7S-silver

SURKER Mens Hair Clippers Instruction Manual

Model: K7S-silver

WELCOME

Thank you for choosing the SURKER Mens Hair Clippers. This professional cord/cordless hair trimmer is designed for smooth, quick, and precise clipping performance on all types of hair. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new clipper.

Package Contents

- Hair Clipper
- Cleaning Brush
- Protection Cap
- Hairdressing Cape
- 8 Guide Combs
- USB Cable



The SURKER Mens Hair Clippers kit, including the clipper, various guide combs, cleaning brush, USB cable, and hairdressing cape.

KEY FEATURES

- **Professional Blades:** Designed for smooth, quick, and precise clipping performance on all types of hair with long-lasting high-carbon enhanced self-sharpening precision stainless steel blades. The blade can be washed by water for easy cleaning.
- **Cordless Operation:** Built-in rechargeable premium battery cell offers up to 300 minutes of running time with a 3-hour charge.
- **Adjustable Length:** The thumb taper lever on the left side enables easy haircut length adjusting from 0.8 mm to 2.0 mm.
- **Colorful Guide Combs:** Equipped with eight color-coded guide combs (1.5 mm, 3 mm, 4.5 mm, 6 mm, 10 mm, 13 mm, 16 mm, 19 mm) for customized cutting lengths.

- **LED Display:** Clearly shows the remaining percentage of battery, charging indicator, and maintenance oil add reminder.
- **Ergonomic Design:** Comfortable to hold, easy to use and clean, even for first-time users.



The bright LED display provides real-time information on battery level and maintenance reminders.

8 Guide Combs and Three Adjustment Lever



1.5 mm



4.5 mm



3 mm



6 mm



10 mm



13 mm



16 mm




19 mm

Adjust lever



Guide Comb

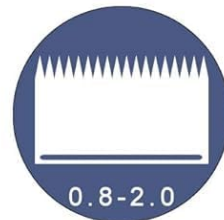


Taper Lever



Guide Combs

0.8-21mm Length

Illustration of the eight colorful guide combs and the adjustable taper lever for precise length control.

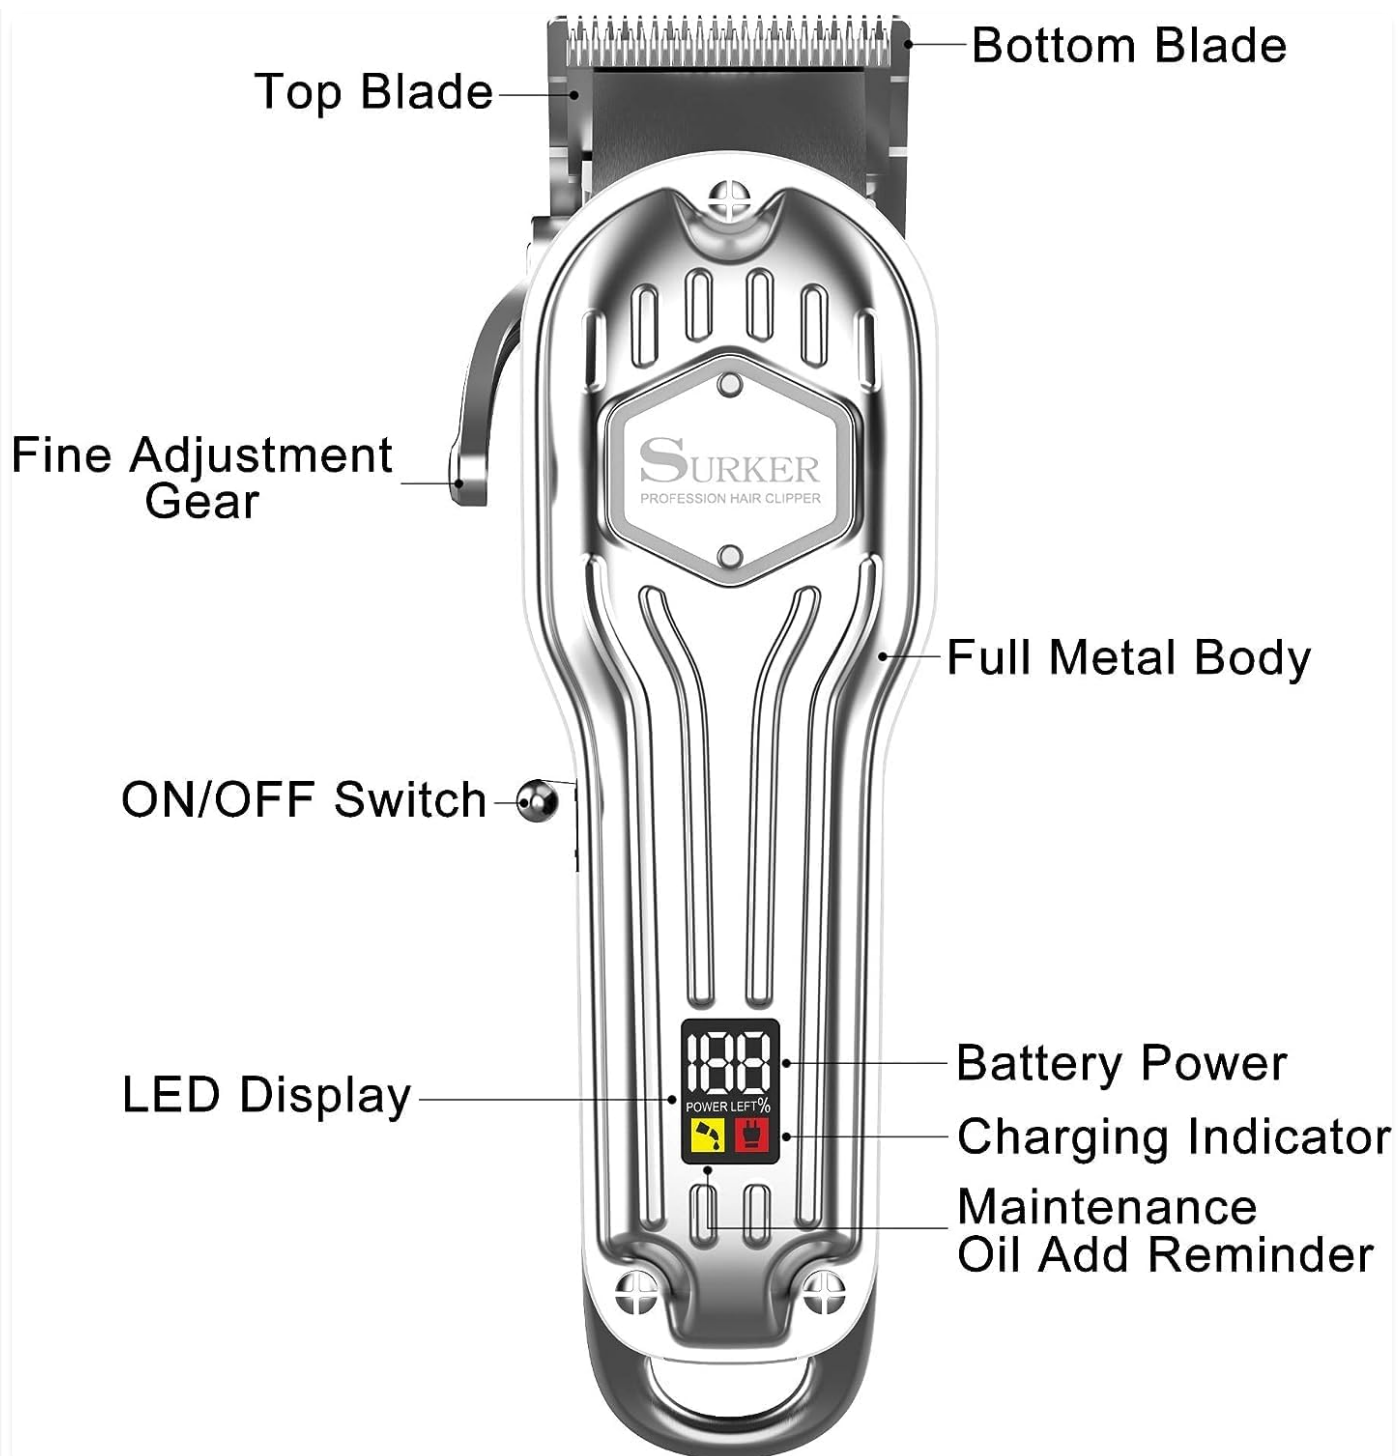

Key blade features: no hair clog, sharp but safe, and anti-overheating design for comfortable use.

INITIAL SETUP

Charging the Clipper

Before first use, fully charge your SURKER Hair Clipper. Connect the USB cable to the clipper's charging port and plug the other end into a compatible USB power source. The LED display will indicate the battery level during charging. A full charge takes approximately 3 hours and provides up to 300 minutes of cordless operation.

Attaching Guide Combs

Select the desired guide comb based on the hair length you wish to achieve. Align the comb with the clipper blade and

push it firmly until it clicks into place. Ensure the comb is securely attached before operating the clipper.



The clipper in use, demonstrating its versatility for both hair and beard trimming.

OPERATING INSTRUCTIONS

Power On/Off

To turn the clipper ON, slide the ON/OFF switch upwards. To turn it OFF, slide the switch downwards. The LED display will illuminate when the clipper is powered on.

Adjusting Cutting Length

The clipper features a convenient thumb taper lever on the left side. Move the lever up or down to adjust the cutting length of the blade from 0.8 mm to 2.0 mm. This allows for fine-tuning of your haircut without changing guide combs.

Hair Cutting Tips

- For best results, ensure hair is clean and dry before cutting.
- Always start with a longer guide comb and gradually switch to shorter lengths if desired.
- Cut against the direction of hair growth for an even trim.
- Use smooth, overlapping strokes to avoid uneven patches.
- Regularly clear accumulated hair from the blade during use to maintain performance.



The ergonomic design ensures a comfortable grip during use, making it easy to maneuver for precise cuts.

MAINTENANCE

Blade Cleaning

After each use, turn off the clipper and remove any attached guide comb. Use the provided cleaning brush to remove loose hairs from the blades. The stainless steel blades are washable; you can rinse them under running water. Ensure the blades are completely dry before reattaching the protection cap or storing.

Oiling the Blades

To maintain optimal cutting performance and blade longevity, it is essential to oil the blades regularly. The LED display includes a 'Maintenance Oil Add Reminder' to prompt you. Apply a few drops of clipper oil (not included, but commonly available) to the teeth of the blades. Turn the clipper on for a few seconds to distribute the oil evenly, then wipe off any excess with a soft cloth.

Digital Display



Remaining
Battery



Charging
Reminder



Oiled
Reminder



The digital display clearly indicates battery percentage, charging status, and an important oil reminder for blade maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on	Low battery or no charge	Charge the clipper fully (approx. 3 hours). Check charging cable connection.
Reduced cutting performance	Blades are dull, dirty, or not oiled; hair clog; incorrect comb attachment	Clean and oil blades. Remove any hair clogs. Ensure guide comb is properly attached.
Clipper making unusual noise	Blades need oiling; internal issue	Oil the blades. If noise persists, contact customer support.

TECHNICAL SPECIFICATIONS

- **Model Number:** K7S-silver
- **Product Dimensions:** 9.53 x 6.14 x 2.91 inches; 12.35 ounces
- **Battery Type:** Built-in rechargeable Lithium-Ion battery
- **Charging Time:** 3 Hours
- **Running Time:** Up to 300 minutes (5 hours)
- **Blade Material:** High-carbon enhanced self-sharpening precision stainless steel
- **Adjustable Cutting Length:** 0.8 mm to 2.0 mm (via taper lever)
- **Guide Comb Lengths:** 1.5 mm, 3 mm, 4.5 mm, 6 mm, 10 mm, 13 mm, 16 mm, 19 mm

WARRANTY AND SUPPORT

Warranty Information

Please refer to the product packaging or the official SURKER website for detailed warranty information regarding your hair clipper. Keep your purchase receipt as proof of purchase for any warranty claims.

Customer Support

For any questions, concerns, or technical assistance, please visit the official SURKER website or contact their customer support team. Contact details can typically be found on the product packaging or the brand's official online presence.

Safety Information

For safe use, ensure the product is fully charged before use, clean blades under running water, and follow all handling instructions. This product is not suitable for children and should be kept out of reach.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07ZZYWF3P>

More documents and user manuals: **<https://manuals.plus/>**