

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [UpStart Components](#) /
- › [UpStart Components 14-Inch Chainsaw Guide Bar Instruction Manual for Stihl 023L \(Model CSC-140SDEA074-DL32\)](#)

## UpStart Components CSC-140SDEA074-DL32

# UpStart Components 14-Inch Chainsaw Guide Bar Instruction Manual

MODEL: CSC-140SDEA074-DL32

## INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your UpStart Components 14-inch chainsaw guide bar, model CSC-140SDEA074-DL32. This guide bar is designed as a replacement part for Stihl 023L chainsaws. Adhering to these instructions will help ensure safe and effective use of the product.



Image: A white 14-inch chainsaw guide bar with the 'UpStart Components' logo and model number 'AG14-50-507P' printed on its surface. The bar features a slotted mounting end and a sprocket nose tip.

## COMPATIBILITY AND PRE-INSTALLATION CHECK

Before installing this replacement guide bar, it is crucial to verify compatibility with your chainsaw. Chainsaws of the same model can sometimes use different bar lengths or chain specifications. Please confirm the following measurements of your existing guide bar and chain:

- **Bar Length:** 14 inches
- **Pitch:** 3/8" Low Profile
- **Gauge:** .050"
- **Drive Links:** 50
- **Sprocket Nose Tooth Count:** 7

Ensure these specifications match your current setup to prevent improper fit or operation.

## SETUP AND INSTALLATION

---

This guide bar is designed to easily replace damaged guide rails, extending the life of your chainsaw. Always refer to your chainsaw's original manufacturer manual for specific installation procedures and safety warnings. The following steps are general guidelines:

1. **Safety First:** Ensure the chainsaw engine is off and the spark plug wire is disconnected to prevent accidental starting. Wear appropriate safety gear, including gloves.
2. **Remove Old Bar and Chain:** Loosen the bar nuts and remove the clutch cover. Carefully remove the old chain and guide bar.
3. **Clean Components:** Clean any sawdust or debris from the clutch area, bar mounting studs, and chain tensioner mechanism.
4. **Install New Bar:** Position the new UpStart Components guide bar onto the mounting studs. Ensure the chain tensioner pin engages with the hole in the guide bar.
5. **Install New Chain:** Place the chain around the clutch sprocket and into the guide bar groove, ensuring the cutting edges face the correct direction.
6. **Adjust Chain Tension:** Hand-tighten the bar nuts. Adjust the chain tensioner until the chain is snug but can still be pulled freely around the bar by hand. The chain should not sag on the underside of the bar.
7. **Final Tightening:** While holding the tip of the guide bar up, fully tighten the bar nuts. Recheck chain tension after tightening.
8. **Reconnect Spark Plug:** Reconnect the spark plug wire.

**Warning: Improper installation or chain tension can lead to serious injury or damage to the chainsaw.**

## OPERATING CONSIDERATIONS

---

This guide bar is designed for high performance with minimum vibration and offers better control for less kickback, contributing to increased safety. It is suitable for professionals working in demanding conditions. Always operate your chainsaw according to the manufacturer's instructions and safety guidelines. Key operating considerations include:

- **Proper Chain Lubrication:** Ensure the chainsaw's oiler is functioning correctly and the chain is adequately lubricated during operation. This reduces friction and wear on both the chain and the guide bar.
- **Maintain Chain Sharpness:** A sharp chain cuts more efficiently and reduces stress on the guide bar.
- **Avoid Pinching:** Do not force the guide bar into cuts where it may become pinched, as this can damage the bar and chain.
- **Kickback Awareness:** While this bar is designed to reduce kickback, always be aware of potential kickback zones and maintain a firm grip on the chainsaw.

## MAINTENANCE

---

Regular maintenance of your guide bar is essential for its longevity and safe operation of your chainsaw.

- **Clean Guide Bar Groove:** After each use, remove the guide bar and clean the groove to remove sawdust and debris. This ensures proper chain movement and lubrication.
- **Check for Wear:** Inspect the guide bar rails for wear, burrs, or unevenness. Uneven wear can cause

the chain to run off track. File down any burrs.

- **Sprocket Nose Maintenance:** If your guide bar has a sprocket nose, ensure it spins freely and is lubricated regularly (if applicable, consult your chainsaw manual).
- **Bar Flipping:** To promote even wear, flip the guide bar periodically (e.g., every time you sharpen the chain or replace it).
- **Storage:** Store the guide bar in a clean, dry place when not in use.

## TROUBLESHOOTING

---

If you encounter issues with your guide bar, consider the following common troubleshooting steps:

- **Chain Derailing:**
  - Check chain tension.
  - Inspect guide bar rails for excessive wear or damage.
  - Ensure the chain is correctly seated in the groove.
- **Uneven Cut:**
  - Check for uneven wear on the guide bar rails.
  - Ensure the chain is sharp and properly filed.
- **Overheating Bar:**
  - Verify proper chain lubrication from the chainsaw's oiler.
  - Clean the guide bar groove.
  - Check chain tension (too tight can cause overheating).

For persistent issues, consult a qualified chainsaw technician or your chainsaw's original manual.

## SPECIFICATIONS

---

<b>Brand</b>	UpStart Components
<b>Model Number</b>	CSC-140SDEA074-DL32
<b>ASIN</b>	B08113RH2P
<b>Item Length</b>	14 Inches
<b>Chain Type</b>	Low Profile
<b>Pitch</b>	3/8" Low Profile
<b>Gauge</b>	.050"
<b>Drive Links</b>	50
<b>Sprocket Nose Tooth</b>	7
<b>Compatibility</b>	Replacement for Stihl 023L

## WARRANTY INFORMATION

---

Please note that this is an UpStart Components brand replacement part. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by Upstart Battery. For specific warranty terms and conditions, please refer to the documentation provided by Upstart Battery or contact their customer service.

## **SUPPORT**

---

For further assistance, technical support, or inquiries regarding your UpStart Components guide bar, please contact the seller or Upstart Battery directly. When contacting support, please have your product model number (CSC-140SDEA074-DL32) and ASIN (B08113RH2P) available.