



[Manuals.plus](#) /

- › [UpStart Components](#) /
- › UpStart Components 16-Inch Chainsaw Chain Replacement Manual

UpStart Components CSC-D60-6PK-DL181

UpStart Components 16-Inch Chainsaw Chain Replacement Manual

Model: CSC-D60-6PK-DL181

PRODUCT OVERVIEW

This manual provides essential information for the installation, maintenance, and safe use of the UpStart Components 16-Inch Chainsaw Chain Replacement. This product is designed to replace worn or damaged chainsaw chains on compatible Mastercraft 54-5671 models, ensuring efficient and safe cutting performance.



Figure 1: Six-pack of UpStart Components 16-inch Chainsaw Chains. Each pack contains one chain, designed for replacement on compatible chainsaw models.

SAFETY INFORMATION

Always prioritize safety when working with chainsaws and their components. Failure to follow safety guidelines can result in serious injury.

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, hearing protection, and sturdy footwear, when handling chainsaw chains or operating a chainsaw.
- Ensure the chainsaw is turned off and the spark plug cap is disconnected (for gas models) or the battery is removed (for electric models) before attempting any chain replacement or maintenance.
- Handle the chain with care; cutting edges are sharp.
- Verify that the replacement chain's specifications (length, pitch, gauge, drive links) match your chainsaw's requirements. Refer to your chainsaw's original manual for exact specifications.
- Keep children and bystanders away from the work area.

SETUP AND INSTALLATION

Replacing a chainsaw chain requires careful attention to detail. Always consult your chainsaw's specific owner's manual for detailed instructions on chain replacement for your model.

1. **Prepare the Chainsaw:** Ensure the chainsaw is powered off and secured. Disconnect power source (spark plug cap or battery).
2. **Remove the Bar Cover:** Loosen the bar nuts and remove the side cover that holds the guide bar and chain in place.
3. **Remove the Old Chain:** Carefully remove the old chain from the guide bar and sprocket. Inspect the guide bar for wear or damage.
4. **Install the New Chain:** Place the new UpStart Components chain onto the sprocket, ensuring the cutting edges are facing the correct direction (usually forward on the top of the bar).
5. **Fit the Guide Bar:** Loop the chain around the guide bar, ensuring it sits correctly in the groove.
6. **Reattach the Bar Cover:** Replace the side cover and loosely tighten the bar nuts.
7. **Adjust Chain Tension:** Adjust the chain tension screw until the chain is snug against the bottom of the guide bar, but can still be pulled freely by hand. The chain should not sag underneath the bar. Refer to your chainsaw manual for precise tensioning guidelines.
8. **Tighten Bar Nuts:** Fully tighten the bar nuts to secure the guide bar and maintain chain tension.
9. **Final Check:** Manually rotate the chain to ensure it moves smoothly without binding. Reconnect power and briefly run the chainsaw to confirm proper operation and re-check tension after a short run.



Figure 2: Detailed view of the UpStart Components chainsaw chain, illustrating the links and cutting teeth. Proper orientation of these teeth is crucial during installation.

OPERATING TIPS

While this product is a replacement chain, its proper function is integral to chainsaw operation. Adhere to your chainsaw's operating manual for safe and effective use.

- **Maintain Proper Chain Tension:** Check chain tension frequently, especially during initial use and as the chain warms up. A properly tensioned chain will not sag but can still be pulled around the bar by hand.
- **Ensure Adequate Lubrication:** Always ensure your chainsaw's oil reservoir is filled with appropriate bar and chain oil. Proper lubrication is vital for chain longevity and performance.
- **Avoid Contact with Obstacles:** Do not allow the chain to come into contact with dirt, rocks, metal, or other hard objects, as this will dull or damage the chain quickly.

MAINTENANCE

Regular maintenance extends the life of your chainsaw chain and ensures safe operation.

- **Cleaning:** After each use, clean debris, sawdust, and resin from the chain and guide bar.
- **Sharpening:** A sharp chain is crucial for safe and efficient cutting. Sharpen the chain regularly using appropriate tools and techniques, or have it professionally sharpened. Replace the chain if teeth are severely damaged or worn beyond sharpening.
- **Storage:** When not in use, store the chain in a clean, dry place. Applying a light coat of oil can prevent rust during long-term storage.
- **Inspection:** Periodically inspect the chain for bent, cracked, or broken links, and for excessive wear on the drive links. Replace the chain if any significant damage is observed.

TROUBLESHOOTING

Common issues related to chainsaw chains and their potential solutions.

Problem	Possible Cause	Solution
Chain not cutting efficiently or binding	Dull chain, improper chain tension, insufficient lubrication, incorrect chain type.	Sharpen chain, adjust tension, check oil reservoir and oiler, verify chain specifications.
Chain comes off the bar	Loose chain tension, worn guide bar, damaged drive links.	Adjust chain tension, inspect and replace guide bar if worn, replace damaged chain.
Excessive smoke from chain	Lack of lubrication, dull chain, improper tension.	Check oiler and reservoir, sharpen chain, adjust tension.

SPECIFICATIONS

Key specifications for the UpStart Components 16-Inch Chainsaw Chain Replacement.

Attribute	Value
Brand	UpStart Components
Model Number	CSC-D60-6PK-DL181
Chain Length	16 Inches
Pitch	3/8" Low Profile
Gauge	.050"
Drive Links	60
Compatibility	Mastercraft 54-5671 (verify specifications)

WARRANTY AND SUPPORT

This UpStart Components product is a replacement part. Any warranties for this product are offered solely by Upstart Battery, not by the original equipment manufacturers (OEMs). This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For warranty claims or product support, please contact Upstart Battery directly. Contact information can typically be found on their official website or through your purchase documentation.

© 2023 UpStart Components. All rights reserved.

Disclaimer: All brand names and logos are registered trademarks of their respective owners. Mentions of brand names or model descriptions are made strictly to illustrate compatibility.