Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Tracer /
- > Tracer Roadster 4 in 1 Steering Wheel User Manual

Tracer TRAJOY46524

Tracer Roadster 4 in 1 Steering Wheel User Manual

Model: TRAJOY46524

INTRODUCTION

Thank you for choosing the Tracer Roadster 4 in 1 Steering Wheel. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new racing wheel. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

The Tracer Roadster 4 in 1 Steering Wheel is designed for an immersive gaming experience, compatible with various platforms including PlayStation 4 and Windows PC. It features a responsive steering wheel, integrated shifter, and a pedal set for realistic control.

PACKAGE CONTENTS

- Tracer Roadster 4 in 1 Steering Wheel
- Pedal Set
- User Manual (this document)

SETUP GUIDE

Connecting to PlayStation 4 (PS4)

- 1. Connect the steering wheel's USB cable to an available USB port on your PS4 console.
- 2. Power on your PS4 console. The red LED on the steering wheel will illuminate, indicating power.
- 3. Connect the steering wheel to your PS4 controller using a microUSB cable (not included). This step is crucial for authentication.
- 4. Press the **HOME** button on the steering wheel. The green LED will illuminate, indicating successful connection and readiness for use.

Connecting to PC (Windows)

- 1. Connect the steering wheel's USB cable to an available USB port on your Windows PC.
- 2. The system should automatically detect and install the necessary drivers. If not, please refer to the manufacturer's website for driver downloads.
- 3. Once drivers are installed, the steering wheel will be ready for use with compatible PC racing games.



Figure 1: The Tracer Roadster 4 in 1 Steering Wheel, including the main wheel unit, integrated shifter, and separate pedal set. This image shows the complete setup ready for connection.

OPERATING INSTRUCTIONS

Steering Wheel Controls

The steering wheel features a full range of motion for precise control in racing games. It includes various buttons and a D-pad for in-game navigation and actions, mimicking a standard game controller layout.

- Directional Pad (D-Pad): For menu navigation and specific in-game controls.
- Action Buttons (X, Circle, Square, Triangle / A, B, X, Y): Standard gaming action buttons.
- L1/R1, L2/R2 Buttons: Shoulder buttons, often used for shifting gears or other actions.
- HOME Button: PS4 system menu access.
- PROG Button: For programming specific functions (refer to game-specific instructions).

• Touchpad: Integrated touchpad for additional control options, especially on PS4.



Figure 2: A detailed view of the central control panel on the steering wheel, showing the various buttons, D-pad, and indicator lights. The integrated shifter is visible to the right.

Pedal Set

The separate pedal set includes an accelerator and brake pedal for realistic driving simulation. Ensure the pedal set is placed on a stable surface to prevent slipping during intense gameplay.



Figure 3: The standalone pedal unit, featuring both accelerator and brake pedals. The textured base provides grip to prevent movement during use.

MAINTENANCE AND CARE

- Cleaning: Use a soft, dry cloth to clean the surface of the steering wheel and pedals. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components.
- Storage: When not in use, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid Liquids: Do not expose the device to water or other liquids.
- Handle with Care: Avoid dropping or subjecting the device to strong impacts.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Steering wheel not recognized by PS4. | Incorrect connection or authentication issue. | Ensure the steering wheel's USB cable is securely connected to the PS4. Verify the microUSB cable connection between the steering wheel and the PS4 controller. Press the HOME button on the steering wheel. |
| No response from steering wheel on PC. | Drivers not installed or USB port issue. | Try a different USB port. Check Device Manager for driver status. Reinstall drivers if necessary from the manufacturer's website. |
| LED indicators not lighting up. | No power or connection issue. | Ensure the USB cable is firmly connected to the console/PC. Check if the console/PC is powered on. |
| Pedals not responding. | Loose connection to the steering wheel. | Verify that the pedal unit's cable is securely plugged into the steering wheel base. |

SPECIFICATIONS

| Feature | Detail |
|---------|--------|
|---------|--------|

| Feature | Detail |
|--------------------------------|--|
| Brand | Tracer |
| Model Name | Roadster 4 in 1 |
| Model Number | TRAJOY46524 |
| Connectivity Technology | USB |
| Compatible Devices | PlayStation 4, Windows PC |
| Controller Type | Steering Wheel |
| Color | Black |
| Special Feature | Touchpad |
| Number of Buttons | 8 (excluding D-pad and shifter controls) |
| Item Weight | 2 Kilograms |
| Product Dimensions (L x W x H) | 2.8 x 24.6 x 16.5 cm |


WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Tracer website or contact your retailer. Keep your proof of purchase for any warranty claims.


For further assistance, you may visit the product page on Amazon.com.be.

© 2024 Tracer. All rights reserved.

Related Documents - TRAJOY46524

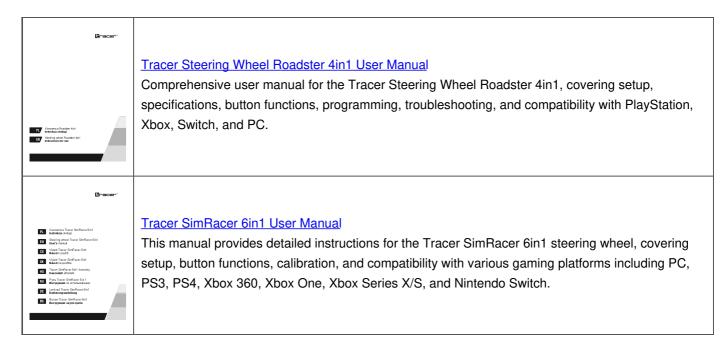



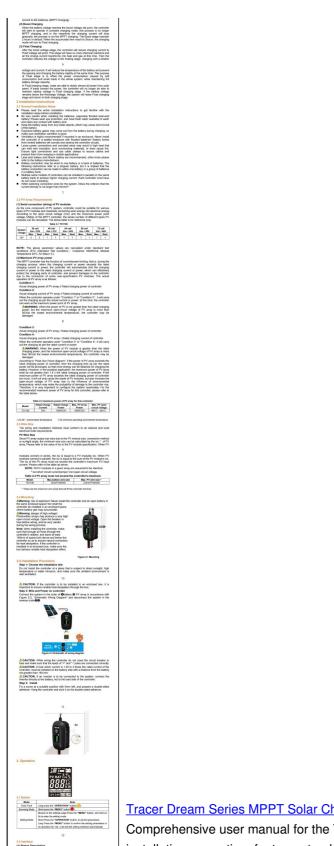

Tracer Dream Series MPPT Solar Charge Controller User Manual

Comprehensive user manual for the Tracer Dream Series MPPT Solar Charge Controller, detailing installation, operation, features, troubleshooting, and technical specifications for efficient solar battery charging.







Tracer Stripe TWS Bluetooth Speaker User Manual

Comprehensive user manual for the Tracer Stripe TWS Bluetooth speaker, covering setup, modes (Bluetooth, TF, USB, AUX, FM Radio), TWS pairing, light effects, safety guidelines, and technical specifications.