

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beetel](#) /
- › [Beetel X91 2.4 GHz Digital Cordless Phone User Manual](#)

Beetel X91

Beetel X91 2.4 GHz Digital Cordless Phone User Manual

Model: X91

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Beetel X91 2.4 GHz Digital Cordless Phone. Please read this manual thoroughly before using your new phone to ensure proper functionality and to maximize its features.

2. PRODUCT OVERVIEW

The Beetel X91 is a 2.4 GHz digital cordless phone designed for clear communication and convenience. It features Caller ID, a phonebook, a two-way speakerphone, and multiple ringtone options.



Figure 2.1: Beetel X91 Cordless Phone Handset and Base Unit. The image displays the black cordless handset securely placed on its charging base, showcasing the display screen and keypad.

Package Contents:

- Cordless Handset
- Base Unit

- Telephone Line Cord
- Power Adapter
- User Manual (this document)
- Rechargeable Lithium Ion Battery

Handset Features:

- **Display Screen:** 1.4-inch LCD for caller ID, menu navigation, and status indicators.
- **Keypad:** Standard numeric keys (0-9), navigation keys, call/end keys, speakerphone key, and menu access.
- **Speakerphone:** Integrated two-way speakerphone for hands-free conversations.
- **Volume Control:** Dedicated buttons for adjusting call volume.
- **Phonebook:** Stores up to 100 contacts with names.
- **Ringtones:** 20 monophonic and polyphonic ringtone options.

3. SETUP

3.1. Unpacking and Battery Installation

1. Carefully remove all components from the packaging.
2. Locate the battery compartment on the back of the handset.
3. Insert the provided rechargeable battery, ensuring correct polarity.
4. Close the battery compartment cover.

3.2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE port on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Connect the power adapter to the DC IN port on the base unit.
4. Plug the power adapter into a standard electrical outlet.



Figure 3.1: Beetel X91 Handset and Base Unit. The image shows the cordless handset detached from its base, with the base unit

positioned beside it, illustrating the separate components.

3.3. Initial Charging

Place the handset on the base unit. The handset will begin charging. For optimal battery performance, allow the handset to charge continuously for at least 12-15 hours before its first use, even if the display indicates a full charge sooner.

4. OPERATING INSTRUCTIONS

4.1. Making a Call

1. Lift the handset from the base or press the **CALL** button.
2. Dial the desired phone number using the keypad.
3. Press the **CALL** button again to initiate the call.
4. To end the call, press the **END** button or place the handset back on the base.

4.2. Receiving a Call

When the phone rings, lift the handset from the base or press the **CALL** button to answer.

4.3. Using the Speakerphone

During a call, press the **SPEAKER** button to activate the two-way speakerphone function. Press it again to switch back to handset mode.

4.4. Adjusting Volume

During a call, use the **VOL ▲** and **VOL ▼** buttons on the handset to adjust the earpiece or speakerphone volume.

4.5. Phonebook

The phonebook allows you to store up to 100 names and numbers.

Adding a Contact:

1. Press the **MENU** button.
2. Navigate to "Phonebook" and select "Add New".
3. Enter the name using the keypad (refer to the keypad for character input).
4. Enter the phone number.
5. Save the entry.

Dialing from Phonebook:

1. Press the **PHONEBOOK** button (or navigate via MENU).
2. Scroll through the contacts using the navigation keys.
3. Press the **CALL** button to dial the selected contact.

4.6. Caller ID

When a call is received, the caller's number and name (if stored in the phonebook) will be displayed on the handset screen, provided you have subscribed to Caller ID service from your telephone service provider.

4.7. Ringtones

You can select from 20 monophonic and polyphonic ringtones. Access the ringtone settings through the **MENU** to customize your preference.

4.8. Event Reminder & Clock Screensaver

The phone includes an event reminder function, accessible via the menu, to set alarms or reminders. A clock screensaver can also be enabled to display the time when the handset is idle.

5. MAINTENANCE

5.1. Cleaning

Wipe the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is disconnected from power before cleaning.

5.2. Battery Care

- Always use the original rechargeable battery provided with the phone.
- If the phone will not be used for an extended period, remove the battery to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

If you experience issues with your Beetel X91 phone, please refer to the following common problems and solutions:

Problem	Possible Solution
No dial tone	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the power adapter is properly connected and plugged into a working outlet. Verify that your telephone service is active.
Handset not charging	Ensure the handset is correctly placed on the base unit. Clean the charging contacts on both the handset and base unit with a dry cloth. Check the power adapter connection to the base unit and outlet.
Poor call quality / Static	Move closer to the base unit. Ensure the base unit is not placed near other electronic devices that may cause interference (e.g., Wi-Fi routers, microwaves). Check the telephone line cord for damage.
Caller ID not displayed	Confirm that you have subscribed to Caller ID service from your telephone service provider. Ensure the phone is connected to a compatible landline network.

7. SPECIFICATIONS

Feature	Detail
Model	X91
Brand	Beetel
Frequency	2.4 GHz Digital
Display Type	LCD

Feature	Detail
Screen Size	1.4 Inches
Phonebook Capacity	100 Entries
Ringtones	20 Monophonic & Polyphonic
Battery Type	Rechargeable Lithium Ion
Power Source	Battery Powered (with AC adapter for base)
Dimensions (Handset & Base)	19 x 9.9 x 10.6 cm
Item Weight	300 g
Material	Plastic
Compatible Devices	Standard Landline Networks, Some VoIP Services

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The Beetel X91 Cordless Phone comes with a **1-year manufacturer warranty** for the device from the date of purchase. In-box accessories, including batteries, are covered by a **6-month manufacturer warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.

8.2. Customer Support

For technical assistance, service, or warranty claims, please contact Beetel customer support. Refer to the contact information provided on the product packaging or the official Beetel website.

© 2023 Beetel. All rights reserved.

Information in this manual is subject to change without notice.