

Junkers HYDRONEXT 5600 S WTD12-3 AME

Junkers HYDRONEXT 5600 S WTD12-3 AME Butane Gas Water Heater User Manual

Model: HYDRONEXT 5600 S WTD12-3 AME

Introduction	Safety Information	Product Overview	Setup & Installation	Operation	Maintenance
	Troubleshooting	Specifications	Warranty & Support		

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Junkers HYDRONEXT 5600 S WTD12-3 AME Butane Gas Water Heater. Please read these instructions carefully before installation, use, or maintenance. Proper installation and regular maintenance are crucial for the longevity and safe performance of the appliance.

2. SAFETY INFORMATION

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- Installation and servicing must be performed by a qualified and authorized gas technician in accordance with all local and national regulations.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Ensure adequate ventilation in the area where the water heater is installed.
- Never obstruct the air inlets or outlets of the appliance.
- If you smell gas, immediately shut off the gas supply, open windows, and evacuate the premises. Do not operate electrical switches or phones. Contact your gas supplier or a qualified technician from a safe location.
- Keep children away from the appliance.

3. PRODUCT OVERVIEW

The Junkers HYDRONEXT 5600 S WTD12-3 AME is a compact and efficient butane gas water heater designed to

provide instant hot water. Its thermostatic temperature control allows precise selection of the desired water temperature, optimizing energy consumption and ensuring comfort.



Figure 1: Front view of the Junkers HYDRONEXT 5600 S WTD12-3 AME Butane Gas Water Heater, showing the digital display and control knob.

Key Features:

- **Thermostatic Control:** Allows precise temperature setting for optimal comfort and energy saving.
- **Compact Design:** Space-saving dimensions for flexible installation.
- **High Efficiency:** Designed for economical operation.
- **Butane Gas Operation:** Specifically designed for butane gas supply.

4. SETUP & INSTALLATION

IMPORTANT: Installation must be carried out by a qualified and certified gas technician. Failure to comply may void the warranty and pose serious safety risks.

Installation Requirements:

- **Location:** Choose a location with adequate ventilation and protection from freezing temperatures.
- **Dimensions:** Ensure sufficient space for the appliance and for maintenance access. The unit dimensions are 575 mm (height) x 335 mm (width) x 180 mm (depth).
- **Flue System:** The appliance requires a proper flue system for exhaust gas evacuation. The maximum vertical evacuation length is 4 meters, and the maximum horizontal evacuation length is 4 meters. A flue pipe with a diameter of 80/110 mm is included.
- **Gas Supply:** Connect to a butane gas supply in accordance with local regulations.
- **Water Connections:** Connect to the cold water inlet and hot water outlet.



Figure 2: Junkers HYDRONEXT 5600 S WTD12-3 AME water heater shown with the included horizontal flue kit,

After installation, the technician should perform a leak test and verify proper operation of the appliance and all safety devices.

5. OPERATING INSTRUCTIONS

Turning On the Appliance:

1. Ensure the gas supply valve is open.
2. Ensure the water supply valves are open.
3. The appliance will typically ignite automatically when a hot water tap is opened.

Setting the Water Temperature:

The HYDRONEXT 5600 S features thermostatic control for precise temperature adjustment. Use the control knob or digital interface on the front panel to select your desired hot water temperature. The appliance will modulate its operation to maintain this temperature, providing consistent comfort and optimizing gas consumption.

Turning Off the Appliance:

To turn off the appliance for an extended period or for maintenance, close the main gas supply valve to the unit and the water inlet valve.

6. MAINTENANCE

WARNING: All maintenance and service work must be performed by a qualified and authorized gas technician.

Annual Inspection:

It is highly recommended to have your Junkers HYDRONEXT 5600 S water heater inspected annually by a qualified technician. This inspection should include:

- Checking the gas connections for leaks.
- Inspecting the flue system for blockages or damage.
- Cleaning the burner and heat exchanger.
- Verifying the proper operation of all safety devices.
- Checking water pressure and flow.

User Maintenance:

Beyond professional annual checks, users should:

- Keep the area around the water heater clear of obstructions and flammable materials.
- Periodically wipe down the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners.

7. TROUBLESHOOTING

If your water heater is not functioning correctly, consult the following basic troubleshooting guide. For complex issues or gas-related problems, always contact a qualified technician.

Common Issues:

- **No Hot Water:**
 - Check if the gas supply valve is open.
 - Ensure water supply valves are open.
 - Verify that the appliance is receiving power (if applicable for electronic ignition).
 - Check for any error codes displayed on the unit.
- **Insufficient Hot Water:**
 - Ensure the temperature setting is appropriate.
 - Check for adequate water flow.
- **Error Codes (e.g., 'EC'):**
 - Refer to the detailed error code list in the full technical manual (if available) or contact a qualified technician. Error codes often indicate specific operational faults that require professional diagnosis.
- **Unusual Noises or Odors:**
 - Immediately shut off the gas supply and contact a qualified technician. Do not attempt to operate the unit.

If you suspect a gas leak or any serious malfunction, immediately turn off the gas supply and contact emergency services or a qualified technician.

8. SPECIFICATIONS

Feature	Specification
Model	HYDRONEXT 5600 S WTD12-3 AME
Fuel Type	Butane Gas
Dimensions (H x W x D)	575 mm x 335 mm x 180 mm
Energy Efficiency Class (A.C.S.)	A
Max. Vertical Flue Length	4 m
Max. Horizontal Flue Length	4 m
Flue Pipe Diameter	80/110 mm (included)
Manufacturer	ROBERT BOSCH
Package Dimensions	110.01 cm x 40.01 cm x 37.01 cm
ASIN	B0813WF9R8
First Available Date	January 30, 2020

9. WARRANTY & SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Junkers products typically come with a manufacturer's warranty covering defects in materials and workmanship.

Customer Support:

If you require technical assistance, service, or have questions regarding your Junkers HYDRONEXT 5600 S water heater, please contact Junkers customer support or an authorized service center. Contact details can usually be found on the Junkers official website or in your purchase documentation.

Always ensure that any service or repair work is carried out by a qualified and authorized technician to maintain safety and warranty validity.

© 2023 Junkers. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question