

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Andis](#) /

› [Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer User Manual](#)

## Andis 12470

# Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer User Manual

Model: 12470

Brand: Andis

## INTRODUCTION

The Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer is designed for precise hair and beard grooming. This versatile tool offers both corded and cordless operation, powered by a robust lithium-ion battery. Its adjustable carbon-steel blade ensures smooth and efficient cutting for various styles.





Image: The Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer, showcasing its sleek chrome design.

## SAFETY INFORMATION

**WARNING:**

- Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or who are invalid.
- To reduce the risk of burns, fire, electric shock, or injury to persons, always follow basic safety precautions.

## PACKAGE CONTENTS

Your Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer package includes:

- Andis 12470 Professional Master Corded/Cordless Hair & Beard Trimmer
- Charging Stand
- Charging Adapter
- Blade Cleaning Brush
- Blade Oil



Image: The Andis 12470 trimmer along with its charging stand, power adapter, blade cleaning brush, and blade oil.

## SETUP

### Initial Charging

1. Connect the charging adapter to the charging stand.
2. Plug the adapter into a suitable electrical outlet (120-240V, 50/60Hz).
3. Place the trimmer onto the charging stand. The LED light on the trimmer will indicate charging status.
4. Allow the trimmer to charge for approximately 1 hour for a full charge, providing over 90 minutes of non-stop run time.



Image: The Andis 12470 trimmer securely placed on its charging stand, ready for use or charging.

## OPERATING INSTRUCTIONS

### Powering On/Off

- To turn the trimmer ON, slide the power switch located on the side of the unit.
- To turn the trimmer OFF, slide the power switch back to its original position.

### Adjusting the Blade

- The carbon-steel blade is adjustable from fine to coarse (size 000 to 1).

- Use the lever on the side of the trimmer to adjust the blade length. Moving the lever up or down will change the cutting length.
- The blade can be zero-gapped for extremely close cutting.



Image: A hand demonstrating the use of the adjustable blade lever on the side of the Andis 12470 trimmer.

### **Corded/Cordless Operation**

- The trimmer can be used cordlessly after a full charge.
- For continuous power or if the battery is low, connect the charging adapter directly to the trimmer for corded operation.

## **MAINTENANCE**

---

### **Blade Cleaning**

- After each use, turn off the trimmer and use the provided cleaning brush to remove any hair clippings from the blades.

### **Blade Oiling**

- Regularly apply a few drops of the provided blade oil to the teeth of the blades. This helps maintain cutting performance and extends blade life.
- Turn the trimmer on for a few seconds after oiling to distribute the oil evenly.

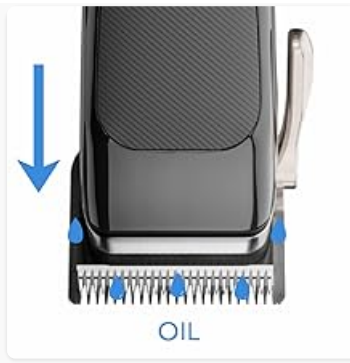


Image: A visual guide demonstrating the correct application of oil to the clipper blades for optimal maintenance.

## FEATURES

- **Quality Trimmers:** Features overlap blades for crisp, clean lines and sharp edges, suitable for hair, beard, sideburns, and mustache.
- **Cord/Cordless Operation:** Offers flexibility with consistent power, whether corded or cordless, with blade speeds over 7,200 SPM.
- **Adjustable Blades:** Carbon-steel blade adjusts from fine to coarse (000 to 1), providing smooth trimming.
- **Long Performance:** Lithium-ion battery delivers over 90 minutes of non-stop run time on a 1-hour charge.
- **Durable Design:** Unbreakable, lightweight aluminum housing for dependable use.

## SPECIFICATIONS

Feature	Detail
Model Number	12470
Brand	Andis
Power Source	Battery Powered (Lithium-Ion)
Battery Life	Over 90 minutes run time
Charge Time	1 hour
Blade Type	Carbon-steel, adjustable (000 to 1)
Motor Speed	Over 7,200 SPM (strokes per minute)
Weight	2 Pounds
Dimensions	3.25 x 5 x 9.8 inches
Color	Chrome, Silver

## TROUBLESHOOTING

If you experience any issues with your Andis 12470 trimmer, please ensure it is fully charged and properly cleaned. If problems persist, refer to the official Andis support resources or contact customer service for assistance.

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official Andis website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.



© 2026 Andis. All rights reserved.  
For more information, visit [www.andis.com](http://www.andis.com)